
CAUTIONS ON TRAVELING ON SLOPES


⚠ WARNING

- Never travel on slopes that are too steep for the machine to maintain its stability. (maximum gradeability: 30°, lateral tipping angle: 15°) Note that in reality, the machine's stability becomes lower than the above values depending on the working condition.
- When traveling on slopes, lower the bucket to a height of 20 to 30 cm (8 to 12 in.) above the ground. When climbing a steep slope, extend the hoe attachment to the front. In emergencies, lower the bucket to the ground and stop the machine.
- When traveling on slopes or grades, drive slowly in 1st (low) speed.
- When climbing a hill, keep the operator's seat facing the hillside. When descending a hill, keep the operator's seat facing the downhill direction. In either case, travel must be done while paying attention to the ground in front of the machine.
- Do not descend slopes in reverse.

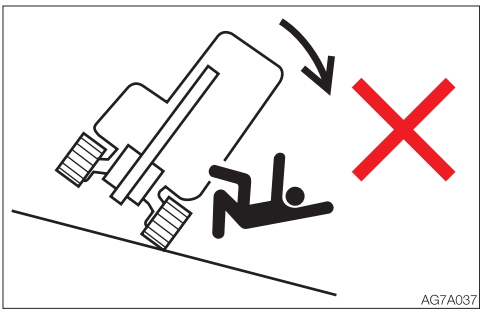


- Do not change directions on slopes or traverse slopes. First return to a flat surface, and then take an alternative path.
- The machine may slip sideways even on a slight slope if they are covered with grass or dead leaves, or when traveling on a wet metal plate or frozen surfaces. Do not allow the machine to position sideways to slopes.

Traveling posture on slopes
Climbing slopes

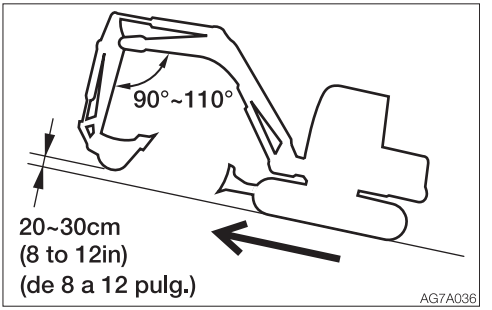


When climbing slopes of 15° or more, maintain the machine posture as shown in the figure above.

Descending slopes

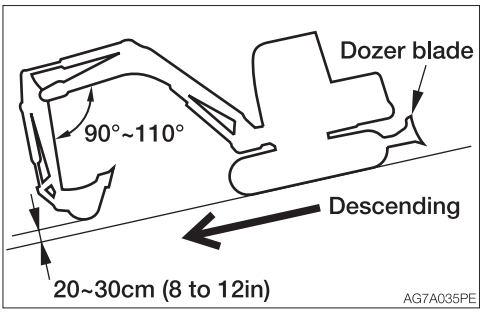


When descending slopes of 15° or more, slow down the engine speed and maintain the machine posture as shown in the figure above.

Braking when descending slopes

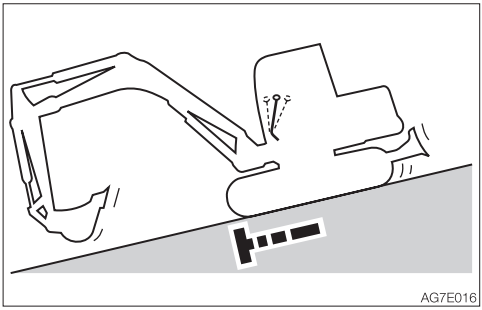


When descending slopes, the brakes are applied automatically once the travel levers are returned to the neutral position.

If the crawler slips

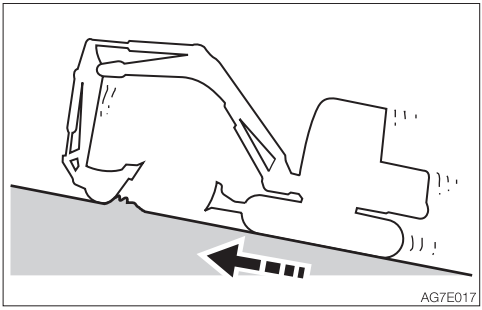

If the crawler slips while climbing a slope and impossible to travel, use the pulling force of the arm to climb the slope.

If the engine stops

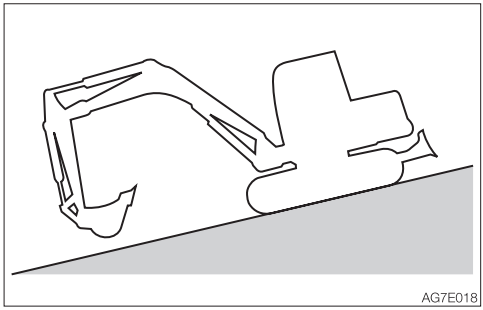

If the engine stops when descending a slope, set the travel levers to the neutral position, stop the machine, then start the engine.

Do not open the door while traveling on slopes




Opening the door while traveling on slopes is dangerous, as the force required to open and close the door changes abruptly. Always keep the door closed when traveling on slopes.

GETTING OUT OF MUD


If the machine gets stuck in mud, use the procedure below to get it out.

If one crawler is stuck

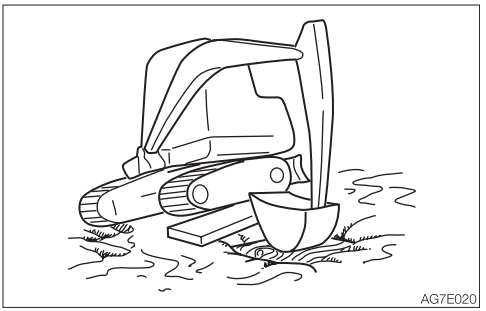

1. Swing the bucket to the side of the crawler being stuck.
2. Set the arm and boom to an angle of 90 to 110°.
3. Press the bottom of the bucket (not the teeth) against the ground.
4. Place a plank or the like under the lifted crawler.
5. Lift the bucket and slowly move the machine out of the mud.


If both crawlers are stuck

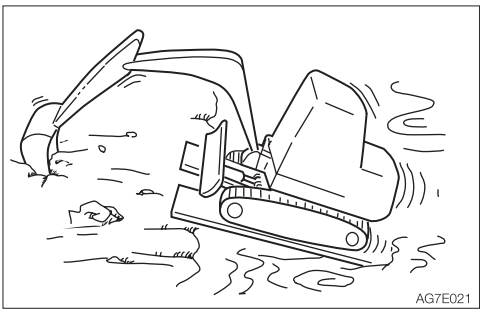

1. Perform the steps 1 to 4 above for both crawlers.
2. Dig the bucket into the ground in front of the machine.
3. Pull with the arm while traveling forward to slowly move the machine out.


OPERATIONS POSSIBLE WITH THIS MACHINE

Excavating

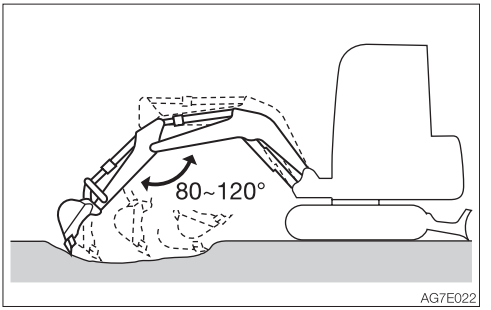


1. Set the dozer blade on the side opposite to the side you want to dig on.
2. Use the arm and bucket and dig with shallow, long strokes. The maximum digging force can be obtained when the boom and arm angle is 80 to 120°. Use this angle for effective digging.

Digging ditches

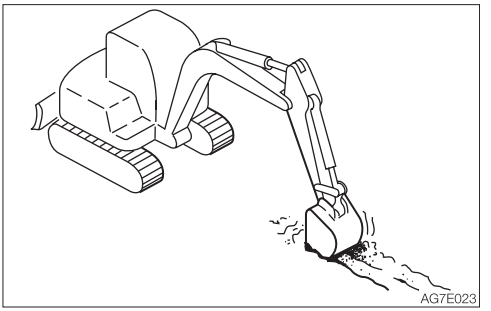


Install a bucket suited for digging ditches and set the crawlers parallel to the ditch to be dug for greater efficiency.
When digging wide ditches, dig the sides first, and then dig the center.

Digging side drains

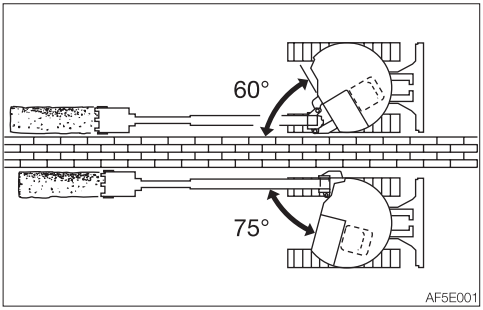


Use the boom offset function to dig side ditches as shown in the figure.

Loading

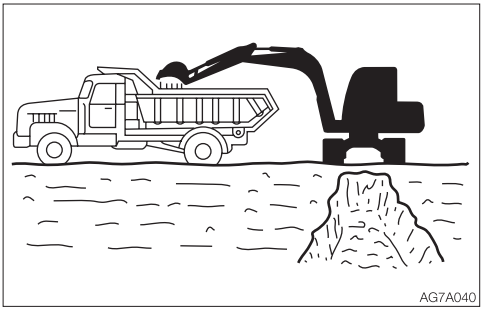

When loading dirt onto a truck bed, load from the back of the truck, as it is easier and able to load more load than doing it from the front.
Also, use a small slewing angle for greater efficiency.

Leveling

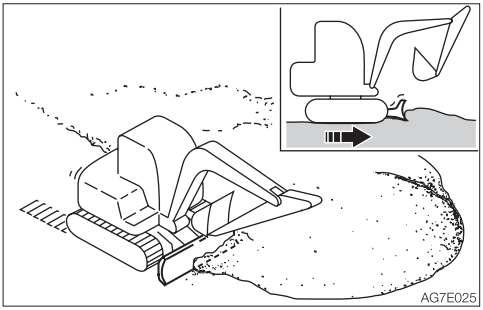


1. Bring the hoe attachment close to the body.
2. Gradually remove the dirt from the side of the mound.
3. Once the mound is low, remove the dirt from the top. If the load becomes too heavy for the machine body, adjust by raising or lowering the dozer blade.


PARKING THE MACHINE

PARKING

⚠ WARNING

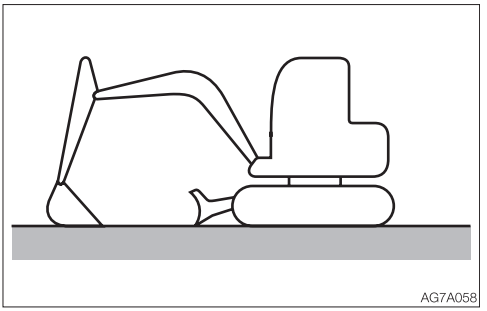

- **Park the machine on a flat, rigid and safe ground. Set the parking brake.**

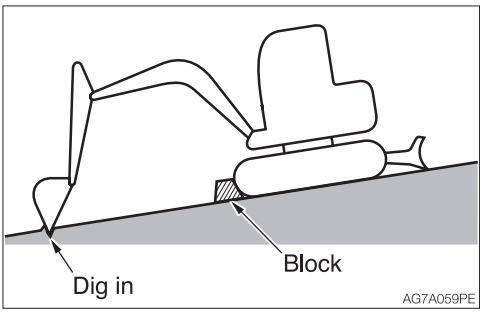

If you must park on a slope or incline, park the machine securely and block the movement of the machine.

- **When parking on a street, use barriers, caution signs, lights, etc., so that the machine can easily be seen even at night to avoid collision with other vehicles.**
- **Before leaving the operator's seat, raise the safety lock lever to engage the lock and stop the engine. Also, be sure to remove the key, lock the door and covers, take it with you and store it in a specified place.**


1. Set the left and right travel levers to the neutral position.
2. Return the throttle controller to set the engine to low idling.
3. Lower the bucket and the dozer blade to the ground.
4. Raise the safety lock lever to the locked position.
5. Stop the engine and remove the key.
   Refer to "Stopping the engine" on page 3-7.
   For machines equipped with accumulator: Refer to "Operating the machine with an accumulator" on page 2-79.

INSPECTION AND CHECKS AFTER STOPPING THE ENGINE

1. Check for oil or water leak and inspect the working equipment, covers and undercarriage. If any irregularities are found, repair.
2. Fill up the fuel tank.
   Refer to "Inspecting the fuel level" on page 5-20.
3. Remove any paper scraps or dirt from the engine room.
4. Remove any mud from the undercarriage.

Locking

Be sure to lock the following places:

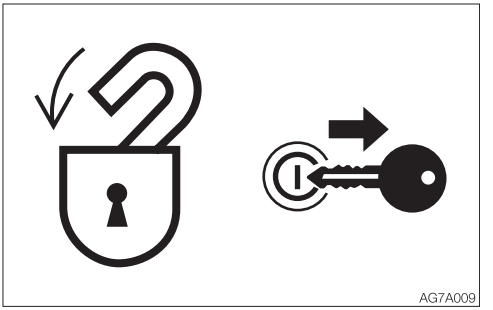

- Cab door
- Engine hood
- Covers

HANDLING IN COLD CLIMATES

PREPARING FOR COLD CLIMATES

Starting engine in cold climates is not easy, and it becomes more difficult if the coolant freezes. Prepare for cold-climate problems as follows.

Replacing the fuel and lubricant
Replace the hydraulic oil, engine oil and fuel with those intended for cold climates.
Refer to “Fuel and lubricant table” on page 5-4.

Engine coolant

⚠ WARNING

The engine coolant is combustible. Keep away from flame.
Use long-life coolant (antifreeze) and tap water for the engine coolant.

Note: New machines are delivered with JIS Type 2 long-life coolant (antifreeze) at a concentration of 50%.
Refer to “Fuel and lubricant table” on page 5-4.

Battery
As the temperature drops, the battery performance decreases.
Inspect the battery. If it is discharging, contact a Takeuchi service agent to have the battery recharged.
Refer to “Inspecting the battery fluid level and replenishing” on page 5-30.

CAUTIONS AFTER OPERATIONS

Observe the following cautions to prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move.

- Remove all mud and water from the machine body. In particular, wipe the hydraulic cylinder rod clean to prevent damage to the seal caused by mud or dirt on the rod surface getting inside the seal together with drops of water.
- Park the machine on hard and dry ground. If this is impossible, park the machine on a wooden board placed on ground.
- Drain any water in the fuel tank to prevent it from freezing.
  Refer to “Draining the water from the fuel tank” on page 5-29.
- As the battery capacity drops markedly in low temperatures, cover the battery or remove it from the machine and keep it in a warm place.
  If the electrolyte level is low, add distilled water in the morning before beginning work. To prevent the battery electrolyte from freezing in the night, do not add water after the day’s work.

AFTER THE COLD CLIMATE

When the climate becomes warmer, do as follows:


- Replace the fuel and oil for all parts with those specified in the “Fuel and lubricant table”.
  Refer to “Fuel and lubricant table” on page 5-4.
- If a coolant of “one season type” is used, drain the cooling system completely, clean out the inside of the cooling system thoroughly, and fill with tap water.
  Refer to “Cleaning the engine cooling system” on page 5-50.

HANDLING RUBBER CRAWLERS


Rubber crawlers have an inherent weakness, lack of strength, due to their use of rubber. Be sure to observe the prohibitions and cautions below to prevent the crawlers from being damaged or coming off.

PROHIBITIONS


Do not travel or operate the machine in the following places:

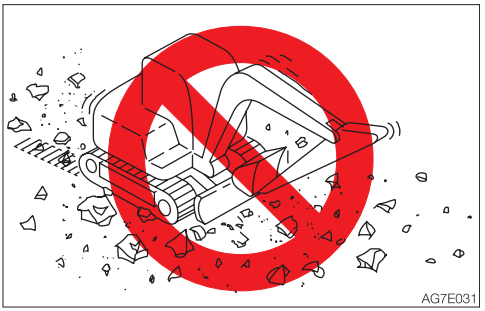

- Traveling and slewing on crushed rock, extremely rough hard rock, steel beams, scrap iron, or near the edges of steel plates will cause damage to the rubber crawlers.

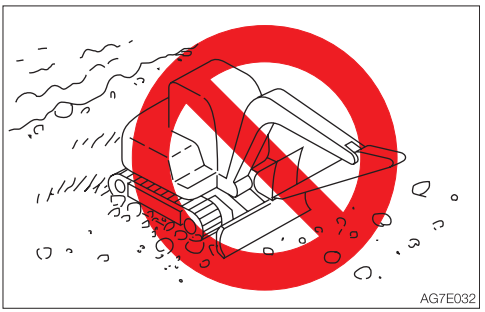

- Traveling on riverbeds or places where there are large numbers of boulders may cause the stones to get caught and damage the crawler or make the crawler come off.
- Do not use the machine on the seashore. The salt may corrode the steel core.

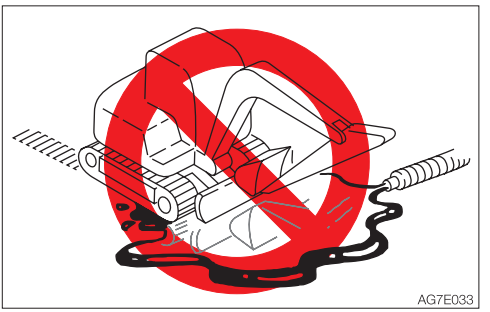


- Do not let fuel, oil, salt or chemical solvents get on the crawlers. These substances may corrode the bonding of the steel cores on the crawlers, resulting in rust or peeling. If any of these substances gets on the crawler, immediately clean it off with water.




- It will cause an irregular wear or damage to the lugs, if the machine travels on irregular surfaces such as recently paved with asphalt, exposed to a bonfire or of hot iron sheets under the blazing sun.
- Do not move earth in places where the rubber crawlers may slip. Doing so may speed up lug wear.

CAUTIONS

Observe the following cautions when operating the machine:

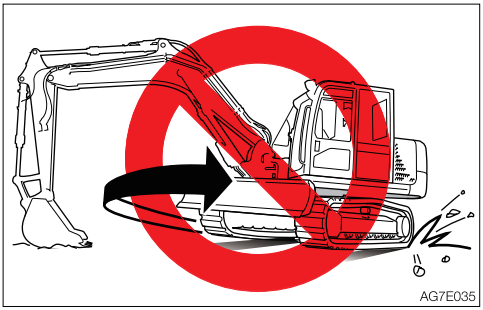
AG7E035

- Do not turn the undercarriage with the front of the machine body lifted using the hoe attachment (the upperstructure is not turned). Doing so will twist the crawlers with the load concentrated on a single point on the crawler belt, causing rapid damage to the crawlers.
- Avoid changing course abruptly or spin-turning on concrete surfaces whenever possible. Doing so may wear or damage the rubber crawlers.
- Avoid drops that may expose the rubber crawlers to strong shocks.
- Salt, potassium chloride, ammonium sulfate, potassium sulfate, and triple superphosphate of lime can damage the crawler belts. If any of these substances gets on the crawler belts, wash if off thoroughly with water.
- Do not let the sides of the rubber crawlers rub against concrete or walls.
- Do not damage the rubber crawlers by hitting the bucket against them.
- Be especially careful on snowy or frozen surfaces in winter, as the crawler belts tend to slip in such conditions.
- Use rubber crawler belts at temperatures between –25°C to +55°C (–14°F to 131°F).
- When storing the rubber crawlers for long periods of time (three months or more), do so indoors in a place not exposed to direct sunlight or rain.

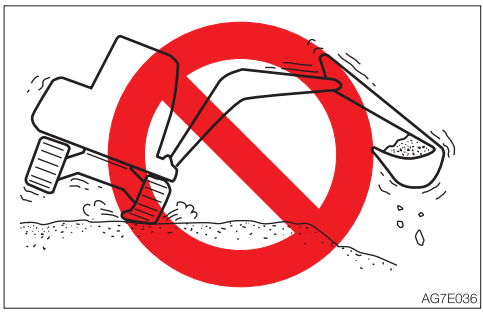

AG7E036

- Rubber crawler belts are not as stable as steel crawler belts since the entire lugs are made of rubber. Be very careful when slewing and swinging sideways.


PREVENTING THE RUBBER CRAWLERS FROM COMING OFF

Observe the following cautions to prevent the crawler from coming off:

- Always keep the crawlers at the proper tension.

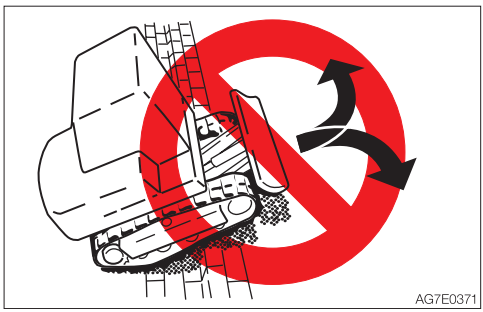
AG7E0371


- When traveling over a large step such as a cobblestone or rock (20 cm (8 in.) or deeper), climb up the step at the right angle and do not change courses on top of the step.

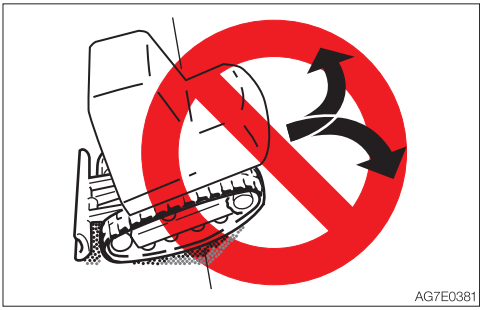


• When climbing in reverse, do not change directions at the point where the slope starts.




• Avoid traveling by setting one crawler on a slope or projecting portion and the other crawler on a flat surface (with the machine at a tilt of 10° or more). Travel with both crawlers set on flat surfaces.

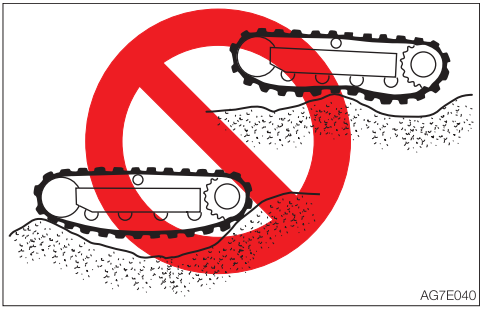


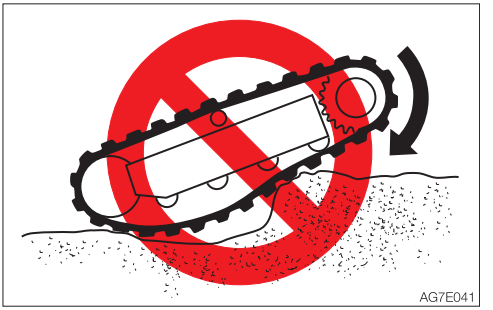

• Do not change directions when the crawler belts are slack as shown in the figure.

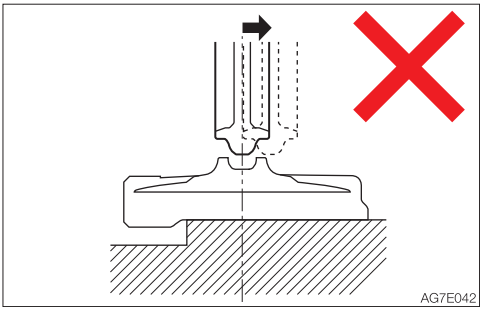

• The rubber crawler belts will come off if the machine travels backward in this condition.

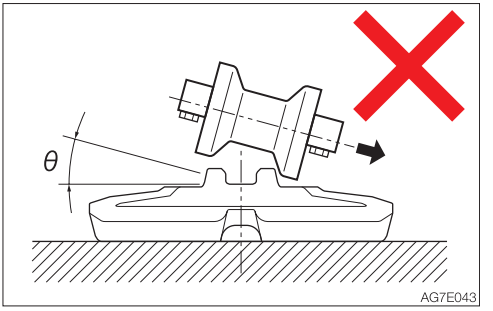

• The rubber crawler belts will come off if the machine turns in this condition.

TRANSPORT




LOADING AND UNLOADING

⚠ WARNING


The machine may roll or tip over or fall while being loaded or unloaded. Take the following precautions:


- **Select a firm, level surface and keep sufficient distance from road shoulders.**
- **Secure the ramps of adequate strength and size to the truck bed. The slope of the ramps must not exceed 15°. If the rumps are bowed down too low, support them with poles or blocks.**
- **Never use the working equipment to load or unload the machine. Doing so may result in tipping over or falling down of the machine.**
- **Keep the truck bed and loading ramps clean of oil, soil, ice, snow, and other materials to prevent the machine from sliding sideways. Clean the crawlers.**
- **Chock the transporter wheels to prevent movement.**
- **Turn off the deceleration switch and auto-deceleration switch. Otherwise, the engine speed may suddenly increase to cause troubles.**
- **When being loaded or unloaded, travel slowly in 1st (low) gear by following the signal from the signal person.**
- **Never change courses on the ramps.**
- **Do not slew/swing on the ramps. The machine may tip over.**
- **When slewing/swinging on the truck bed, do it slowly as the footing should be unstable.**
- **Lock the cab door after being loaded, if applicable. Otherwise, the door may open during transport.**
- **Chock the tracks and secure the machine to the truck bed with wire rope or chain.**

When loading or unloading the machine, be sure to use ramps or a platform and follow the procedure below.

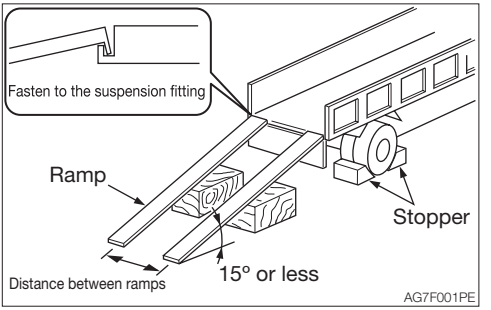

1. Set the parking brake on the transporter and chock the wheels.
2. Fix the ramps securely to the truck bed. The slope of the ramps must not exceed 15°.
3. Align the center of the truck bed with the center of the machine, and of the ramp with the center of the crawler.
4. Make sure the dozer blade does not hit the ramps.
5. Lower the hoe attachment as far as possible without letting it touch the transporter.
6. Decrease the engine speed.

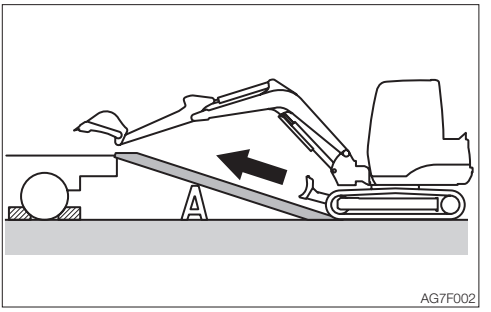

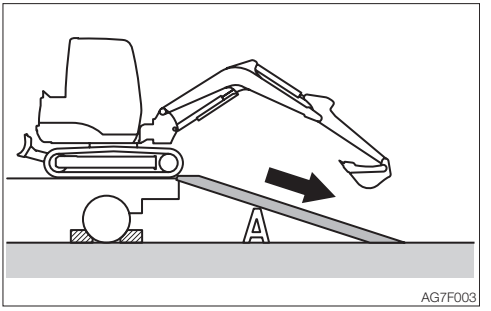

7. Drive the machine straight toward the ramps and travel up or down the ramps at 1st (low) speed, by following the signal from the signal person.
8. Load the machine at the specified position on the transporter.
   Refer to “Transporting posture” on page 4-6.

HOISTING THE MACHINE


⚠ WARNING

- **Know and use the correct crane signals.**
- **Check the hoisting equipment for damaged or missing parts on a daily basis and replace as necessary.**
- **When hoisting, use a wire rope capable of lifting the machine mass.**
- **Hoist the machine in only as manner described in the procedure below. Do not do it in any other manner. Doing so is dangerous as it may result in the machine losing its balance.**
- **Do not hoist the machine with an operator on it.**
- **When hoisting, hoist slowly so that the machine does not tip.**
- **Keep everyone out of the area when hoisting. Do not move the machine over the heads of the persons.**

IMPORTANT: This hoisting method applies to machines with standard specifications. The center of gravity differs according to the attachments and optional equipment installed.
Contact your Takeuchi service agent for details.

Hoisting


1. Slew the upperstructure so that the dozer blade is at the rear of the machine (set the upperstructure parallel to the track frame).
2. Raise the dozer blade fully.
3. Extend the bucket cylinder and arm cylinder fully to raise the boom to its uppermost position.
4. If the boom is offseted to either the left or right side, set it to the neutral position.
5. Raise the safety lock lever to the locked position.
6. Stop the engine, remove the starter key and get off the machine.
7. Install the wire ropes as shown on the figure below. Install the wire ropes and hoisting attachment without letting them touch the machine body.
8. Hoist the machine slowly until it leaves the ground.
9. Stop hoisting until the machine becomes stable, and then start hoisting the machine slowly again.

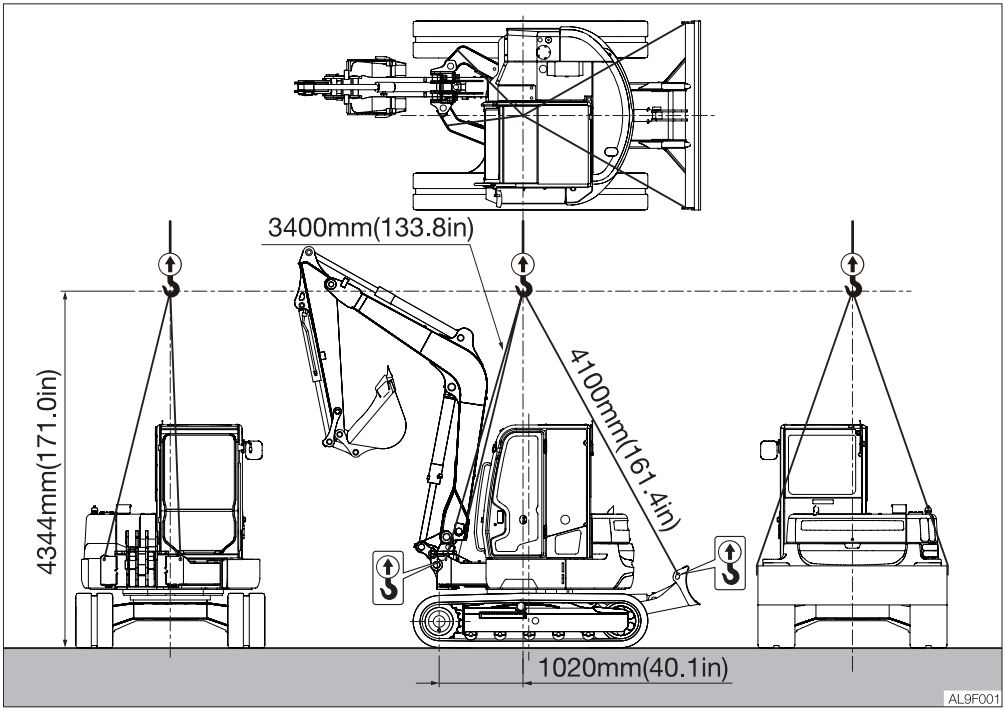
3400mm(133.8in)
4344mm(171.0in)
4100mm(161.4in)
1020mm(40.1in)
AL9F001

SECURING THE MACHINE

After loading the machine at the specified position, secure it as described below.

Transporting posture

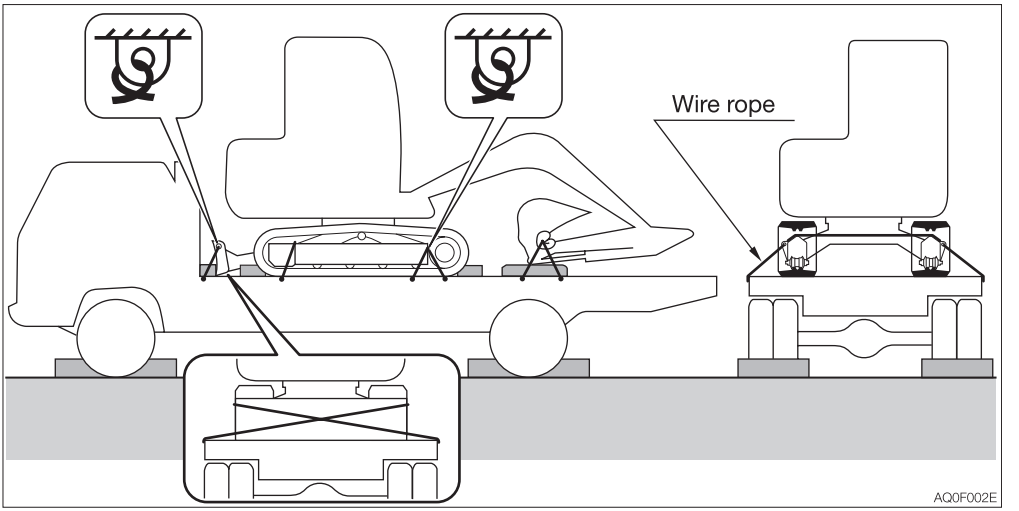

1. Lower the dozer blade.
2. Extend the bucket cylinder and arm cylinder fully, and then lower the boom.
3. Raise the safety lock lever to the locked position.
4. Stop the engine, remove the starter key and lock all locks.
5. Place the stoppers (chocks) in front and behind the crawlers.
6. Install a chain or wire rope over the lower frame of the machine and fasten it securely to prevent the machine from slipping sideways.
7. Secure the bucket with a chain or wire rope.

IMPORTANT: Place a wooden block under the bucket to protect the floor from damage caused by the bucket.

Precautions to be taken during transportation

⚠ WARNING

- **Know and follow the applicable safety rules, vehicle code and traffic laws when transporting the machine.**
- **Select the best transport route by considering the length, width, height and weight of the truck with the machine loaded on it.**
- **Never abruptly start or stop or run at a high speed at the sharp curves during transport. Doing so will move or lose the balance of the loaded machine.**

MAINTENANCE



GENERAL

MAINTENANCE OVERVIEW

To keep the machine in good condition and use if for a long period, perform the inspection and maintenance properly and safely following the procedures recommended by this manual.

The inspection and maintenance items are divided into groups according to the machine's total operating time: every 10 hours (walk-around and daily inspection), every 50 hours, every 250 hours, etc. Refer to the hour meter readings to determine when to schedule an inspection and maintenance. Items for which it is not possible to determine the inspection and maintenance interval are included under "When required".

When operating the machine in extremely harsh environments (with high dust levels or high temperatures), inspection and maintenance should be performed earlier than the times specified on the Maintenance List.

CAUTIONS ON MAINTENANCE

Do not perform any other inspection and maintenance works than those listed in this manual.
For works not listed in this manual, ask your sales or a service dealer for help.

Keep the machine clean
- Clean the machine before performing inspection and maintenance and try to keep it clean.
- Stop the engine before washing the machine. Cover the electrical parts so that water cannot enter. Water on electrical parts could cause short-circuits or malfunctions. Do not use water or steam to wash the battery, electronic control components, sensors, connectors or the operator's compartment.

Fuel, lubricant and grease
- Choose fuel, lubricant and grease by following to the "Fuel and lubricant table".
- Use fuels, lubricants and greases which do not contain water, and be careful to keep dirt out when changing or replenishing fuel, lubricant or grease.
- Store fuels, lubricants and greases in the prescribed places and in such a way that no water or dirt can get in them.

Cautions on refueling
- If the port includes a strainer, do not remove the strainer when fueling.
- After fueling, be sure to securely tighten the fuel filler cap.
- Do not add more than the specified amount of fuel.

Do not use fuel to clean parts
Do not use fuel to clean parts. Use a non-combustible cleaning agent.

Keep dirt out
When mounting and removing parts, do so in a place where there is no dust, clean the working area and the part, and keep dirt out.


Clean the installation surfaces

When installing and removing parts, be sure that the surfaces of contact of the parts are clean. If the sealing grooves of the surface of contact are damaged, consult your sales or service dealer for repair or release.

Seals and split pins

- Be sure to replace all seals and cotter pins with new ones.
- When installing, be careful not to damage or twist the seal.

Sealing tape

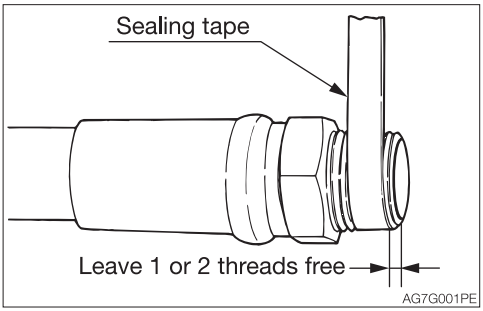

- When wrapping the plug with sealing tape, remove any old sealing tape from the threads and clean the threads.
- Wrap the thread tight with seal tape starting 1 or 2 threads away from the thread end.

Disposing of wastes

- Always collect oil that is drained from the machine in containers. Improperly disposed waste oil can cause environmental harm.
- Follow appropriate laws and regulations when disposing of harmful objects such as oil, fuel, cooling water, coolant, filters and batteries.

Check after maintenance

- Gradually increase the engine speed from a low idle to maximum speed and check that there is no oil or water leaking from serviced parts.
- Operate each control lever and check that the machine is operating properly.

Cautions on handling of battery wiring

- Disconnect the wiring from the both terminals (+ and –) on the battery before working on the electrical system or doing electric welding.
  Always disconnect it from the earth side (–). When connecting, connect the earth side last.
- Do not disconnect the battery wiring while the engine is moving. Otherwise, the electric circuits of the rotary converter or others may be damaged.

SERVICE DATA

FUEL AND LUBRICANT TABLE

Select the appropriate fuel, lubricant and grease according to the temperature by referring to the table below.

- Regardless of the specified time, change the oil if it becomes too dirty or degraded.
- When refilling, never mix oils of different brands. If a brand is to be changed, replace the whole fuel/oil.

Fuel

Diesel fuel specifications

Diesel fuel should comply with the following specifications. The table lists several worldwide specifications for diesel fuels.

Diesel fuel specification	Area	Diesel fuel specification	Area
ASTM D975 No.1-D S15 No.2-D S15	USA Canada	ISO 8217DMX	International
Bio-diesel fuel Biodiesel blends up to B7 ASTM D6751, D7467			
EN590: 2009	European union	BS2869-A1 or A2	United kingdom
Bio-diesel fuel Biodiesel blends up to B7 EN14214, EN590			

Fuel tank	**Diesel fuel**	To maintain the performance and service life of the engine, always use clean and high-quality fuel. • To avoid freezing in cold climates, use a diesel fuel that still functions when the temperature is at least 12°C (21.6°F) below the lowest expected ambient temperature. • Use a diesel fuel that has a cetane number of 45 or higher. When operating at a very low temperature or at a high altitude, a higher cetane number fuel will be required. • Use fuel with sulfur content of less than 15ppm by volume. Especially in the U.S.A. and Canada, ultra-low sulfur fuel should be used. A higher sulfur content fuel may cause sulfuric acid corrosion in the cylinders of the engines. • Never mix kerosene, used engine oil, or residual fuel with the diesel fuel. Use of kerosene is prohibited. • Poor quality fuel can reduce engine performance and / or cause engine damage. • Fuel additives are not recommended. Some fuel additives may cause poor engine performance.
		Precautions when using bio-diesel fuel The warranty of the engine manufacturer may be voided by using a bio-diesel fuel that does not meet the standard or that is deteriorated.

Lubricant

Location	Type	Type by air temperature -4 14 32 50 68 86 104°F -20 -10 0 10 20 30 40°C	When to replace
Engine oil pan	Diesel engine oil API: CJ-4 class or higher ACEA: E6 class	SAE 10W-30 SAE 15W-40	Every 250 hrs.
Hydraulic oil tank	Takeuchi genuine hydraulic oil 46	ISO VG46	Every 4000 hrs.***
	Anti-wear hydraulic oil	ISO VG32 ISO VG46 ISO VG68	Every 2000 hrs.***
Engine cooling system	Cooling water (water + coolant)** SAE: J814C or J1034	Mixture of 50% coolant Mixture of 30% coolant	Every 2000 hrs. or every two years (whichever comes first)
Travel reduction gear	Gear oil API: GL-4	SAE 90	Every 1000 hrs after the initial 250 hrs*.
Slew bearing	Lithium based grease EP-2 NLGI No.2	—	Every 50 hrs.
Working equipment			Daily or every 10 hrs.

* : If the ratio of traveling time to total operating time is high, replace the gear oil earlier than the specified time.
** : For water, use tap water (soft). Do not use well or river water. When the ambient temperature drops below 0°C (32°F), add coolant (antifreeze). Follow the coolant manufacturer's instructions to determine the mixture ratio.
*** : The hydraulic oil replacement interval depends on the type of hydraulic oil being used. New machine are delivered with Takeuchi genuine hydraulic oil 46, and the hydraulic oil replacement intervals indicated in this manual assume that Takeuchi genuine hydraulic oil 46 is being used. When using conventional antiwear hydraulic oil, the hydraulic oil should be replaced every 2000 hours.

API standard: American Petroleum Institute
ACEA standard: Association des Constructeurs Européens d'Automobiles
SAE standard: Society of Automotive Engineers

Volume

Engine oil pan	Engine cooling system	Hydraulic oil tank	Fuel tank	Travel reduction gear
Upper limit 9.4 L (9.9 US qt.) Lower limit 5.0 L (5.3 US qt.)	14 L (14.8 US qt.)	System 120 L (31.7 US gal.) Tank 71 L (18.7 US gal.)	Level capacity 100 L (26.3 US gal.) 92 L (25.7 US gal.)*	1.1 L X 2 (1.16 US qt.) X 2

*: When the fuel supply pump (if equipped) is automatically stopped

Note: On the DPF-equipped engines, part of the fuel may get mixed with engine oil during the regenerating process.
This may dilute the oil and increase its quantity. If the oil rises above the upper limit of the oil level gauge, it means the oil has been diluted too much, resulting in a trouble. In such case, immediately replace the oil with new one.

REGULARLY REPLACE THE HYDRAULIC OIL


When a hydraulic breaker is used, the oil deteriorates more quickly than that used for a usual excavation operation. Be sure to replace the hydraulic oil and the return filter elements.

- Failure to replace these in time can lead to damage to the machine and the breaker hydraulic system. To prolong the service life of the hydraulic devices, properly replace the hydraulic oil and the return filter elements according to the table below.
- When replacing the hydraulic oil, clean the suction strainer.

Replacement interval (hours)

Item	Hydraulic oil	Filter element
1st time	—	25
2nd time	—	100
Periodically	1200 (600)	200

When the breaker operating ratio is 100%.
Refer to “Hydraulic breaker” on page 8-6.

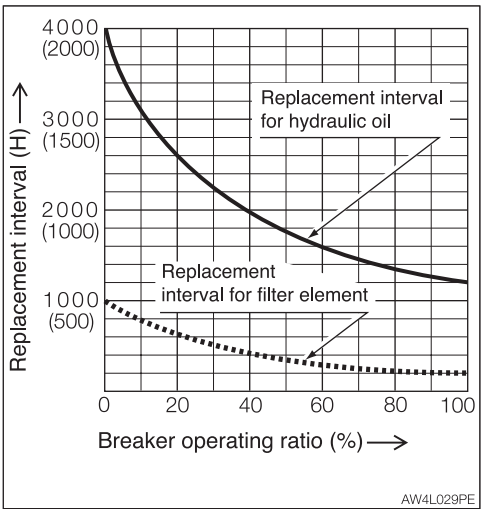

( ): When a conventional antiwear hydraulic oil is used.

LIST OF CONSUMABLES

Periodically replace consumables such as filters and elements according to the table below.

System	Item	Part name	Part No.	When to replace
Hydraulic system	Hydraulic oil return filter	Element	15511-03900	Every 1000 hrs after the initial 250 hrs.
	Pilot line filter		15512-00601	
	Air breather filter		Applicable machine models 178500002 to 178500459 15520-02715 Applicable machine models 178500460 or later 15520-05002	Every 1000 hrs.
Engine lubrication system	Engine oil filter	Cartridge	Y129150-35153	Every 250 hrs.
Fuel system	Fuel filter	Cartridge	Y129A00-55800	Every 500 hrs.
	Water separator filter	Cartridge	Y129A00-55730	
Air cleaner system	Air cleaner	Primary (Outer) element	19111-13001	Every 1000 hrs. or after 6 cleanings (whichever comes first)
		Secondary (Inner) element	19111-13002	When the primary elements are replaced.
AC system	Receiver dryer		19115-05511	Every 2 years
	Ventilation filter	Element	19115-15570	Once a year or if clogging remains after cleaning

LIST OF TOOLS (IF EQUIPPED)


Code	Part name	Part No.	Remarks
1	Spanner	Y28110-100120	10 - 12
2	Spanner	Y28110-140170	14 - 17
3	Screwdriver	Y104200-92350	(+) (–) replaceable shank
4	Filter wrench	Y119640-92750	
5	Hammer	16903-00330	3/4
6	Monkey wrench	16904-00250	250 mm
7	Pliers	16905-00200	200 mm
8	Spanner	16900-01922	19-22
9	Spanner	16900-02427	24-27
10	Single-ended wrench	16901-00013	13
11	Single-ended wrench	16901-00041	41
12	Combination wrench	16909-00026	26
13	Hex. wrench	16906-00400	4 mm
14	Hex. wrench	16906-00500	5 mm
15	Hex. wrench	16906-00600	6 mm
16	Hex. wrench	16906-00800	8 mm
17	Hex. wrench	16906-01000	10 mm
18	Hex. wrench	16906-01400	14 mm
19	Tool case	16914-00005	
20	Case	16919-00001	
21	Grease gun	16910-60600	600 cc
22	Drain connector	15545-12601	
23	Filter wrench	Y129A00-9275	


LIST OF TIGHTENING TORQUES

Nuts and Bolts (for ISO strength category 10.9)

Tighten nuts and bolts at the torques shown on the table below, unless otherwise specified.

- The tightening torques used for the mounted plastic covers are not listed in the table below. Consult your sales or service dealer for details. They will be damaged if over tightened.
- When replacing nuts and bolts, replace them with nuts and bolts of the same size and standards.
- Tighten nuts and bolts alternately (top, bottom, left then right) or in 2 or 3 times so that they are evenly tightened.

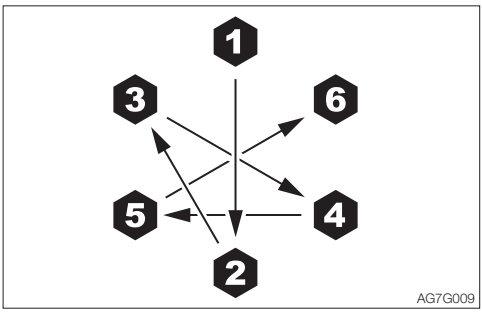

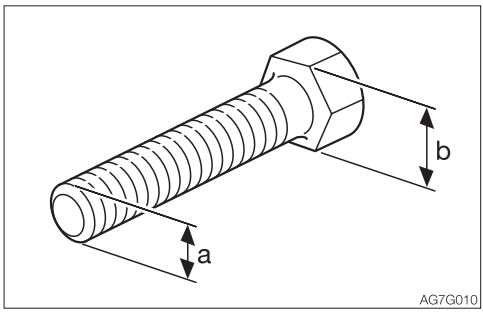

Classification	Head width (b)	Size (a) x pitch	Tightening torque	
			General connection points	
	mm	mm	N·m	ft-lb.
Coarse	10	M6 x 1.0	9.8±0.5	7.2±0.4
	12, 13	M8 x 1.25	22.6±1.1	16.6±0.8
	14, 17	M10 x 1.5	47.1±2.4	34.7±1.7
	17, 19	M12 x 1.75	83.4±4.1	61.5±3.0
	19, 22	M14 x 2.0	134.4±6.7	99.1±4.9
	22, 24	M16 x 2.0	207.9±10.4	153.3±7.7
	27, 30	M20 x 2.5	410.9±20.5	303.1±15.1
Fine	12, 13	M8 x 1.0	24.5±1.2	18.1±0.9
	14, 17	M10 x 1.25	50±2.5	36.9±1.8
	17, 19	M12 x 1.5	87.3±4.3	64.4±3.2
	19, 22	M14 x 1.5	135.3±6.8	99.8±5.0
	22, 24	M16 x 1.5	220.6±11	162.7±8.1
	27, 30	M20 x 1.5	452.1±22.6	333.4±16.6

SAFETY-CRITICAL PARTS

To use the machine safely, periodically perform inspection and maintenance. The safety-critical parts listed below must be periodically replaced for an increased safety.
Serious injury or a fire could result if they are worn or damaged.

List of safety-critical parts

Unit		Safety-critical parts to be replaced periodically	When to replace
Fuel system		Fuel hoses	Every 2 years
		Packing on fuel filler cap	
Cooling system		Rubber hoses	
Heater & AC systems		Heater hoses	
		Air conditioner hoses	
Hydraulic system	Main body	Hydraulic hoses (pump - delivery)	
		Hydraulic hoses (pump - suction)	
		Hydraulic hoses (slew motor)	
		Hydraulic hoses (travel motor)	
	Working equipment	Hydraulic hoses (boom cylinder piping)	
		Hydraulic hoses (arm cylinder piping)	
		Hydraulic hoses (bucket cylinder piping)	
		Hydraulic hoses (offset cylinder)	
		Hydraulic hoses (blade cylinder)	
		Hydraulic hoses (tension cylinder)	
		Hydraulic hoses (pilot valve)	
		Hydraulic hoses (auxiliary piping)	
		Seat belt	Every 3 years
		Non-slip sheet	

The material of the safety-critical part listed above tends to change over time and cause wear or deterioration. It is difficult to determine the degree of deterioration at the periodic inspection, and thus they need to be replaced with new ones after a certain time to maintain their proper performance even if they appear in good condition. Note that regardless of the replacement schedule, replacement must be performed immediately if a symptom of wear is found. If a hose clamp is deformed or cracked, replace it together with the hose immediately. When replacing the safety-critical parts, ask your sales or service dealer.
In addition to the safety-critical parts, inspect the hydraulic hoses and retighten or replace as necessary. When replacing the hydraulic hoses, replace the O-rings and seals at the same time.
Check the fuel and hydraulic hoses according to the periodic schedule described below. Refer to “Maintenance”.

Type of inspection	Inspection item
Daily inspection	Leakage from the connecting parts of hydraulic or fuel hoses Damage to cab - replace*
Monthly inspection	Leakage from the connecting parts of hydraulic or fuel hoses Damaged hydraulic or fuel hoses (cracks, wear and tear)
Annual inspection	Leakage from the connecting parts of hydraulic or fuel hoses Deteriorated, twisted, damaged hydraulic or fuel hoses (cracks, wear and tear) or hoses in contact with other parts of the machine

*: Cab parts No. 03986-00007

MAINTENANCE LIST

Inspection and maintenance item	Page
Walk-around inspection	
Inspecting by opening the engine hood and covers	5-16
Inspecting by walking around the machine	5-17
Inspecting while sitting in the operator's seat	5-17
Daily inspection (every 10 hours)	
Inspecting and replenishing the coolant	5-18
Inspecting and replenishing the engine oil	5-19
Inspecting the water separator	5-20
Inspecting the fuel level	5-20
Inspecting the hydraulic oil tank level and replenishing	5-21
Lubricating the working equipment	5-23
After the initial 50 hours (only for new machines)	
Inspecting and adjusting the fan belt	5-24
Inspecting and adjusting the compressor belt (AC)	5-26
Every 50 hours	
Inspecting the crawler belt tension	5-28
Lubricating the slew bearing	5-28
Draining the water from the fuel tank	5-29
Inspecting the battery fluid level and replenishing	5-30
After the initial 250 hours (only for new machines)	
Replacing the hydraulic oil return filter	5-32
Replacing the pilot line filter	5-33
Replacing the travel motor gear oil*	5-34
Every 250 hours	
Inspecting and adjusting the fan belt	5-35
Inspecting and adjusting the compressor belt (AC)	5-35
Replacing the engine oil and the oil filter	5-36
Cleaning the air cleaner	5-38
Cleaning the radiator fins and the oil cooler fins	5-39
Cleaning the air filters (AC/Heater)	5-40
Cleaning the condenser (AC)	5-41
Inspecting the refrigerant (gas) level (AC)	5-42
Every 500 hours	
Replacing the fuel filter	5-44
Inspecting the slew pinion gear	5-44
Replacing the water separator filter	5-45

*: If the percentage of the traveling time within the total operating time is high, replace the gear oil earlier than the specified time.
(AC): Air conditioner

Inspection and maintenance item	Page
Every 1000 hours	
Replacing the hydraulic oil return filter	5-46
Replacing the pilot line filter	5-46
Replacing the travel motor gear oil*	5-46
Replacing the air cleaner element	5-46
Replacing the air breather filter	5-47
Inspecting and adjusting the engine valve clearance	5-47
Every 1500 hours	
Inspecting the crankcase breather system	5-48
Cleaning the EGR cooler (cleaning the water side and exhaust air passage blower)	5-48
Every 2000 hours	
Cleaning the engine cooling system	5-50
Lapping the engine valve seats (If necessary)	5-51
Every 3000 hours	
Inspecting the turbocharger (blow wash as necessary)	5-52
Inspecting, cleaning and checking operation of the EGR valve	5-52
Cleaning the EGR lead valve	5-52
Inspecting the operation of the air intake throttle valve	5-52
Inspecting and cleaning the fuel injector	5-52
Every 4000 hours	
Replacing the hydraulic oil and cleaning the suction strainer	5-53
When required	
Replacing the bucket teeth and the side cutters (If equipped)	5-56
Replacing the bucket	5-58
Adjusting the gap between the bucket and arm (If equipped)	5-60
Inspecting and replenishing the windshield washer fluid	5-61
Inspecting and cleaning the DPF soot filter	5-61
Draining the water from the water separator	5-62
Lubricating the levers and pedals	5-63
Tilting up the platform	5-64
Inspecting the rubber crawlers	5-66
Replacing the rubber crawlers	5-67
Every 2 years	
Replacing the receiver dryer	5-70

*: If the percentage of the traveling time within the total operating time is high, replace the gear oil earlier than the specified time.


WALK-AROUND INSPECTION

Perform the following inspections every day before starting the engine for the first time.

⚠ WARNING

- **Before operating, perform the walk-around inspections and make repairs immediately where necessary.**
- **Be sure to secure the engine hood or cover before working the inside. Do not keep the hood or cover open on a windy day or if the machine is parked on a slope.**

Before starting the engine, look around the machine and clean any combustibles from the surroundings of the engine. Also, inspect if oil or water is leaking and any nuts, bolts or electric wiring are loosened or damaged.

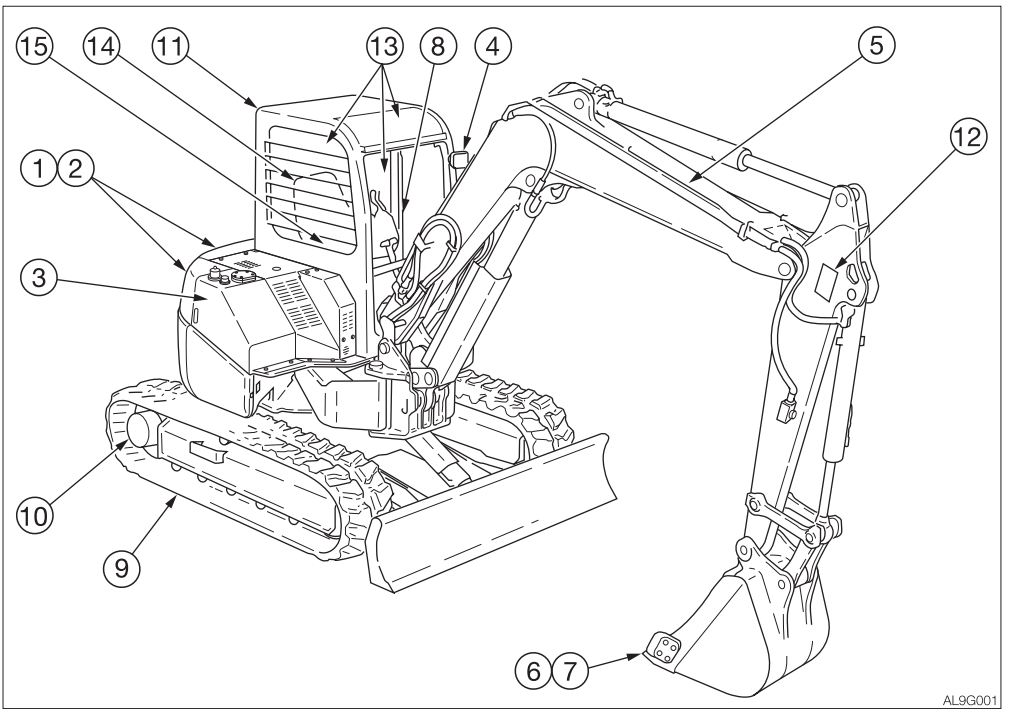

INSPECTING BY OPENING THE ENGINE HOOD AND COVERS

1. Check for any twigs, leaves, oil or other combustible materials around the engine and battery.
2. Check for oil or engine coolant water leakage around the engine.
3. Check for oil leakage from the hydraulic oil tank, hydraulic devices, hoses or connections.

INSPECTING BY WALKING AROUND THE MACHINE

4. Check lights for dirt, damage and burnt out bulbs.
5. Check attachments and hoses for damage.
6. Check the bucket, bucket teeth and side cutter for wear, damage and looseness.
7. Check the hook, slip stopper and hook mount of buckets with hooks for damage. (Option)
8. Check the handrail, the steps and the slip-resistant surfaces for damage and loose bolts.
9. Check the crawlers, carrier rollers, track rollers, idlers and sprockets for damage, wear and loose bolts.
10. Check for oil leakage from the travel motor, carrier rollers, track rollers and idlers.
11. Check the cab and guard for damage and loose nuts and bolts.
12. Check the mirrors for dirt or damage, and adjust them.
13. Check the labels for dirt and damage.

INSPECTING WHILE SITTING IN THE OPERATOR'S SEAT

14. Check the windshield for dirt or damage.
15. Check the seat and seat belt for dirt or damage.
    Check the operator's seat for dirt, oil or other combustible materials.
16. Check the monitor, instruments and switches for dirt or damage.

DAILY INSPECTION (EVERY 10 HOURS)

Perform the following inspections every day before starting the engine for the first time.

⚠ WARNING


- **Before operating, perform the daily inspections and make repairs immediately where necessary.**
- **Be sure to secure the engine hood or cover before working the inside. Do not keep the hood or cover open on a windy day or if the machine is parked on a slope.**

INSPECTING AND REPLENISHING THE COOLANT

⚠ WARNING

- **Do not remove the radiator cap or the drain plug when the cooling water is hot. Stop the engine and wait until the engine and the radiator cool before slowly loosening the radiator cap and the drain plug to remove them.**
- **Always wear the protective goggle and gloves when handling coolant (antifreeze). If any coolant (antifreeze) comes in contact with eyes or skin, wash it off with clean water. Otherwise, it could result in injures.**

Inspection

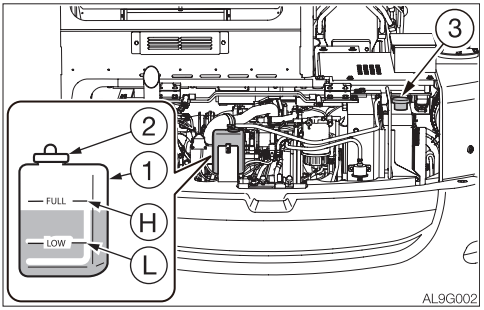

1. Open the engine hood.
2. Inspect the cooling water level in the reserve tank (1).
   The level should be between the upper limit (H) and the lower limit (L).
   If it is below the lower limit (L), replenish.

Replenishing

1. Remove the cap (2) of the reserve tank (1).
2. Add cooling water up to the upper limit (H) of the reserve tank (1).
   If the reserve tank (1) is found empty at the inspection, check for water leakage and then the water level in the radiator (3). Add water to the radiator (3) as required, and then to the reserve tank (1).
3. Install the cap (2).


Note: Use only clean water (soft water), such as tap water, to replenish the coolant loss due to evaporation. If the coolant loss is due to leakage, replenish the mixture of antifreeze and clean water (soft water) prepared using the same mixing ratio used for the current coolant.

INSPECTING AND REPLENISHING THE ENGINE OIL

⚠ WARNING

Stop the engine and allow the machine to cool down before performing maintenance.

Inspection

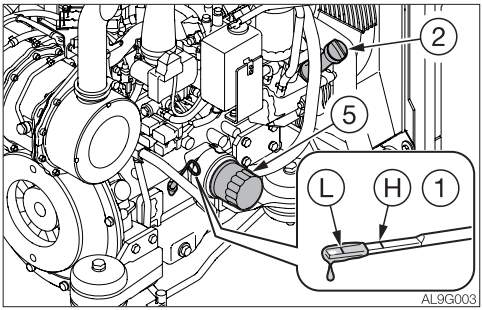

1. Open the engine hood.
2. Take out the dipstick (1) and wipe the oil off with a rag.
3. Fully reinsert the dipstick (1), and then pull it back out.
4. Check the oil on the dipstick (1).
   The level should be between the upper limit (H) and the lower limit (L).
   If it is below the lower limit (L), replenish.

Replenishing


1. Remove the oil filler cap (2).
2. Add oil up to between the upper limit (H) and the lower limit (L) of the dipstick (1). Problems could arise if the oil level is either too low or too high.
3. Tighten the oil filler cap (2).
4. Start the engine, run it at low idle for about 5 minutes, then stop it.
5. After about 15 minutes, inspect the oil level.

INSPECTING THE WATER SEPARATOR

⚠ WARNING

- Do not smoke or permit open flames while handling fuel or working on the fuel system.
- Stop the engine in a well-ventilated place and allow it to cool down before performing maintenance.
- Clean up spilled fuel immediately.

Water separator

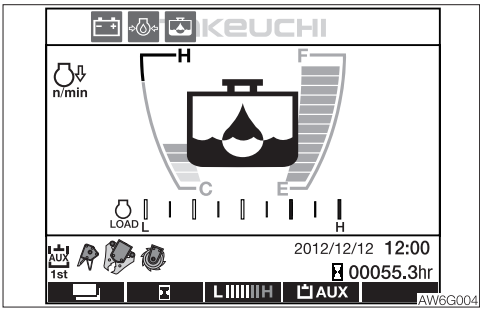


1. Turn the starter switch to the ON position.
2. Inspect the water separator warning lamp.
3. If the warning lamp is flashing, drain the water.
   Refer to “Draining the water from the water separator” on page 5-62.

INSPECTING THE FUEL LEVEL

⚠ WARNING

- Do not smoke or permit open flames while handling fuel or working on the fuel system.
- Never remove the fuel cap or add fuel when the engine is running or still hot. Do not spill fuel on the hot surface of the machine.
- Fill the fuel tank in a well ventilated place.
- Clean up spilled fuel immediately.
- Do not fill the fuel tank to capacity. Allow room for oil expansion.
- Securely tighten the fuel filler cap.
- Use the correct grade of fuel for the operating season.

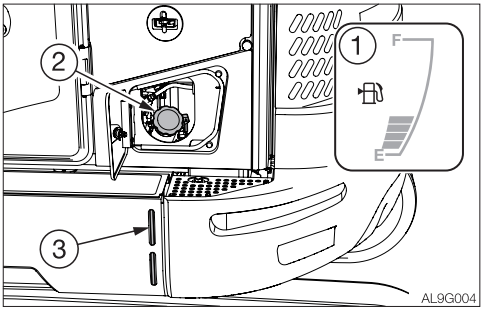

1. Check the fuel level using the fuel gauge (1).
   F: Tank is full.
   E: Tank is empty.
2. If the fuel level is low, open the fuel lid.
3. Add fuel from the fuel filler port (2) while watching the sight gauge (3).
   Refer to “Fuel filler port” on page 2-6.

INSPECTING THE HYDRAULIC OIL TANK LEVEL AND REPLENISHING

⚠ WARNING


Oil may spurt out if caps or filters are removed or pipes are disconnected before releasing the pressure in the hydraulic system.

- **Press the air breather button to relieve the internal pressure from the tank.**

Inspection


The oil level changes with the oil temperature. Inspect the oil by maintaining the machine at posture shown in the figure at the next.

- Machine posture for inspecting the hydraulic oil level

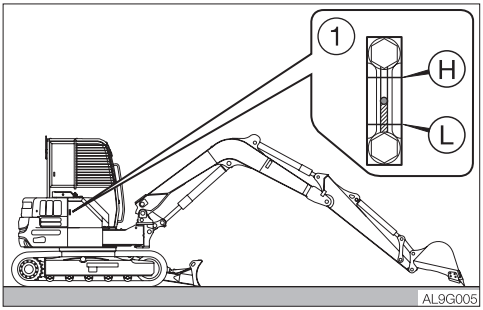

1. Start the engine and run it at low speed.
2. Fully offset the boom to the left.
3. Fully retract the cylinders (arm and bucket), and lower the bucket to the ground.
4. Lower the dozer blade, and then stop the engine.
5. Open the side cover.
6. Inspect the oil level using the sight gauge (1).
   - When the oil temperature is about 20°C (68°F):
     The level should be between the upper limit (H) and the lower limit (L).
     If it is below the lower limit (L), replenish.
   - When the oil temperature is about 50 to 80°C (122 to 176°F):
     The level should be slightly below the upper limit (H).

Replenishing

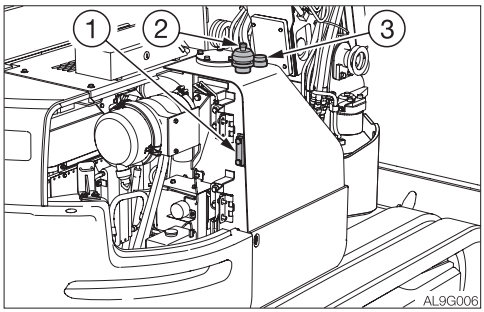


IMPORTANT: Do not fill up to the level higher than the upper limit (H). It will damage the hydraulic circuits or result in oil spurting. If accidentally done, stop the engine and wait the hydraulic oil to cool, and then let the excessive oil to drain from the drain plug.

1. Press the air breather button (2) to relieve the internal pressure from the tank.
2. Remove the plug (3).
3. Add the hydraulic oil up to the middle point of the sight gauge (1).
4. Tighten the plug (3).


Pressurizing the hydraulic tank

1. Start the engine and run it at low speed.
2. With the vent plug (3) removed, set the safety lock levers to the released position.
   · Hydraulic tank pressurization posture

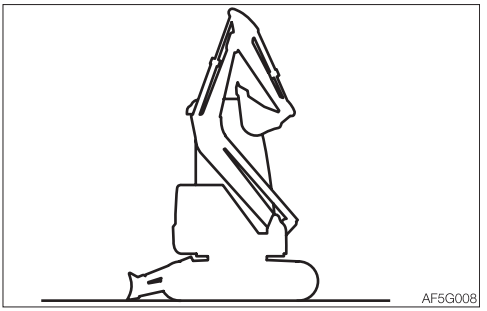

3. Fully extend the bucket, arm, boom and offset cylinders. (Tank pressurizing posture)
4. Stop the engine and raise the left safety lock lever to engage the lock.
5. Tighten the vent plug (3), and then pressurize by retracting the cylinders.

LUBRICATING THE WORKING EQUIPMENT

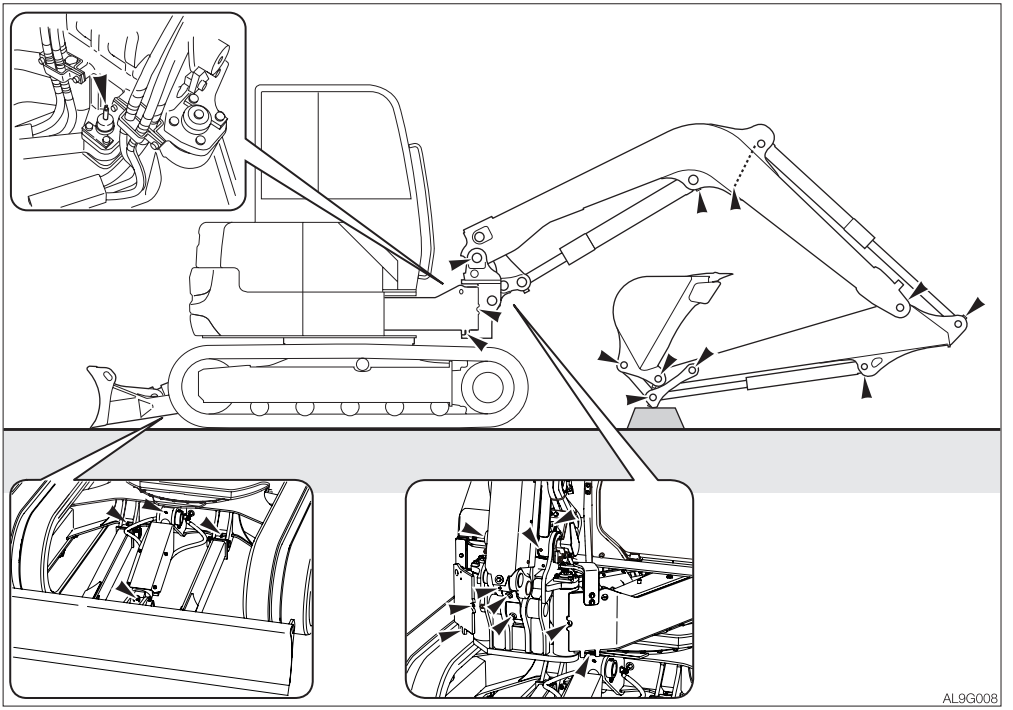

1. Keep the machine configuration as shown in the diagram above, lower the working equipment to the ground, and then stop the engine.
2. Use the grease gun to lubricate the grease fittings.
3. Wipe off the excess grease.

AFTER THE INITIAL 50 HOURS (ONLY FOR NEW MACHINES)

INSPECTING AND ADJUSTING THE FAN BELT


⚠ WARNING

Stop the engine and allow the machine to cool down before performing maintenance.


- **The engine, muffler, radiator, hydraulic lines, sliding parts and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**

IMPORTANT: The loose belts could result in bad battery charge, overheat of engine or early wear of belt. Too tight belts could damage the water pump or bearing and belt used to drive the alternator.
IMPORTANT: Do not let any oil or grease get on the belt.

Inspection

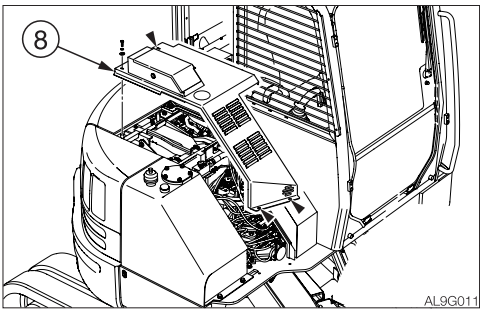


1. Loosen the bolts and remove the maintenance cover (8).
2. Tilt up the platform.
   Refer to “Tilting up the platform” on page 5-64.

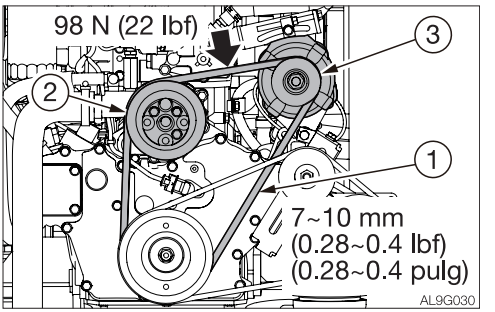

3. Press the fan belt (1) at the midpoint between the fan pulley (2) and alternator pulley (3) to check the tension (approx. 98 N or 22 lbf).
   The slack (A) should be 7 to 10 mm (0.28 to 0.4 in).
4. Inspect the fan belt (1) and replace if it is as follows.
   · There are cuts or cracks.
   · The belt is worn and touches the bottom of the V groove in the pulley.
   · The belt stretched too loose to be adjusted.

Adjustment

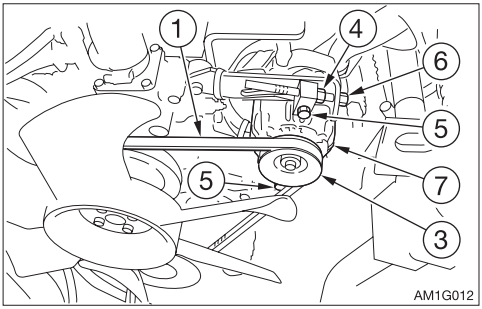

1. Loosen the bolts (5) and locking nut (4).
2. Turn the adjustment bolt (6) to move the alternator (7) and to adjust the tension of the fan belt (1).
   - Tighten: Clockwise
   - Loosen: Counterclockwise
3. Tighten the bolts (5) and locking nut (4).
4. Reinstall the maintenance cover (8) on its original position.

Note: When replacing with a new belt, run the engine at low idle speed for about 3 to 5 minutes to break in the new belt, before adjusting the tension.


INSPECTING AND ADJUSTING THE COMPRESSOR BELT (AC)

⚠ WARNING


- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The engine, muffler, radiator, hydraulic lines, sliding parts and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
- **The high-pressure pipes of the air conditioner can be very hot (80 to 120°C or 176 to 248°F). Be careful not to burn yourself.**

IMPORTANT: Do not let any oil or grease get on the belt. It will cause the belt to slip, decrease the cooling capacity or shorten the service life of the air conditioner.


If the belt is too slack, it will slip and vibrate, resulting in decreased cooling capacity. The service life of the air conditioner also will be shortened. Adjust the belt tension to the standard value.

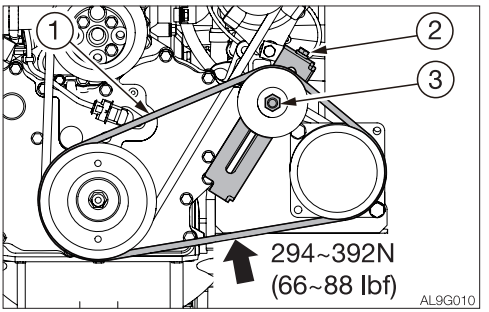

Inspection

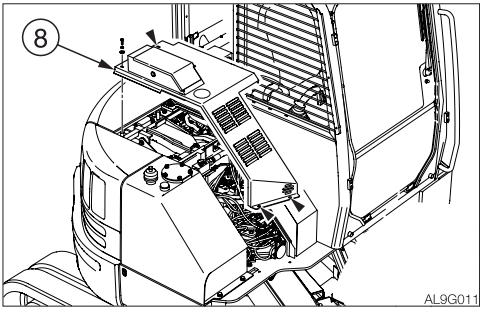

1. Loosen the bolts and remove the maintenance cover (8).
2. Tilt up the platform.
   Refer to “Tilting up the platform” on page 5-64.

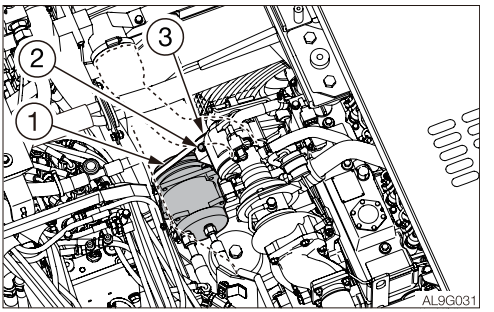

3. Measure the belt (1) tension using the belt tension gauge. The belt tension is normal if the belt tension gauge indicates the following values.
   294 to 392 N or 66 to 88 lbf.

Adjustment

If the belt tension is not normal, adjust it with the adjuster bolt (2).

1. Loosen the locking nut (3).
2. Turn the adjuster bolt (2) as follows.
   - Tighten: Clockwise
   - Loosen: Counterclockwise
3. Tighten the locking nut (3) after adjustment.
   Tightening torque:
   - Locking nut (4) 31.4 to 45.1 N·m (23.2 to 33.3 ft-lb.)
4. Reinstall the maintenance cover (8) on its original position.

Note: When replacing with a new belt, run the engine at low idle speed for about 3 to 5 minutes to break in the new belt, before adjusting the tension again.

Replacing

Replace the belt in the following cases:

- There are cuts or cracks.
- The belt is worn and touches the bottom of the V groove in the pulley.
- The belt stretched too loose to be adjusted.

EVERY 50 HOURS

INSPECTING THE CRAWLER BELT TENSION


Note: This machine uses a hydraulic cylinder to adjust the tension of the crawler belts. It is not necessary to regularly perform adjustments of the crawler belt tension.

If the tension is too loose and the track comes off, the hydraulic cylinder is likely faulty. Ask your sales or service dealer for repairs.


LUBRICATING THE SLEW BEARING

⚠ WARNING


Do not slew while lubricating. Doing so is dangerous, as you may get caught in the machine.

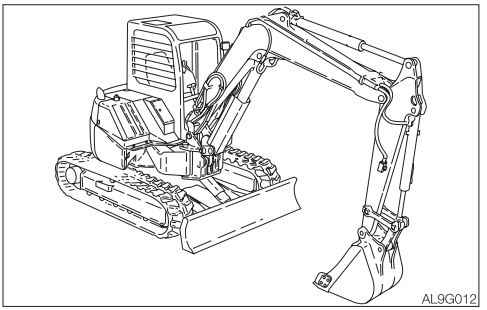

1. Stop the engine with the machine in the posture shown on the figure above.

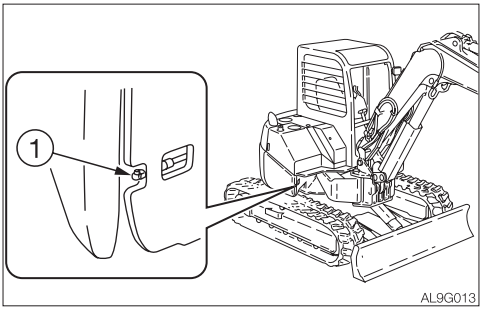

2. Use the grease gun to grease the grease fitting (1).

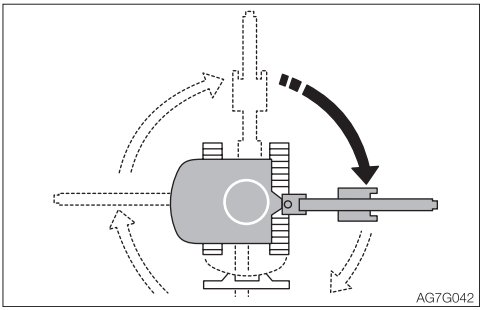


3. Start the engine, lift the bucket and slew clockwise 90°.
4. Lower the bucket to the ground, and then stop the engine.
5. Repeat the steps 2 to 4 above three times.
6. Wipe off the grease expelled from the slew bearing and grease fitting.

DRAINING THE WATER FROM THE FUEL TANK

⚠ WARNING

- **Do not smoke or permit open flames while handling fuel or working on the fuel system.**
- **Never remove the fuel cap or add fuel when the engine is running or still hot. Do not spill fuel on the hot surface of the machine.**
- **Fill the fuel tank in a well ventilated place.**
- **Do not fill the fuel tank to capacity. Allow room for oil expansion.**
- **Clean up spilled fuel immediately.**
- **Securely tighten the fuel filler cap.**
- **Use the correct grade of fuel for the operating season.**

Do the draining operation before starting the machine.

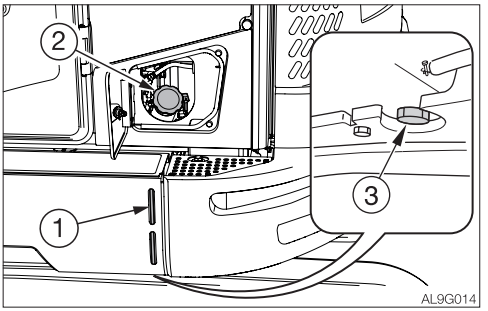

1. Open the fuel lid.
2. Remove the fuel filler cap (2).
3. Place a pan under the drain plug (3).
4. Remove the drain plug (3) and drain the water and sediment built up in the bottom of the tank.
5. Tighten the drain plug (3).
6. Add fuel while watching the sight gauge (1).
7. Tighten the fuel filler cap (2).
8. Close the fuel lid and lock it with the key.
9. Bleed air.

Bleeding air from the fuel system
Refer to “Bleeding air from the fuel system” on page 6-8.

Note: Air in the fuel system causes the engine to fail to start or to have problems. Bleed air when the fuel tank is emptied, using the same procedure above.

INSPECTING THE BATTERY FLUID LEVEL AND REPLENISHING

⚠ DANGER

- Do not use the battery when the fluid level is below the lower level limit. Doing so will hasten the deterioration of the internal portions of the battery and shorten the battery life. It also can cause rupturing (explosion).
- Batteries generate flammable hydrogen gas which may explode. Keep away from flame, sparks, fire or lighted cigarettes.
- Use a dampened cloth to clean above the fluid level line and check the fluid level. Do not clean with a dry cloth; otherwise it can cause static electricity to build up, resulting in ignition or explosion.


⚠ WARNING

- Wear protective goggle and clothing when working with batteries.
- Do not add the distilled water above the upper level limit. Doing so could cause the fluid to leak. This fluid can cause skin damage if contacted, or can cause the machine components to corrode.
- Batteries contain sulfuric acid which will damage eyes or skin if contacted.
  - If eye contact occurs, flush immediately with clean water and get prompt medical attention.
  - If accidentally swallowed, drink large quantities of water or milk and call a physician immediately.
  - If acid contacts skin or clothing, wash off immediately with a lot of water.

Inspection


IMPORTANT: Check the fluid level of all cells following the steps below, even when the fluid level can be checked using the indicator.

1. Open the side cover.

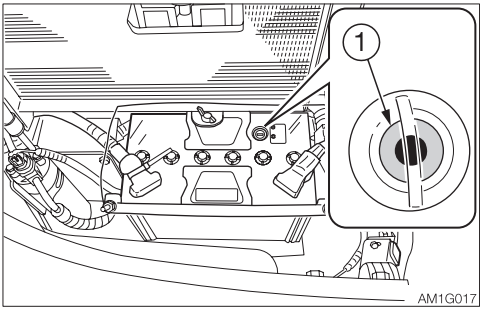

2. Inspect the indicator (1).
   - Blue: Good
   - White: Charging needed
   - Red: Insufficient battery fluid
3. Inspect the fluid level.
   The fluid level must be between the upper level line (H) and lower level line (L). If not, add distilled water up to the line (H).

- If the fluid level cannot be checked by fluid level lines:

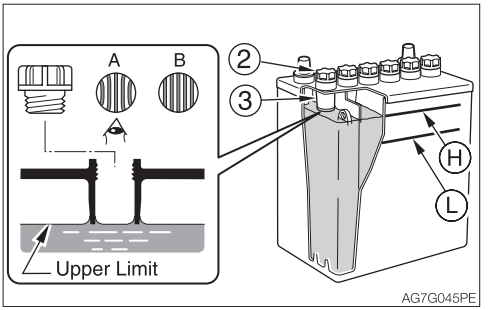

Remove the caps (2) and look into the fluid filler holes to check the fluid level. If the fluid is below the sleeve (3), be sure to add distilled water up to the bottom edge of the sleeve (3).

Proper level (A)
If the fluid reaches up to the bottom edge of the sleeve (3), the surface tension causes the fluid to swell and the plate appears as if it is distorted.

Level too low (B)
If fluid does not reach up to the bottom edge of the sleeve (3), the plate looks laminar, not distorted.

4. Check the terminals for looseness and dirt.


Replenishing
When adding distilled water, do so before starting operations in order to prevent freezing.
1. Remove the caps (2), and add distilled water until the upper level (H).
2. Check that the indicator (1) turns blue.
3. Clean the exhaust hole on the cap, then tighten the caps (2) securely.

AFTER THE INITIAL 250 HOURS (ONLY FOR NEW MACHINES)

REPLACING THE HYDRAULIC OIL RETURN FILTER

⚠ WARNING

- Stop the engine and allow the machine to cool down before performing maintenance.
  - The engine and the hydraulic system and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.
  - The hydraulic oil is also hot and under high pressure.
    Be careful not to touch the hydraulic oil when loosening the cap or plug. Working on the machine under these conditions could result in burns or injuries due to the hot oil spurting out.
- Oil may spurt out if caps or filters are removed or pipes are disconnected before releasing the pressure in the hydraulic system.
  - Press the air breather button to relieve the internal pressure from the tank.
  - When removing plugs or screws, or when disconnecting hoses, stand to the side and loosen them slowly to gradually release the internal pressure before removing.

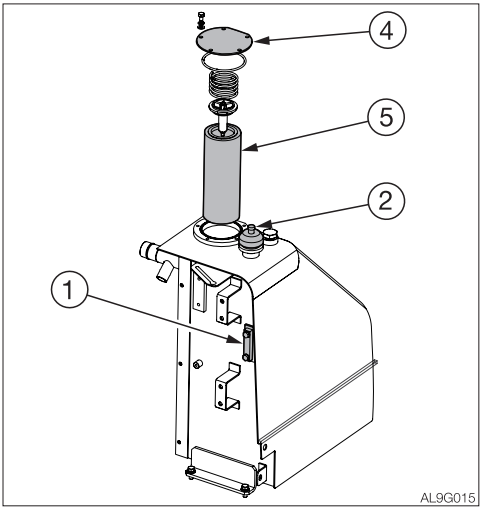


1. Press the air breather button (2) to relieve the internal pressure from the tank.
2. Loosen the bolts and remove the flange (4).
3. Remove the return filter (5).
4. Install a new return filter.
5. Install the flange (4) on its original position.
6. Open the side cover.
7. Inspect the level with the sight gauge (1), and replenish if the level is too low.
   Refer to “Inspecting the hydraulic oil tank level and replenishing” on page 5-21.

REPLACING THE PILOT LINE FILTER

⚠ WARNING

- **Stop the engine and allow each part of the machine to cool down before performing maintenance.**
  - **The engine, the hydraulic system and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
  - **The hydraulic oil is also hot and under high pressure immediately after the engine is stopped. Be careful not to touch the oil when loosening the cap or plug. Working on the machine under these conditions could result in burns or injuries due to the hot oil spurting out.**
- **Oil may spurt out if caps or filters are removed or pipes are disconnected before releasing the pressure in the hydraulic system.**
  - **Press the air breather button to relieve the internal pressure from the tank.**
  - **When removing plugs or screws, or when disconnecting hoses, stand to the side and loosen them slowly to gradually release the internal pressure before removing.**

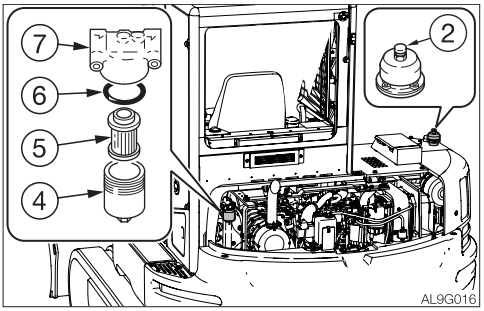


1. Press the air breather button (2) to relieve the internal pressure from the tank.
2. Open the engine hood.
3. Turn the case (4) counterclockwise and remove it.
4. Remove the element (5) and O-ring (6).
5. Clean the inside of the case (4).
6. Apply a thin layer of oil on the O-ring of the new filter.
7. Install the new element on the filter stand (7).
8. Apply a thin layer of oil on the new O-ring (6).
9. Install the new O-ring (6) and the case (4) on the filter stand (7).
10. Open the side cover.
11. Inspect the level with the sight gauge (1) and replenish if the level is too low.
    Refer to “Inspecting the hydraulic oil tank level and replenishing” on page 5-21.

REPLACING THE TRAVEL MOTOR GEAR OIL

⚠ WARNING

- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The travel motor is hot immediately after the engine is stopped. Touching it will cause burns.**
  - **The gear oil is also hot and under high pressure immediately after the engine is stopped. Be careful when loosening the plugs. Working on the machine under these conditions could result in burns or injuries.**
- **The pressure in the reduction gear case of travel motor may cause oil or the plug to fly out. Loosen the plug slowly to release the pressure.**

IMPORTANT: If the percentage of the traveling time within the total operating time is high, replace the gear oil earlier than the specified time.

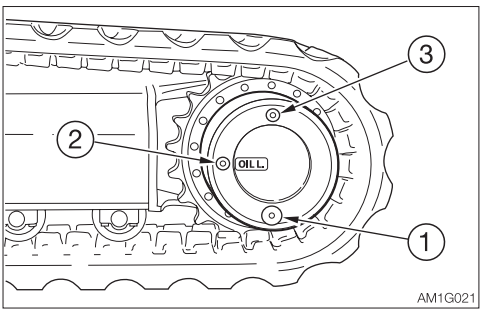

1. Set the travel motor so that plug (1) is at the very bottom.
2. Place a pan under the plug (1).
3. Remove the plugs (1), (2) and (3) and drain the oil.
4. Rewrap the plugs with new sealing tape.
5. Tighten the plug (1).
   - Tightening torque: 58.8 ± 9.8 N·m (43.4 ± 7.2 ft-lb.)
6. Add oil through the hole of the plug (3) until oil flows out of the hole of the plug (2).
7. Tighten the plugs (2) and (3).
   - Tightening torque: 58.8 ± 9.8 N·m (43.4 ± 7.2 ft-lb.)

EVERY 250 HOURS

INSPECTING AND ADJUSTING THE FAN BELT

Refer to “Inspecting and adjusting the fan belt” on page 5-24.

INSPECTING AND ADJUSTING THE COMPRESSOR BELT (AC)

Refer to “Inspecting and adjusting the compressor belt (AC)” on page 5-26.


REPLACING THE ENGINE OIL AND THE OIL FILTER

⚠ WARNING


Stop the engine and allow the machine to cool down before performing maintenance.

- **The engine, muffler, radiator, hydraulic lines, sliding parts and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
- **The engine oil is also hot. Be careful not to touch the hydraulic oil when loosening the cap or plug. Working on the machine under these conditions could result in burns or injuries.**

Engine oil

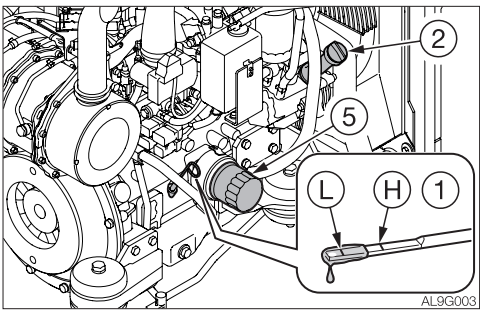

1. Open the engine hood and remove the oil filler cap (2).

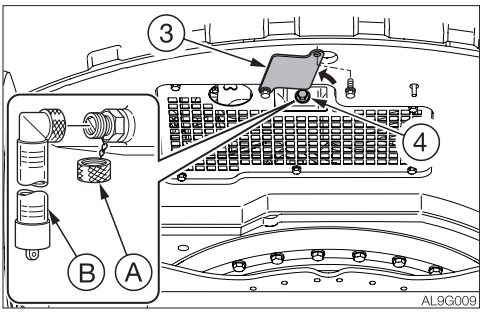

2. Loosen the bolts and remove the under cover (3).
3. Place a pan for catching the waste oil under the drain plug (4).
4. Remove the drain plug (4) and drain the oil.

4. Machines equipped with the optional drain plug:
   Remove the cap (A), install connector (B), and then drain the oil. (The oil comes out when the screw is tightened.)

5. Tighten the drain plug (4).

5. Machines equipped with the optional drain plug:
   Remove the connector (B) and install the cap (A).

6. Install the under cover (3).

IMPORTANT: Check the waste oil for metal powder. If it contains large amounts of metal powder, consult your sales or service dealer.

Engine oil filter


7. Turn the filter (5) counterclockwise with the filter wrench and remove it.
8. Clean the surface of installation of the filter stand.
9. Apply a thin layer of oil on the packing of the new filter.
10. Install the new filter by hand.
11. Tighten one more turn (with the filter wrench) after the filter packing comes in contact with the surface of installation. (Torque when tightening with filter wrench: 19.6 to 23.5 N·m or14 to 17 ft-lb.)
12. Add oil up to between the upper limit (H) and the lower limit (L) of the dipstick (1). Problems could arise if the oil level is either too low or too high. It takes around 10 to 20 minutes for all of the added oil to go down to the oil pan.
13. Tighten the oil filler cap (2).
14. Start the engine, run it at low idle for about 5 minutes, then stop it.
15. After about 15 minutes, inspect the oil level.

CLEANING THE AIR CLEANER


⚠ WARNING

- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The engine, muffler, radiator and many other parts of the machine are hot immediately after the engine is stopped. Touching it will cause burns.**
- **Wear required appropriate equipment such as protective goggle and filter mask when using compressed air, as metal fragments or other objects can fly and cause serious injury.**


IMPORTANT: Be careful not to scratch the element. Do not use an element if it is damaged.
IMPORTANT: When operating the machine in very dusty places, perform inspection and maintenance operations every day.
IMPORTANT: Be sure to install the element and dust cap securely. If not, dust could be drawn into the cylinder, damaging the engine.

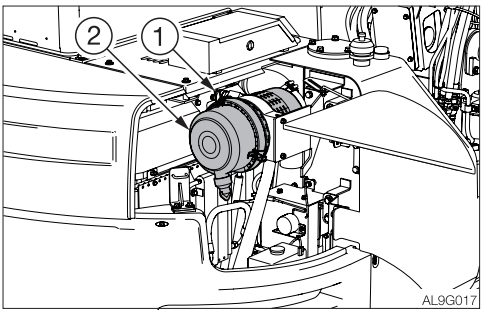

1. Open the side cover.

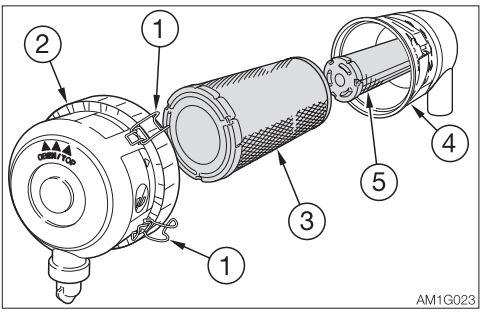

2. Loosen the clamps (1) and remove the dust cup (2).
3. Clean the inside of the dust cup (2).
4. Remove the primary element (3).
   To prevent dirt from getting inside the engine, do not remove the secondary element (5).
5. Clean the inside of the body (4).

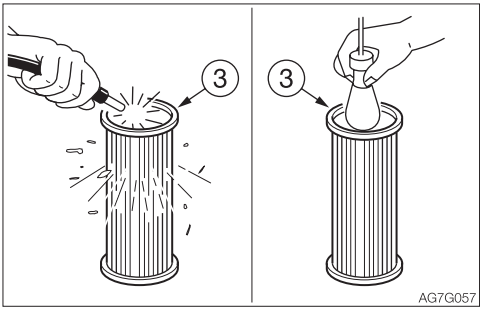

6. Clean the primary element (3) with dried compressed air (294 to 490 kPa or 43 to 71 psi).
   First blow the air from the inside of the element along the pleats. Then blow the air from the outside and finally from the inside again.
7. Light up the inside of the primary element (3) with a light bulb, inspect it, and replace it if there are small holes or thin spots.
8. Install the primary element (3).
9. Install the dust cup (2) with its "▲▲▲ OBEN/TOP" mark facing up, and then fasten it with the clamps (1).

CLEANING THE RADIATOR FINS AND THE OIL COOLER FINS

⚠ WARNING

Wear required appropriate equipment such as protective goggle and filter mask when using compressed air, as metal fragments or other objects can fly and cause serious injury.


IMPORTANT: Be careful not to damage the fins when cleaning.

- **When using compressed air or pressurized water, make sure the pressure is no higher than 200 kPa (28 psi) and hold the nozzle sufficiently away from the fins.**


IMPORTANT: When using water, cover the electrical system to prevent water from getting in.

IMPORTANT: When operating the machine in very dusty places, perform inspection and maintenance operations every day.

1. Open the side cover.

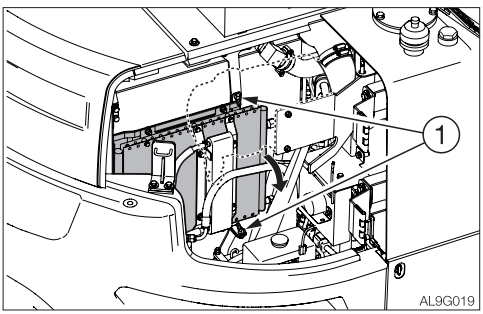

2. Remove the screws (1) and open the condenser.

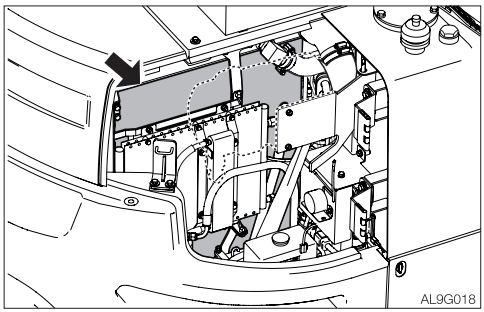

3. Blow compressed air on the fins to remove mud and dirt stuck on them.

CLEANING THE AIR FILTERS (AC/ HEATER)


⚠ WARNING

Wear required appropriate equipment such as protective goggle and filter mask when using compressed air, as metal fragments or other objects can fly and cause serious injury.

Clean the filters immediately after operating in dusty places.
If the filters are clogged, the air flow is reduced and a booming sound is heard from the air conditioner unit.

Removing the filters

Ventilation filter

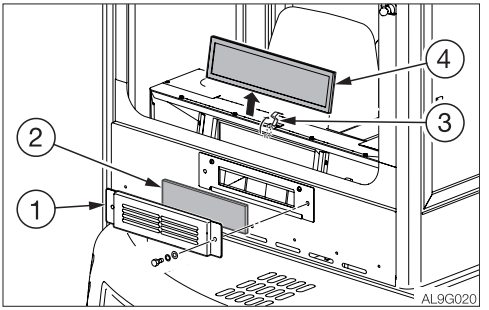

1. Loosen the bolts and remove the cover (1).
2. Remove the filter (2).
   Ventilation filter (2):
   Part number 19115-15570

Circulation filter

1. Open the cab door.
2. Release the fixing knob (3) by pulling it toward you.
3. Lift the filter (4) and remove it.
4. Use compressed air or water to clean each filter, depending on how dirty it is.

Cleaning

1. Blow dry, compressed air (138 kPa or 20 psi or less) directly on the filters from the inside, moving up and down along the pleats.
   Be sure to keep the nozzle at an adequate distance from the filters.
2. Wash the filter with neutral detergent if it is very dirty. Dry the filter completely after washing it.

Replacing

Replace the filter with a new one once a year or if it is still clogged after blow-drying with compressed air and washing.


CLEANING THE CONDENSER (AC)

⚠ WARNING

Wear required appropriate equipment such as protective goggle and filter mask when using compressed air, as metal fragments or other objects can fly and cause serious injury.

IMPORTANT: Be careful not to damage the fins when cleaning.

- **When using compressed air or pressurized water, make sure the pressure is no higher than 200kPa (28 psi) and hold the nozzle sufficiently away from the fins.**

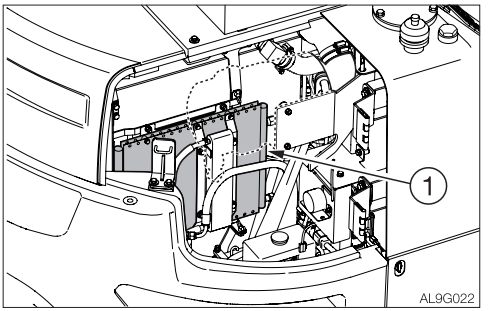


1. Open the side cover.
2. Clean the condenser (1).

INSPECTING THE REFRIGERANT (GAS) LEVEL (AC)

⚠ WARNING

- **Exposure of the eyes or hands to the cooler's refrigerant could result in blindness or frostbite. Never touch the refrigerant or loosen the parts of the cooling circuit.**
- **Keep flames away if the refrigerant gas is leaking.**
- **The high-pressure pipes of the air conditioner can be very hot (80 to 120°C or 176 to 248°F). Be careful not to burn yourself.**


The cooling capacity decreases if the amount of refrigerant is insufficient. Inspect the refrigerant level using the sight glass (2) on the top of the receiver dryer (1).

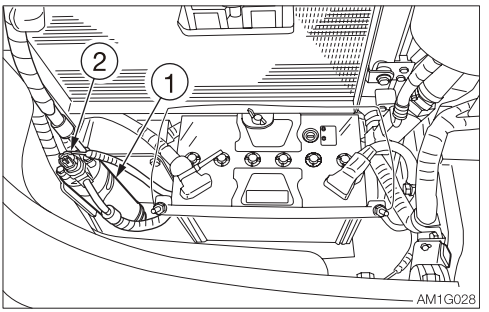

1. Open the side cover.
2. Inspect the places for the conditions below.





Places for inspection	Conditions
Cab door	Fully open
Temperature control dial	Set fully to the COOL side
Fan speed	High
Ventilation / Circulation select switch	Circulation
Engine speed	Maximum speed
Air conditioner switch	ON

3. Inspect the refrigerant by watching the flow of air bubbles through the sight glass (2).
   Refer to "Check list for refrigerant volume" on page 5-43.
4. Remove the maintenance cover.
   Refer to "Inspecting and adjusting the compressor belt (AC)" on page 5-28.
5. Tilt up the platform.
   Refer to "Tilting up the platform" on page 5-64.

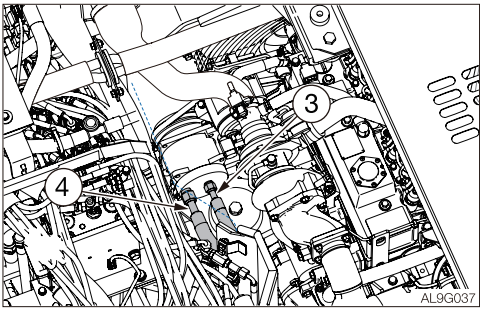

6. Check the temperature of the compressor's high pressure pipe (3) and low pressure pipe (4).
   Refer to "Check list for refrigerant volume" on page 5-43.

Check list for refrigerant volume

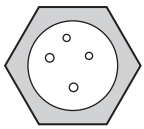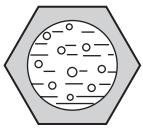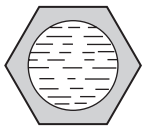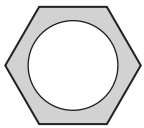Air conditioner	Normal	Abnormal		
High/low pressure pipe temperature	High pressure pipe is hot (80 to 120°C or 176 to 248°F), low pressure pipe is cold (8 to 15°C or 46 to 59°F). Clear difference in temperature between the pipes.	High pressure pipe is warm, low pressure pipe is slightly cool. No significant difference in temperature between the pipes.	Little difference in temperature between the high-pressure pipe and the low-pressure pipe.	High pressure pipe is hot, low pressure pipe is slightly cool. A significant difference in temperature between the pipes.
Pipe connection	Normal	Some places are dirty with oil.	Some places are extremely dirty with oil.	Normal
Sight glass	 AG7G064 Almost transparent with some bubbles. Fully transparent when the engine speed is increased or decreased.	 AG7G065 Flow of bubbles can be seen constantly. Sometimes transparent or white with bubbles.	 AG7G066 Mist-like flow is faintly visible.	 AG7G067 No bubbles is visible, even when the fan is set to High and the engine is idling.
Refrigerant level	Proper level	Refrigerant may be leaking.	Refrigerant has leaked; little is left.	Refrigerant level too high

If the air conditioner is not working
If the air conditioner does not work well, set the fan switch to OFF and contact your sales or service dealer for inspection and/or repairs.


IMPORTANT: Continued use of the air conditioner when it is not working properly will damage its various parts.
IMPORTANT: Using the air conditioner when there is no refrigerant will damage the compressor.
IMPORTANT: Always consult your sales or service dealer for replacing the refrigerant. Be sure to use R134a refrigerant (1435 to 1515g or 3.16 to 3.34 lb.).

EVERY 500 HOURS

REPLACING THE FUEL FILTER


⚠ WARNING

- **Do not smoke or permit open flames while handling fuel or working on the fuel system.**
- **Stop the engine in a well-ventilated place and allow it to cool down before performing maintenance.**
- **Clean up spilled fuel immediately.**

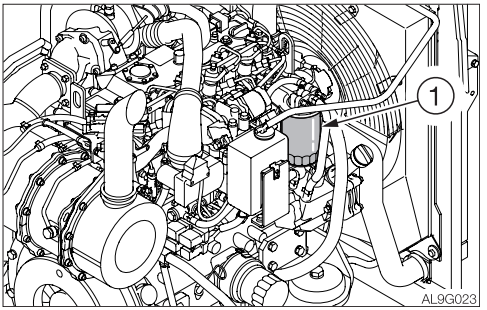


1. Open the engine hood.
2. Turn the filter (1) counterclockwise with the filter wrench and remove it.
3. Clean the surface of installation of the filter stand.
4. Apply a thin layer of oil on the packing of the new filter.
5. Install the new filter by hand.
6. Tighten one more turn after the filter packing comes in contact with the surface of installation. (Torque when tightening with filter wrench: 19.6 to 23.5 N·m or 14 to 17ft-lb.)
7. Bleed the air.
   Refer to “Bleeding air from the fuel system” on page 6-8.

INSPECTING THE SLEW PINION GEAR

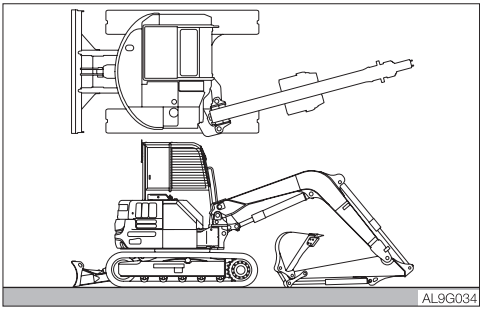

1. Select a firm, level surface, set the machine to the posture shown in the diagram above, ground the working equipment, then stop the engine.

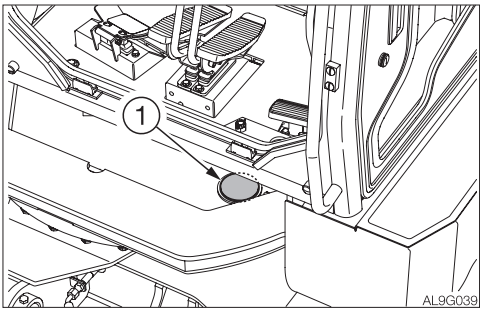


2. Remove the cap (1).
3. Make sure that the gear tooth surface of the slew bearing is well greased.
   If the surface is not adequately greased, add grease.
   If the grease has turned white due to water or mud entered it, replace the whole grease. Consult your sales or service dealer for help.
   Grease full capacity: 7.0 L (1.8 US gal) or 6.3 kg (14 lbs.)

REPLACING THE WATER SEPARATOR FILTER

⚠ WARNING

- **Do not smoke or permit open flames while handling fuel or working on the fuel system.**
- **Stop the engine in a well-ventilated place and allow it to cool down before performing maintenance.**
- **Clean up spilled fuel immediately.**

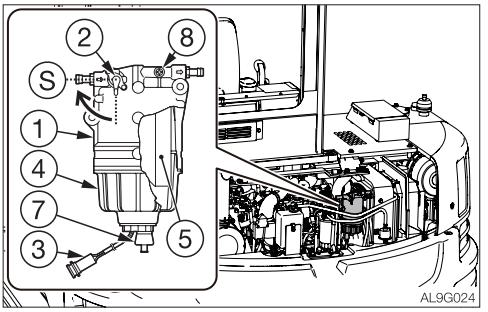

(S): Close

1. Open the engine hood.
2. Close the valve (2) of the water separator (1).
3. Place a pan for catching fuel under the drain hose.
4. Loose the air-bleeding plug (8) and the drain plug (7) to discharge fuel from inside.
5. Remove the sensor wiring coupler (3).
6. Remove the case (4) with the filter wrench.
7. Remove the element (5), and then clean the case. When doing the above, be careful not to damage the sensor.
8. Replace the packing with a new one and lubricate it with diesel fuel.
9. Install the new element (5) on the filter stand.
10. Tighten the case (4) by hand. Be sure to do it by hand.
    Tightening torque: 27 to 33 N·m (20 to 24.6 ft-lb)
11. Install the sensor wiring coupler (3).
12. Tighten the drain plug (7).
13. Bleed air.
    Refer to “Bleeding air from the fuel system” on page 6-8.

EVERY 1000 HOURS

REPLACING THE HYDRAULIC OIL RETURN FILTER

Refer to “Replacing the hydraulic oil return filter” on page 5-32.

REPLACING THE PILOT LINE FILTER

Refer to “Replacing the pilot line filter” on page 5-33.

REPLACING THE TRAVEL MOTOR GEAR OIL

Refer to “Replacing the travel motor gear oil” on page 5-34.


REPLACING THE AIR CLEANER ELEMENT

⚠ WARNING


Stop the engine and allow the machine to cool down before performing maintenance.

- **The engine, muffler, radiator and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**

IMPORTANT: Do not use an element if its pleats, gaskets or seals are damaged.
IMPORTANT: Be sure to install the element and dust cap securely. If not, dust could be drain into the cylinder, damaging the engine.

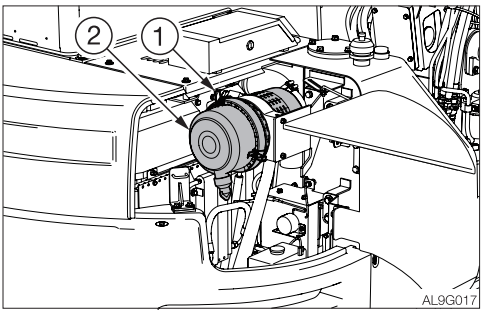

1. Open the side cover.

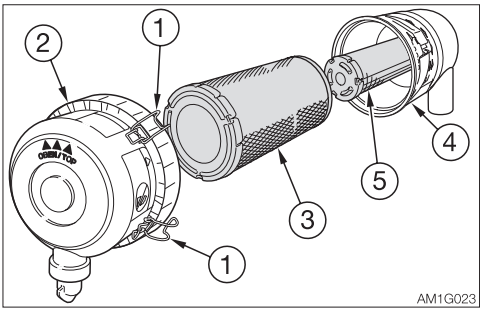


2. Loosen the clamps (1) and remove the dust cup (2).
3. Clean the inside of the dust cup (2).
4. Remove the primary element (3).
   Do not remove the secondary element yet.
5. Clean the inside of the body (4).
6. Remove the secondary element (5).
7. Install the new elements. Press them firmly into the body (4).
8. Install the dust cup (2) with its “▲▲▲ OBEN/TOP” mark facing up, and then fasten it with the clamps (1).

REPLACING THE AIR BREATHER FILTER

⚠ WARNING

Oil may spurt out if caps or filters are removed or pipes are disconnected before releasing the pressure in the hydraulic system.

- **Press the air breather button to relieve the tank pressure.**

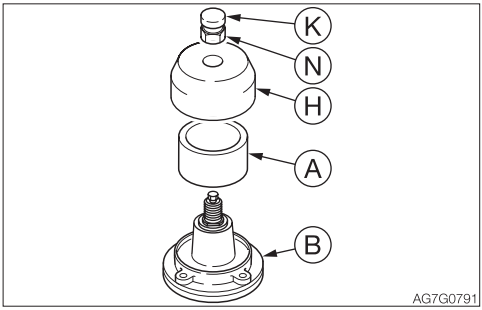

1. Open the side cover.
2. Press the button (K) to relieve the internal pressure from the tank.
3. Remove the nut (N) on the air breather.
4. Remove the cover (H).
5. Replace the filter (A).
6. Install the cover (H) on the body (B).
7. Install the nut (N).

INSPECTING AND ADJUSTING THE ENGINE VALVE CLEARANCE

This operation requires experience. Ask your sales or service dealer for it.

EVERY 1500 HOURS

INSPECTING THE CRANKCASE BREATHER SYSTEM

This operation requires experience. Ask your sales or service dealer for it.

CLEANING THE EGR COOLER (CLEANING THE WATER SIDE AND EXHAUST AIR PASSAGE BLOWER)

This operation requires experience. Ask your sales or service dealer for it.

MEMO

EVERY 2000 HOURS

CLEANING THE ENGINE COOLING SYSTEM


Replace the coolant after the two-year operation even if the running time is less than 2000 hours.

⚠ WARNING


- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The engine, muffler, radiator and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
  - **The engine coolant is also hot and under high pressure immediately after the engine is stopped. Be careful when loosening the caps or plugs. Working on the machine under these conditions could result in burns or injuries due to the hot coolant spurting out.**
- **If maintenance must be performed with the engine running, always work as a two person team communicating each other.**
  - **One person must sit in the operator's seat so that he/she can immediately stop the engine when necessary. He/she must take care not to touch the lever or pedal unless necessary.**
  - **The one who performs maintenance must make sure to keep his/her body or clothing away from the moving part of the machine.**
- **Standing at the back of the machine while the engine is running is extremely dangerous, as the machine could move suddenly. Never stand at the back of the machine while the engine is running.**
- **Do not remove the radiator cap or the drain plug when the cooling water is hot. Stop the engine and wait until the engine and the cooling water cool. Then, slowly loosen the radiator cap and the drain plug to remove them.**

When cleaning, if the temperature of the coolant is low, the thermostat will be closed and the coolant will not circulate in the radiator. Heat the coolant water to at least 90°C (194°F) before cleaning.

1. Open the engine hood.

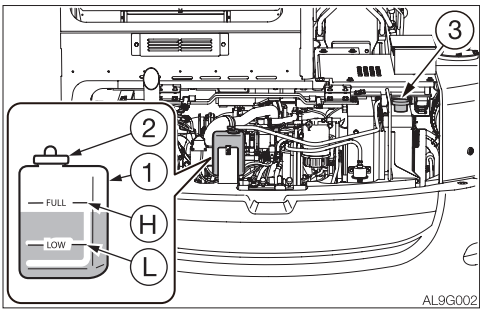

2. Gradually loosen the radiator cap (3) to release the internal pressure, and then remove the cap.

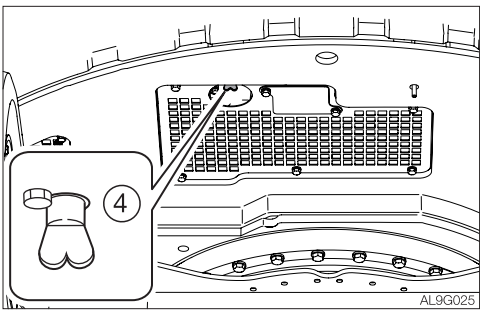

3. Place a pan for catching the waste coolant under the drain plug (4), and then loosen the drain plug (4) to drain the coolant.
4. Tighten the drain plug (4).
5. Add tap water to the radiator through the coolant fill port up to the top of the port. Take time and slowly add water, so that no air enters the radiator.
6. Close the radiator cap (3).
7. Start the engine and run it at a speed slightly above low idling. Raise the water temperature to at least 90°C (194°F), and then run the engine for about 10 minutes with the thermostat open.

8. Stop the engine, wait until the cooling water temperature becomes lower, and then remove the drain plug (4) to drain the water.
9. After draining, clean the cooling system using a cleaning agent. When using the cleaning agent, follow the instructions included with the agent.
10. Repeat the steps 4 to 8 to rinse the cooling system.
11. Tighten the drain plug (4).
12. Take time and slowly add the new coolant (mixture of antifreeze and tap water) to the radiator through the fill port until it is full.
13. Close the radiator cap (3).
14. Warm up the engine. Use the meters to check that there are no irregularities in the cooling system at this time.
15. Increase the water temperature to at least 90°C (194°F). Then, run the engine for about 10 minutes with the thermostat kept open.
16. Stop the engine, wait until the cooling water temperature becomes lower, and then check the level of coolant in the radiator.
    If necessary, add cooling water until the radiator is full.
17. Close the radiator cap (3).
18. Clean the interior of the reserve tank (1), and then add coolant to the upper limit (H).
19. When the coolant has been replaced, inspect the coolant level once again after operating the machine.
    Once the machine is operated, the coolant is distributed throughout the entire system, resulting in the lower coolant level.
    Replenish the cooling water that has been used.

LAPPING THE ENGINE VALVE SEATS (IF NECESSARY)

This operation requires experience. Ask your sales or service dealer for it.

EVERY 3000 HOURS

INSPECTING THE TURBOCHARGER (BLOW WASH AS NECESSARY)

This operation requires experience. Ask your sales or service dealer for it.

INSPECTING, CLEANING AND CHECKING OPERATION OF THE EGR VALVE

This operation requires experience. Ask your sales or service dealer for it.

CLEANING THE EGR LEAD VALVE

This operation requires experience. Ask your sales or service dealer for it.

INSPECTING THE OPERATION OF THE AIR INTAKE THROTTLE VALVE

This operation requires experience. Ask your sales or service dealer for it.

INSPECTING AND CLEANING THE FUEL INJECTOR

This operation requires experience. Ask your sales or service dealer for it.


EVERY 4000 HOURS

REPLACING THE HYDRAULIC OIL AND CLEANING THE SUCTION STRAINER

⚠ WARNING

- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The engine and the hydraulic system and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
  - **The hydraulic oil is also hot and under high pressure immediately after the engine is stopped. Be careful when loosening the caps or plugs. Working on the machine under these conditions could result in burns or injuries due to the hot oil spurting out.**
- **Oil may spurt out if caps or filters are removed or pipes are disconnected before releasing the pressure in the hydraulic system.**
  - **Press the air breather button to relieve the internal pressure from the tank.**
  - **When removing plugs or screws, or when disconnecting hoses, stand to the side and loosen them slowly to gradually release the internal pressure before removing.**

1. Slew 45° clockwise and set the machine to the hydraulic oil level inspection posture.
   Refer to “Inspecting the hydraulic oil tank level and replenishing” on page 5-21.

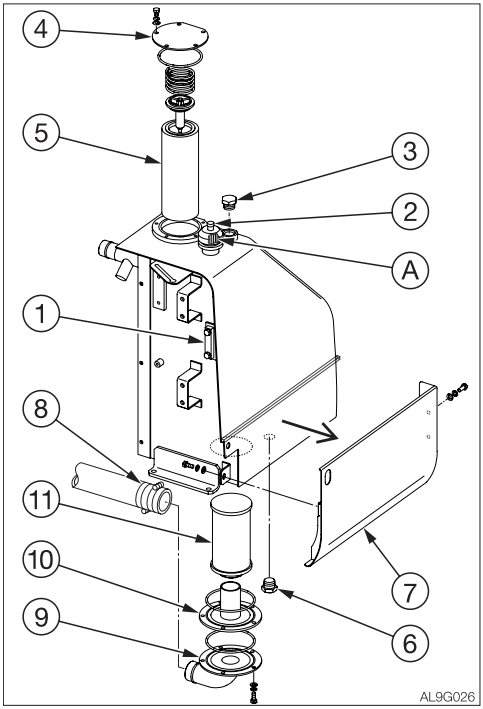

2. Press the button (2) to relieve the internal pressure from the tank.
3. Replace the air breather filter (A).
   Refer to “Replacing the air breather filter” on page 5-47.
4. Remove the plug (3).
5. Loosen the bolts and remove the flange (4).
6. Remove the return filter (5).
7. Place a pan under the plug (6) to catch the waste oil.
8. Loosen the drain plug (6) and drain the hydraulic oil.
9. Loosen the three bolts and remove the panel (7).
10. Loosen the hose clip (8).
11. Loosen the bolts and remove the flange (9).
12. Remove the flange (10) and the suction strainer (11), and then clean them.
13. Clean the inside of the hydraulic oil tank.
14. Install the suction strainer (11) on the flange (10).
15. Install the flanges (10) and (9) on the tank, and then reconnect the hoses as


before.
16. Tighten the drain plug (6).
17. Install the new return filter (5) and the flange (4) on the tank.
18. Open the side cover.
19. Add hydraulic oil from the hole of plug (3) up to the level between the upper limit (H) and the lower limit (L) in the sight gauge (1).
20. Tighten the plug (3).
21. Install the panel (7).
22. Bleed air from the hydraulic oil circuit following “Bleeding air” below.
23. Set the machine to the hydraulic oil level inspection posture and inspect the oil level after the oil cools.
    Refer to “Inspecting the hydraulic oil tank level and replenishing” on page 5-21.

Bleeding air

IMPORTANT: After replacing the hydraulic oil or hydraulic devices, or after performing maintenance of the hydraulic devices, bleed air from the hydraulic circuits and hydraulic devices. Failure to do so may damage the hydraulic devices.


• Hydraulic pump

1. Tilt up the platform.
   Refer to “Tilting up the platform” on page 5-64.

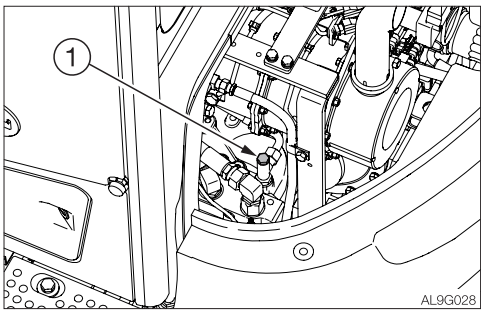

2. Loosen the vent plug (1) on the hydraulic pump.
3. Once hydraulic oil overflows from the vent plug hole (1), tighten the vent plug (1).

• Slew motor

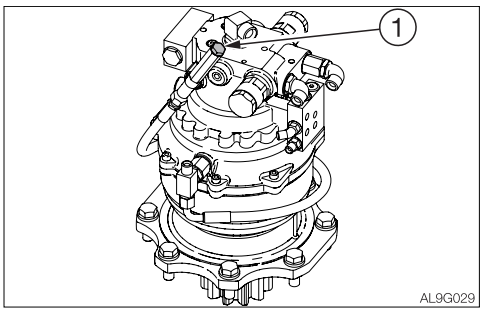

1. Loosen the air-bleeding plug (1).
2. Tighten the plug (1) once the hydraulic oil overflows from the air-bleeding plug hole (1).

• **Cylinders**

1. Start the engine, let it run at a low-idling speed for 10 minutes.
2. Maintain the engine at low idle, and then slowly extend and retract each cylinder 4 or 5 times, without letting them reach the stroke end.
3. While running the engine at high speed, slowly extend and retract each cylinder 4 or 5 times, without letting them reach the stroke end.
4. Return the engine speed to low idle, and then slowly extend and retract each cylinder 4 or 5 times to the stroke end.

• **Emergency shut-off valve**


This operation is dangerous and requires experience. Ask your sales or service dealer for help.
If air is not released, the working equipment could become slow in reacting to the operation of the operator and show unexpected behavior.

⚠ WARNING

When removing plugs or screws, or when disconnecting hoses, stand to the side and loosen them slowly to gradually release the internal pressure before removing.


1. Place a pan under the hose (A) or (B) to catch the waste oil.
2. Start the engine and run it at low idle.
3. Fully lower the safety lock lever to the unlock position.

Boom

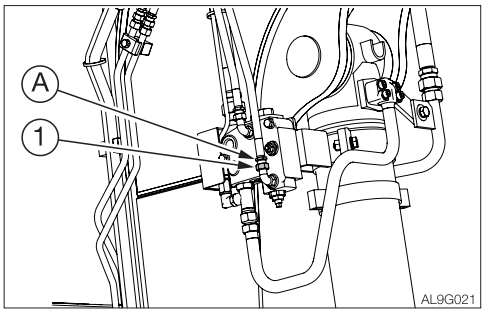

4. Hold the hose fitting (A) in place with a wrench and slowly loosen the hose nut (1).
5. Slowly move the boom in the “Boom lower” direction a little until there are no more air bubbles coming from the hose nut (1) joint.
6. Hold the hose fitting (A) in place with a wrench and tighten the hose nut (1).

Arm

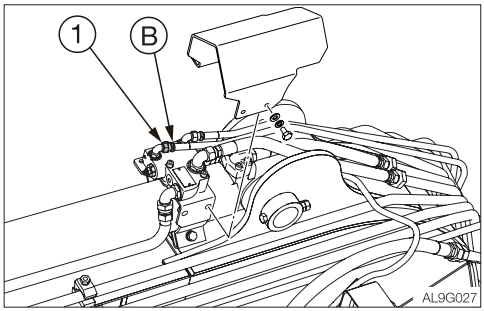

4. Hold the hose fitting (B) in place with a wrench and slowly loosen the hose nut (1).
5. Slowly move the arm in the “Arm lower” direction slightly, until there are no more air bubbles coming from the hose nut (1) joint.
6. Hold the hose fitting (B) in place with a wrench and tighten the hose nut (1).

WHEN REQUIRED

REPLACING THE BUCKET TEETH AND THE SIDE CUTTERS (IF EQUIPPED)


Replace the bucket teeth if the tooth points are worn. Do not wait until the bucket is damaged.

⚠ WARNING


- **Before performing maintenance or repairs under the machine, lower all moveable working equipment to the ground or in the lowermost position.**
- **To prevent unexpected movement, firmly secure the working equipment when repairing or replacing the bucket teeth or side cutter.**
- **When using a hammer, pins may fly out or metal particles may be scattered. This may lead to serious injury.**
  - **If hard metal parts such as pins, bucket teeth, side cutter or bearings are hit with a hammer, wear protective gear such as safety goggles and gloves.**
  - **When hitting pins or bucket teeth, always check that there is no one in the surrounding area.**
- **Do not allow unauthorized personnel in the work area while working.**

Removing

1. Clean the bucket and park the machine on a flat and rigid ground.

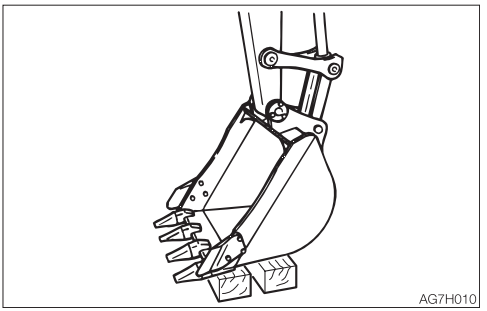


2. Place the bucket with its bottom flat on the blocks so that the locking pin can be knocked out.
3. Remove the key, and then check that the bucket is stable.

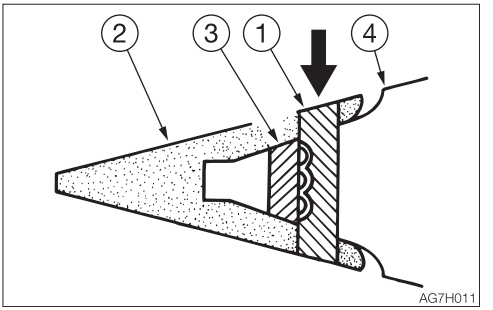

4. Knock out the locking pin (1) and remove the point (2).


Note: If the drift is set against rubber pin lock (3) when it is hit, the rubber pin lock may break. Set it against the back of the locking pin.

5. Remove the rubber pin lock (3). Check if the rubber pin lock is still usable. Replace it if it is as follows.

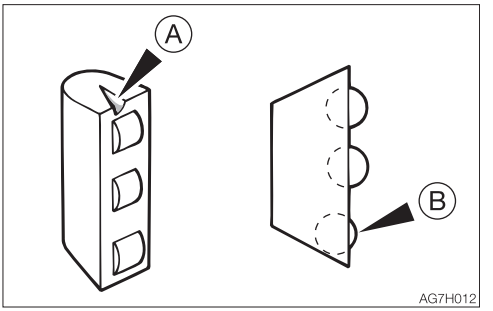


A .....There are cracks in the rubber and the roller is coming off.
B .....The roller is dented when pressed with a finger.


Installation

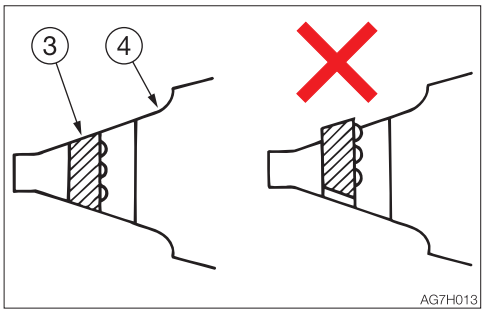

1. Remove the dirt on the surface of adaptor and the inner part of tooth, make the better contact on the mating part.
2. Push rubber pin lock (3) into the welding adaptor (4).
   Do not let the rubber pin lock stick out from the welding adaptor surface.

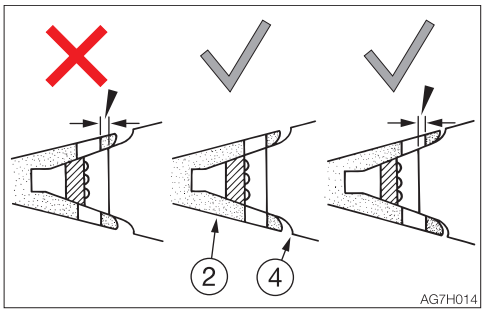


3. Install the point (2) onto the welding adaptor (4).
   Insert the point so that the surface behind the point's pin hole is aligned with the surface behind the welding adapter's pin hole.

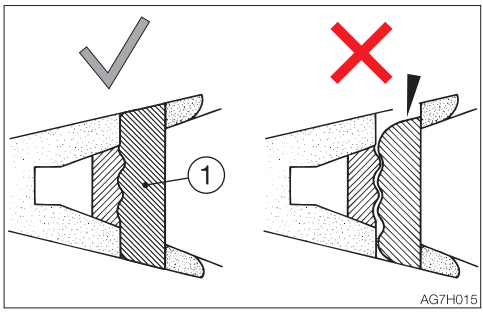

4. Knock out the locking pin (1).
   Check that the end surfaces of the locking pin just knocked out are aligned with the upper and lower surface of the point. Do not use the worn locking pin.
   The life of the teeth can be lengthened and the frequency of its replacement can be reduced by turning it upside down so that it will wear evenly.
   Replace the rubber pin lock and locking pin at the same time as replacing the teeth. This makes it possible to prevent the teeth from falling out

- **Side cutter**

Installation

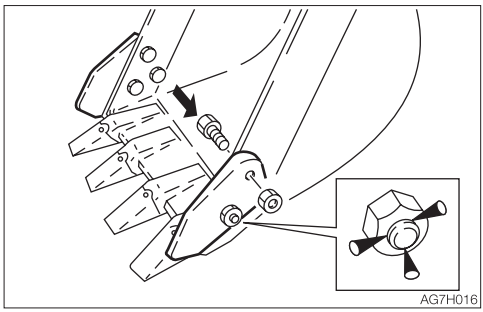


1. Insert the bolts from the inner of the bucket and tighten the side cutter with nuts.
   Tightening torque: 475 N·m (350 ft-lb.)
2. Caulk the bolts with a punch at three spots along the periphery of the screw to prevent the nuts from coming loose.

REPLACING THE BUCKET

⚠ WARNING

- **Before performing maintenance or repairs under the machine, lower all working equipment to the ground or in the lowermost position.**
- **If maintenance must be performed with the engine running, always work as a two person team communicating each other.**
  - **One person must sit in the operator's seat so that he/she can immediately stop the engine when necessary. He/she must take care not to touch the lever or pedal unless necessary.**
  - **The one who performs maintenance must make sure to keep his/her body or clothing away from the moving part of the machine.**
- **When using a hammer, pins may fly out or metal particles may be scattered. This may lead to serious injury.**
  - **If hard metal parts such as pins, bucket teeth, side cutter or bearings are hit with a hammer, wear protective gear such as safety goggles and gloves.**
  - **When hitting pins or bucket teeth, always check that there is no one in the surrounding area.**
- **When aligning the pin holes, always do so by checking them visually. Do not insert your finger in the pin hole, or you could lose your finger.**


Removing

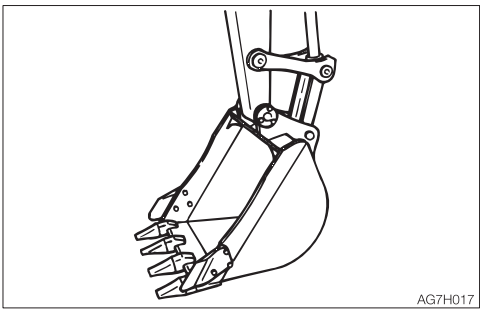

1. Lower the bucket to the ground as shown on the figure above in a stable position.


Note: When removing pins, set the bucket so that it is barely touching the ground. If the bucket is firmly touching the ground, the resistance will be great and it will be difficult to remove the pin.

2. Set the safety lock lever to the locked position and stop the engine.

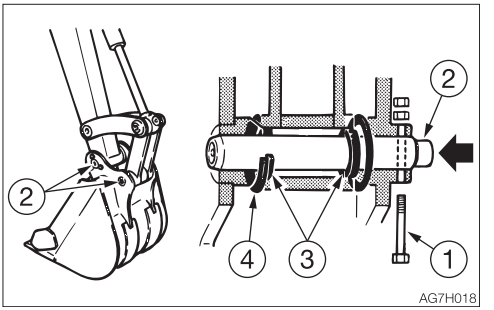


3. Remove the bolt (1).
4. Hammer the pin (2) out of the bucket.
5. Remove the bucket.
   Inspect the pin seal (3) and replace it if it is deformed or damaged. (See next page.)


Installation

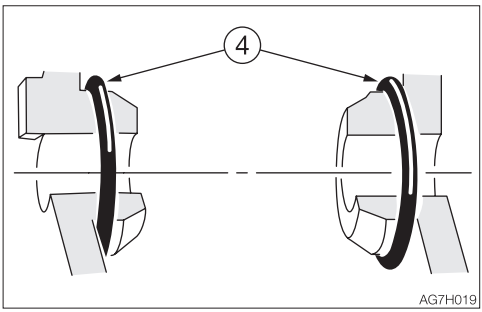


1. Set the O-ring (4) on the bucket as shown on the figure above.

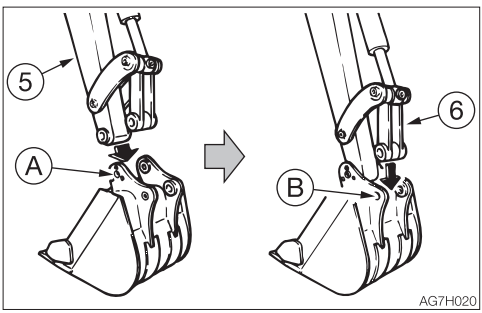

2. Align the pin hole (A) on the bucket with the pin hole on the arm (5), and install the pin (2).
3. Operate the cylinder, align the pin hole (B) on the bucket with the pin hole on the link arm (6), and install the pin (2).

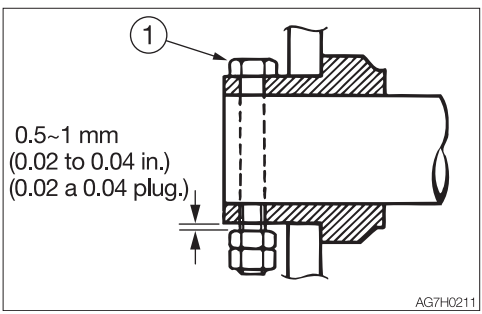


4. Align the turn prevention holes, and then install the bolt (1) and the nut. Be sure to leave a gap of about 0.5 to 1 mm (0.02 to 0.04 in.) between the nut and bucket bush, or the nut will come loose.

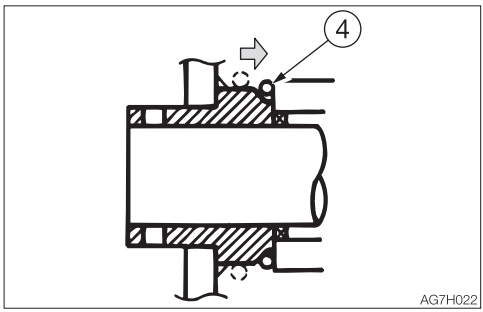

5. Adjust the gap between the bucket and the arm.
   Refer to “Adjusting the gap between the bucket and arm (If equipped)” on page 5-60.
6. Slide the O-ring (4).

Replacing the pin seal

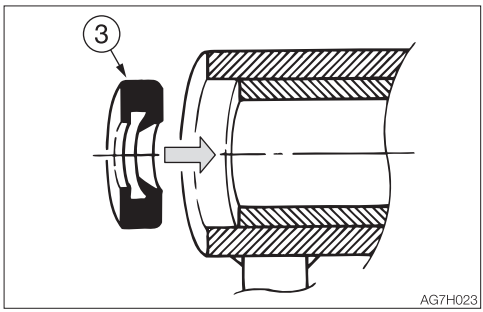


1. Set the pin seal (3) in the direction shown on the figure above.
2. Use a mallet to slowly press the pin seal in. Be careful not to damage the seal.


ADJUSTING THE GAP BETWEEN THE BUCKET AND ARM (IF EQUIPPED)

⚠ WARNING


- **Before performing maintenance or repairs under the machine, lower all working equipment to the ground or in the lowermost position.**
- **To prevent unexpected movement, securely block the working equipment when adjusting the gap.**

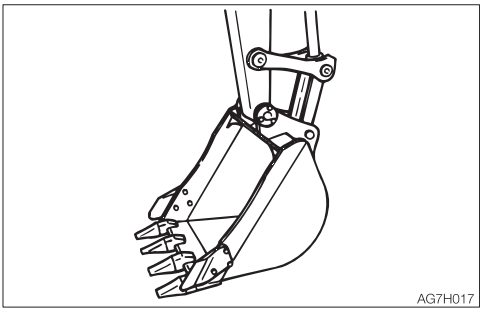


1. Lower the bucket to the ground as shown on the figure above in a stable position.
2. Check that the bucket dose not move, and then set the safety lock lever to the locked position and stop the engine.

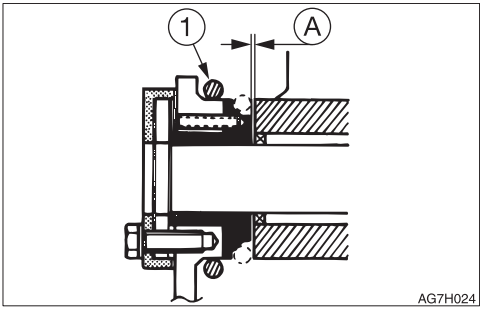

3. Move the O-ring (1) to bring the gap (A) into view and measure the width of the gap (A).
   The gap (A) should be 0.5 mm (0.02 in.).
   Swing the upperstructure slightly to the left and lightly press the arm point to the left side of the bucket (the side without an adjuster).

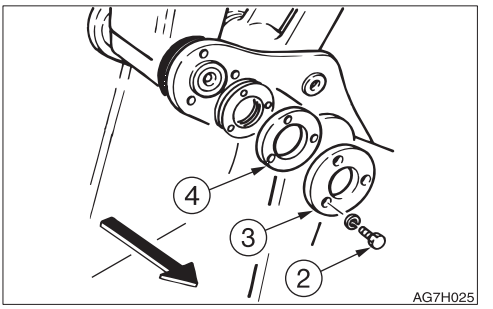

4. Remove the three bolts (2), the end plate (3) and flange (4).

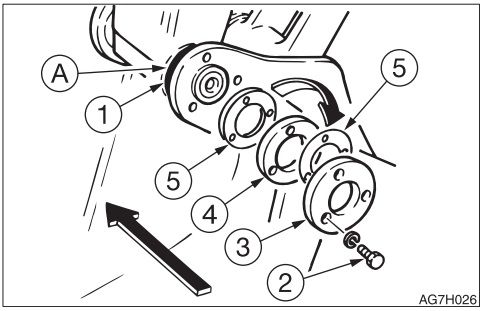

5. Pull out the adjustment shim(s) (5) corresponding to the gap (A) from between the flange (4) and the bucket body.
   Adjustment shim thickness : 0.5 mm (0.02 in.)
   Be careful that the gap is no less than 0.5 mm (0.02 in.) after adjustment.

Note:
Example (for a gap of 2 mm or 0.08 in.):
2 mm - 0.5 mm (standard value)= 1.5 mm (0.06 in.)
In the above example, three shims (5) should be removed.


6. Insert the adjustment shim(s) (5) removed in step 5 above between the end plate (3) and the flange (4), and then fasten it in place with the three bolts (2).
   · Tightening torque for bolts (2): 83 N·m (61.5 ft-lb.)
7. Return the O-ring (1) to the original position.

INSPECTING AND REPLENISHING THE WINDSHIELD WASHER FLUID

⚠ WARNING

Choose ethyl alcohol as washer solution. Do not use methyl alcohol as washer solution. It could damage the eyes.

Use a windshield washer fluid designed specifically for motor vehicles. Follow the instructions included with the washer fluid.

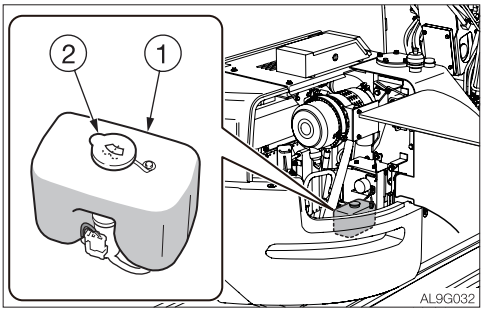

Inspection

1. Open the side cover.
2. Inspect the washer tank (1) and add washer fluid if the level is low.

Replenishing

1. Mix the washer fluid to the prescribed concentration.
2. Remove the cap (2) and add washer fluid. Keep the dust away while replenishing the washer fluid.
3. Install the cap (2).

INSPECTING AND CLEANING THE DPF SOOT FILTER

For the inspection and maintenance of the DPF soot filter or oxidation catalyst, follow the procedure below.
This operation requires experience. Ask your sales or service dealer for it.

- Do not modify the DPF without permission. If modified, it may be damaged or malfunction may occur. As a result, an expensive repair work may be required.
- Do not reuse the DPF that has been dropped to the ground. There is catalyst fitted inside the DPF. It can be damaged if strong shocks are applied to it.

• Soot filter
Cleaning:
The soot filter must be cleaned if any of the error codes listed below appears. When cleaning becomes necessary, the ECM error warning lamp or the vehicle and engine emergency lamp starts flashing and an alarm is sounded.
Display the engine error code screen to check the SPN and FMI numbers.

Error code		Classification	Description
SPN	FMI		
3719	7	Warning	DPF recovery regeneration inhibit
3719	9	Warning	DPF recovery regeneration failure
3720	0	Warning	DPF ash cleaning request 2
3720	16	Caution	DPF ash cleaning request 1
522573	0	Caution	DPF over accumulation
522574	0	Caution	DPF over accumulation


Replacement:
Replace every 9000 hours.

• Oxidation catalyst
Replacement:
Replace every 9000 hours.

DRAINING THE WATER FROM THE WATER SEPARATOR

⚠ WARNING

- **Do not smoke or permit open flames while handling fuel or working on the fuel system.**
- **Stop the engine in a well-ventilated place and allow it to cool down before performing maintenance.**
- **Clean up spilled fuel immediately.**

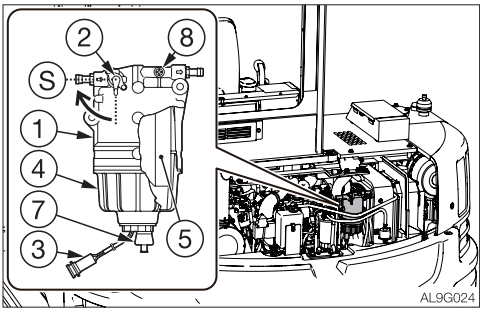

1. Open the engine hood.
2. Place a pan under the drain valve (7) to catch fuel.
3. Open the drain valve (7) and drain the water.
   If the water does not drain easily, loosen the plug (8).
4. Close the drain valve (7) and tighten the plug (8).
   Refer to “Bleeding air from the fuel system” on page 6-8.


LUBRICATING THE LEVERS AND PEDALS

⚠ WARNING


Set the machine to the parking posture, stop the engine, remove the starter key and store it. Failure to do so may result in the machine moving abruptly, leading to serious injury or death.

If the levers or pedals no longer move smoothly, grease them.


Operating levers

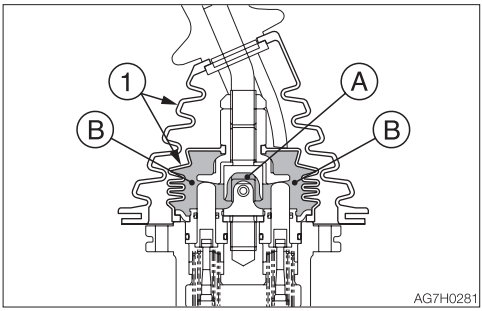


Travel levers/pedals

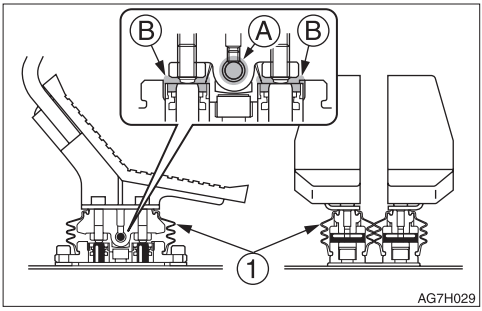

Offset pedal

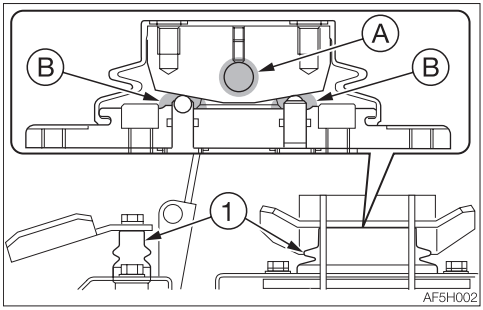

Dozer blade lever

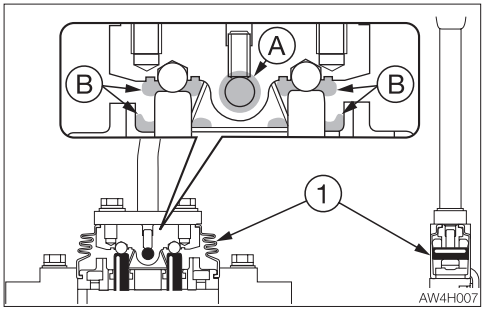

1. Remove the lower mount section of the boot (1) and turn it upward.
2. Wipe off the old grease.
3. Apply grease to points (A) and (B).
4. Set the boot (1) back as it was.

TILTING UP THE PLATFORM


For inspection and maintenance, the platform is designed so that it can be tilted up.

⚠ WARNING


- **Raising or lowering the platform while the engine is running may cause the machine to move, resulting in serious injury or death. Stop the engine before raising or lowering the platform.**
- **When the platform is tilted up, be sure to firmly secure the platform with the stopper (D) to prevent it from falling. When the stopper is removed to lower the platform, be careful not to be caught between the platform and the main body.**

IMPORTANT: Before the platform is tilted up, to avoid the interference between the cab and the boom, fully offset the boom to the right, fully extend the arm and the bucket cylinders and lower the hoe attachment to the ground.
IMPORTANT: When raising or lowering the platform, be sure to raise the filler port (2) upright and secure it in the retraction position so that the filler port (2) does not interfere with the cab.


Raising (Tilt up)

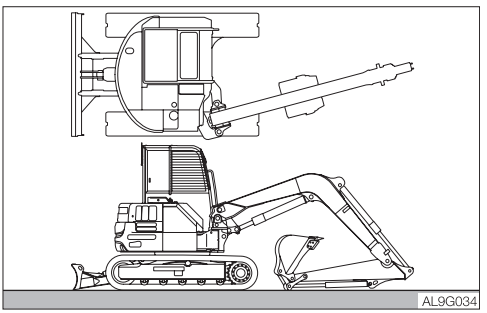


1. Select a firm, level surface, set the machine to the posture shown in the diagram above, ground the working equipment, then stop the engine.
2. Raise the safety lock lever to the lock position, and then close the cab door.

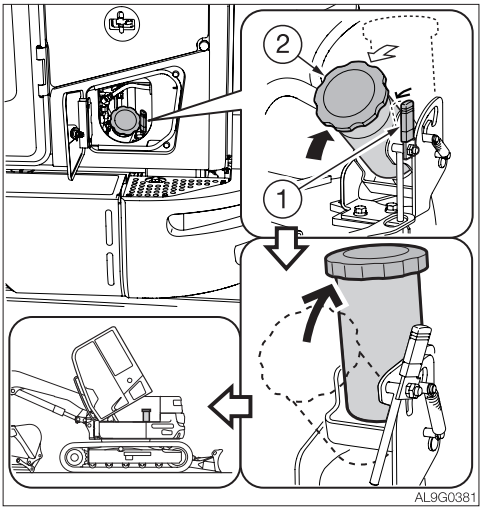

3. Open the fuel lid.
4. Raise the filler port (2) upright to secure it in the retraction position while pulling the lever (1) toward you to release the lock.
   · The cover (3) is locked when the lever (1) is toward you. The cover (3) is released when the filler port (2) is pushed to move the lever (1) away from you (the lever (1) cannot be pushed by hand).
5. Close the fuel lid.

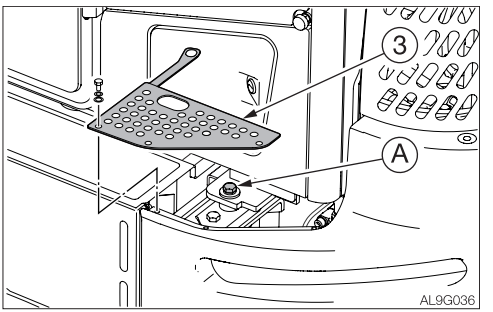

6. Loosen the bolts and remove the cover (3). The cover (3) cannot be removed without raising the filler port (2) upright in the retraction position.

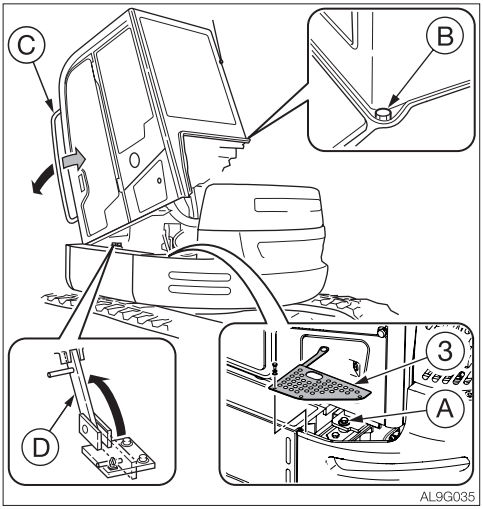

7. Remove the lock bolts (A) and (B).
8. Pull the upper part of the handrail (C) in the forward direction of the vehicle and slowly raise the platform.
   (Tilt up: approx. 30°)
9. Lift the stopper (D) and insert it into the platform's holder to support the platform.
   If you need to run the engine while the platform is raised follow these steps.
10. Make sure that all levers and pedal are in neutral positions.
11. Turn the throttle controller to the low idling position.
12. Start the engine.
13. Be sure to stop the engine after inspection and maintenance.

Lowering

IMPORTANT: Before lowering the platform, make sure that the filler port (2) is in the retraction position.


1. Remove the stopper (D), and set it back to the original position.
2. Push the upper part of the handrail (C) in the rear direction of the vehicle and lower the platform.
3. Tighten the lock bolts (A) and (B).
   · Tightening torque: 135 N·m (99.6 ft-lb)
4. Install the cover (3).
5. Open the fuel lid.
6. Fold the filler port (2) toward you to secure it in the fill position.
7. Close the fuel lid and lock it.

INSPECTING THE RUBBER CRAWLERS

Repair or replace the rubber crawlers if their condition becomes as described below. Consult your sales or service dealer for repair or replacement.


Rubber crawler
Replace the crawler if the entire crawler is stretched and cannot be adjusted.

(1) Lug

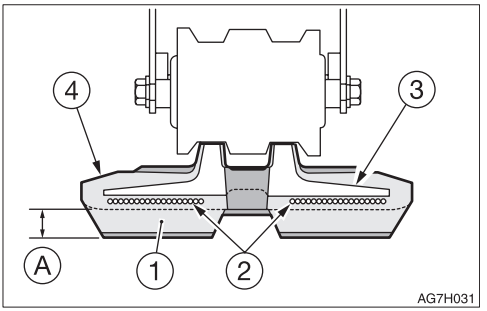


Replace if the height of (A) is 5 mm (0.2 in.) or below.

(2) Steel cord

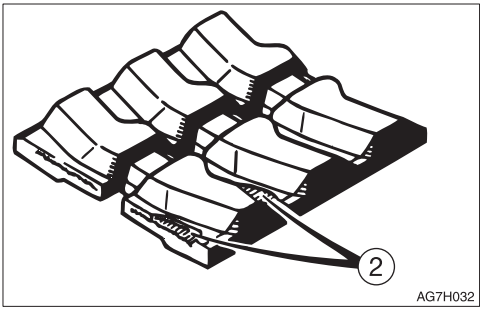


Replace if the steel cord is exposed for two links or more.
Replace if the half or more of the steel cords on one side are cut.

(3) Metal core

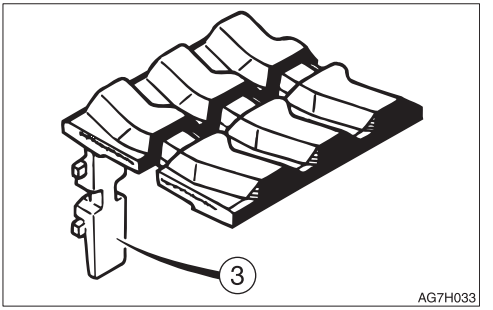

Replace if even one metal core is off.

(4) Rubber

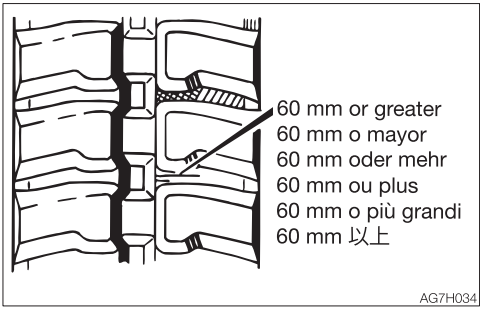

Repair if there are cracks of 60 mm (2.4 in.) or greater in length.
If the steel cord is visible, repair as soon as possible, regardless of the length of the crack.

REPLACING THE RUBBER CRAWLERS


⚠ WARNING

- **If you must work beneath the raised machine or working equipment, always use wood blocks, jack-stands or other rigid and stable supports. Never get under the machine or working equipment if they are not sufficiently supported.**
- **If maintenance must be performed with the engine running, always work as a two person team communicating each other.**
  - **One person must sit in the operator's seat so that he/she can immediately stop the engine when necessary. He/she must take care not to touch the lever or pedal unless necessary.**
  - **The one who performs maintenance must make sure to keep his/her body or clothing away from the moving part of the machine.**


IMPORTANT: When replacing the crawler belts, replace the right and left belts at the same time.
IMPORTANT: When the travel speed button is set to the 2nd speed side while the engine is running, the tensioning cylinder rods extend and the crawler belt tension is increased. Keep the engine at the 1st speed when replacing. Do not set to the 2nd unless for increasing tension.

Note: This machine uses a hydraulic cylinder to adjust the tension of the crawler belts. It is not necessary to regularly perform adjustments of the crawler belt tension.


Removal

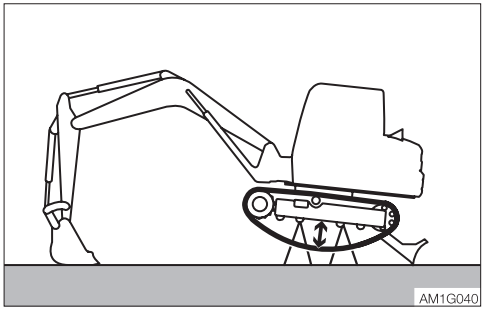

1. Start the engine and raise the machine body with the hoe attachment and the dozer blade.
2. Stop the engine.

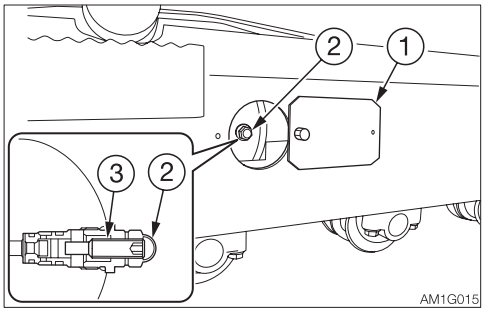


3. Remove the valve cover (1) at the center of one of the crawler frames.
4. Turn the plug (2) counterclockwise and remove it.
5. Turn the stem (3) counterclockwise with a hex wrench to completely loosen the tension of the crawler.
6. Once the crawler belt is completely loose, tighten the stem (3) until it is firm.
   - Tightening torque: 18.6 to 21.6 N·m (13.7 to 15.9 ft-lb.)
7. Tighten the plug (2).
   - Tightening torque: 18.6 to 21.6 N·m (13.7 to 15.9 ft-lb.)
8. Do the same for the other side.

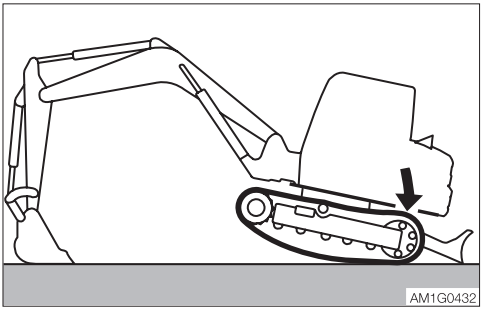


9. Slowly lower the dozer blade side of the machine body. (Do not start the engine.)
10. Lower the machine body until the crawlers contact the ground with the maximum slack.
11. When the crawlers are disengaged from the idlers, slide the crawlers to the outside and remove them.
12. Remove the crawlers from the sprockets, and then remove the crawlers from the crawler frames.

Installation


1. Engage the crawlers around the left and right sprockets.
2. Set the left and right crawlers on the idlers.
3. Start the engine.
4. Press the travel speed button once to set it to the 2nd speed side. The left and right crawler belts are tightened simultaneously.

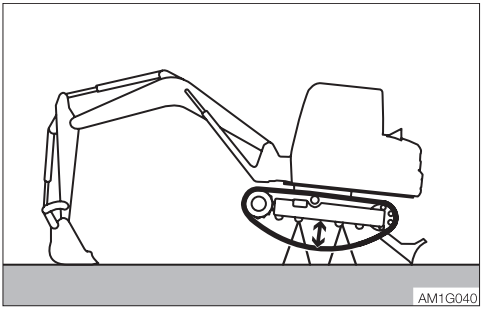

5. Check that the crawler belts are properly tightened.

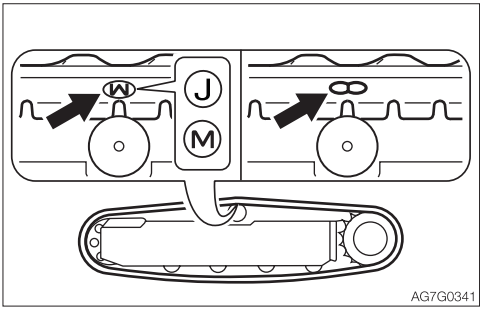

6. For rubber crawlers, move the machine so that the “M”, “J” or “∞” mark at the joint is at the top center of the crawler frame.

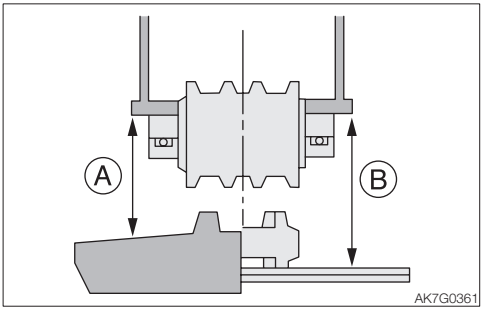

7. Inspect the gap (A or B) between the bottom surface of the frame at the center of the crawler frame and the top surface of the crawler.
   The gap (A or B) must be within the following range:

   (A)..... Rubber crawler
   160 to 180 mm (6.3 to 7.1 in.)
   (B)..... Steel crawler
   270 to 290 mm (10.6 to 11.4 in.)
   (B)..... Segmental rubber crawler
   257 to 277 mm (10.1 to 10.9 in.)

Note: When the self-adjusting shoe tension system is properly working, the shoe should have the gap (A or B) as described above, at the time of installation.
When the machine is lowered and driven in 2nd speed, the crawler belts will be stretched to the correct tension. The values of shoe tension (gap values) after the 2nd speed travel are different from those described above.

EVERY 2 YEARS

REPLACING THE RECEIVER DRYER

This operation requires experience. Ask your sales or service dealer for it.

MAINTENANCE DURING EXTENDED STORAGE PERIOD

Storage procedures

If the machine is to be stored for 30 days or more, store it indoors. If it must be stored outdoors, park the machine on a surface laid with lumber on a flat ground, and place a waterproof cover over it so that it stays dry.

1. Clean the machine.
2. Inspect for oil leakage, water leakage, cracks and loose nuts and bolts.
3. Add fuel and replace the hydraulic oil and oil.
4. To prevent rusting and freezing, replace the engine coolant with long-life coolant (LLC).
   Refer to “Cleaning the engine cooling system” on page 5-50.
5. Use the grease gun to lubricate the grease fittings.
6. Fully retract the bucket and arm cylinders and lower the bucket and dozer blade to the ground.
7. Apply rust-inhibiting oil to the hydraulic cylinder rods.
8. Disconnect the negative cable from the battery and cover the battery to prevent freezing.

During storage

⚠ WARNING

- **Do not operate the machine in an enclosed area without adequate ventilation.**
- **If natural ventilation is not possible, install ventilators, fans, exhaust extension pipes or other venting devices.**

1. To prevent rusting, operate the machine once a month so that the oil can be circulated throughout the system.
2. Inspect the battery and recharge it as necessary.
   Ask your sales or service dealer for recharging.

Starting the machine after storage

IMPORTANT: If the above “Storage procedures” have not been followed during the extended storage periods, consult your sales or service dealer before starting the machine again.

1. Wipe off the rust-inhibiting oil that was applied on the piston rods of the hydraulic oil cylinders.
2. Add oil or grease as necessary.

Returning the engine to service


1. Perform the daily checks.
2. The engine should be pre-oiled before startup.
   a. Crank the engine, leaving the fuel system shut off so the engine will not start, for 15 seconds.
   b. Then pause for 30 seconds.
   c. Repeat the procedure until you have cranked the engine for a total of one minute. This will circulate the oil in the engine’s lubrication system.
3. Prime the fuel system.
4. Start the engine. Allow the engine to idle for approximately 15 minutes while you check for:
   · Proper oil pressure
   · Fuel, engine oil or coolant leaks
   · Proper operation of the indicators and/or gauges
5. Avoid prolonged operation at minimum or maximum engine speeds and loads for the remainder of the first hour of operation.

TROUBLESHOOTING




SYMPTOMS THAT ARE NOT MALFUNCTIONS

The symptoms listed below are not malfunctions.

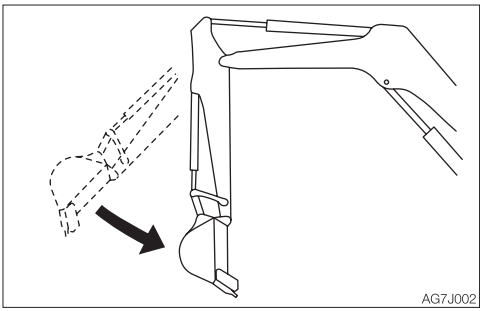

- The arm retracting speed momentarily slows down when it reaches an almost vertical position while the engine is running at low speed.

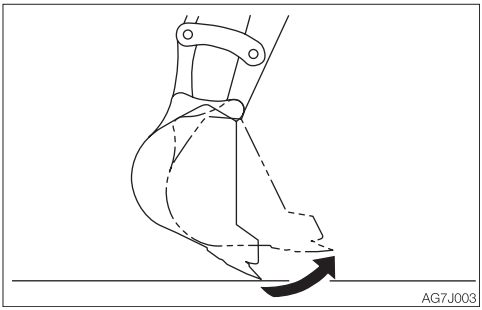


- The bucket teeth moving speed momentarily slows down when it reaches an almost horizontal position while the engine is running at low speed.
- The slew motor produces noise at the beginning and end of the slewing.
- The travel motor produces noise when stopped suddenly from its high speed traveling.
- The control valve produces noise if excessive force is applied to the working equipment or when it moved to the stroke end.
- It becomes less easy to operate the machine when an attachment weighing more than a standard arm or bucket is installed.
- In some cases smoke may be emitted from the tail pipe while the DPF regeneration is being performed. This is not a failure; it is due to burning of the particulate matter (PM).
- In some cases the noise associated with the DPF regeneration operation or cancel operation may change; this is not a failure.

IF THE ENGINE OVERHEATS

⚠ WARNING

- **Do not open the engine hood when steam is coming from it. The steam or hot water may spurt out and cause burns.**
- **Do not try to remove the radiator cap or the drain plug when the cooling water is hot. Stop the engine, wait until the engine and the radiator cool, and then slowly loosen the radiator cap to release the internal pressure.**
- **Before performing maintenance, stop the engine and allow the machine to cool down.**

The symptoms listed below indicate overheating.

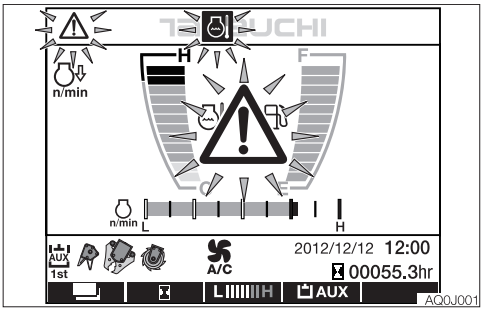

- An alarm is sounded and the engine emergency lamp and the coolant temperature warning lamp start flashing.
- The water temperature gauge level is in the red zone.
- Steam comes from the engine room.

Remedy procedure

1. Park the machine in a safe place.
2. Check if steam is coming out of the closed engine hood.
3. If there is steam, stop the engine immediately and contact your sales or service dealer for repair. If steam, is not coming out run the engine at low idle and let the water temperature cool down.
4. When the water temperature gauge level drops in the green zone, stop the engine.
5. Perform the inspections and the remedies listed below once the engine cools down.
   - Fan belt slack..... Adjust
     Refer to page 5-24.
   - Coolant level ..... Add
     Refer to page 5-18.
   - Water leakage..... Repair
   - Radiator fins..... Clean
     Refer to page 5-39.
   - Sediment in cooling system
     ..... Clean
     Refer to page 5-50.

If the problem persists after the above remedies, contact your sales or service dealer for repair.

IF THE BATTERY GOES DEAD

The symptoms below indicate that the battery is dead.
- The starter motor does not turn or fails to start the engine.
- The horn is too weak.

Remedy procedure

Start the engine using the booster battery on the other vehicle (booster vehicle) and the jumper cables.


⚠ WARNING

- **When starting the engine using the jumper cables, be sure to connect the cables by following the proper steps. Improper use of jumper cables can result in battery explosion or unexpected machine motion.**
  - **Do not allow the booster vehicle and the machine with a dead battery (dead machine) to touch each other.**
  - **Do not allow the positive (+) and the negative (–) clips of the jumper cables to touch each other.**
  - **When connecting, attach the jumper cable to the positive (+) terminals first. When disconnecting, remove the cable from the negative (–) terminal (ground) first.**
  - **Connect the last clip of the jumper cable to a point as far away from the battery as possible.**
- **Always wear the protective goggle when jump starting the engine by using the jumper cables.**

IMPORTANT: Use the jumper cables and clips of a size suited to the capacity of battery. Do not use damaged or corroded jumper cables and clips.
IMPORTANT: Be sure that the battery of the booster vehicle has the same capacity as the battery of the dead machine.
IMPORTANT: Be sure to connect the clips securely.

Connecting the jumper cables

IMPORTANT: Set the starter keys of the booster vehicle and the dead machine to the OFF position.

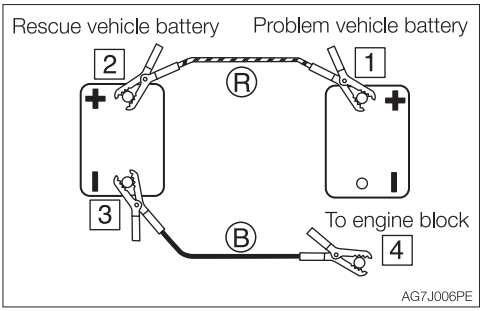


1. Connect the clip of jumper cable (R) to the positive (+) battery terminal of the dead machine.
2. Connect the other clip of jumper cable (R) to the positive (+) battery terminal of the booster vehicle.
3. Connect the clip of jumper cable (B) to the negative (–) battery terminal of the booster vehicle.
4. Connect the other clip of jumper cable (B) to the engine block of the dead machine. Connect the clip to a place as far from the battery as possible.

Starting the engine

1. Check that the clips are securely connected to the terminals.
2. Start the engine of the booster vehicle and run it at high speed.
3. Start the engine of the dead machine.

Disconnecting the jumper cables

Once the dead machine is successfully running, remove the jumper cables by following the same steps as for connection in the reverse order.

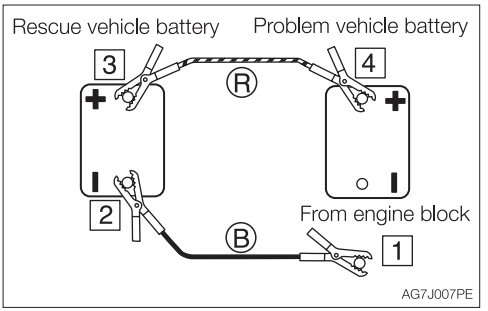

1. Disconnect the clip of jumper cable (B) from the engine block of the dead machine.
2. Disconnect the other clip of jumper cable (B) from the negative (–) battery terminal of the booster vehicle.
3. Disconnect the clip of jumper cable (R) from the positive (+) battery terminal of the booster vehicle.
4. Disconnect the clip of jumper cable (R) from the positive (+) battery terminal of the dead machine.

Recharging

Ask your sales or service dealer for recharging the dead battery.

IF A FUSE BLOWS


If a light does not come on or the electrical system does not work, a fuse may be blown. Inspect the fuses.

INSPECTING AND REPLACING THE FUSE


⚠ WARNING

If the fuse blows again soon after replacement, then the electric system is likely faulty. It may pose a fire hazard if not properly repaired. Contact your sales or service dealer for advice.

1. Turn the starter key to the OFF position to stop the engine.

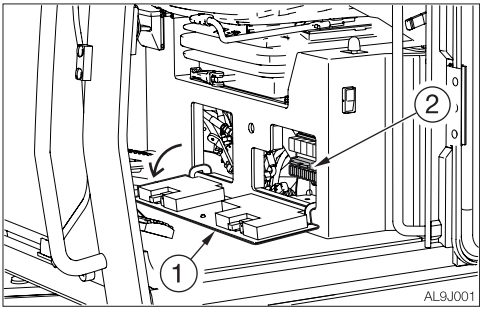

2. Open the fuse box cover (1).
3. Check for any blown fuses (2).

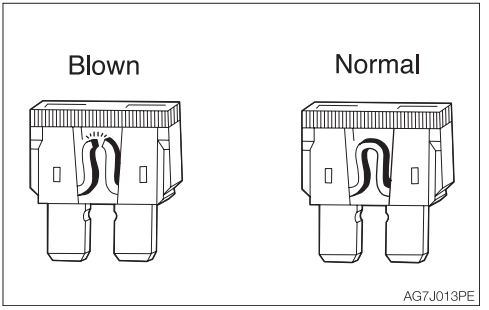


4. If a fuse is blown, replace it with a spare fuse of the same capacity.

Fuse layout and circuits protected

Capacity	Symbol	Protected circuit
20A		Light
10A		Wiper
20A		Lever lock
15A	CTL	Controller power supply
20A	CTL (OX)	OX controller power supply
25A	CAB	Cab interior power supply
25A	OPT(1)	Option (1)
25A		AC motor
10A		Immobilizer
15A		Air conditioner compressor
20A	CAB	Cab light
5A		Switch lighting

Capacity	Symbol	Protected circuit
10A		Horn
15A		Starter switch
10A		Feed pump
25A		Fuel supply pump

INSPECTING THE FUSIBLE LINK

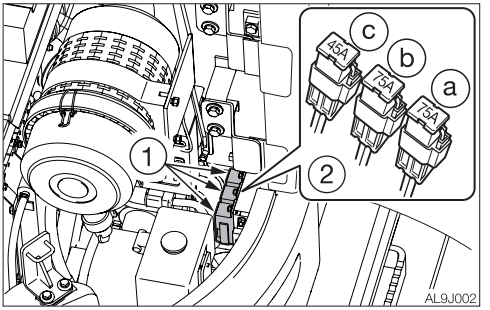

If the machine is not turned on after turning the starter switch to the ON position, there is likely a break in the cartridge type fusible link (2). Inspect the link by following the steps below. If there is a break, please contact your sales or service dealer.

1. Open the side cover.
2. Loosen the bolts and remove the cover (1).
3. Inspect the fusible link (2).


(a): 75 A
(b): 75 A
(c): 45 A

Note: Fusible links are large type fuses used in high current applications. Like a regular fuse, they act as fuses by protecting the electric components and wirings from damage caused by excessive current draw.


RESTARTING AFTER ADDING FUEL

BLEEDING AIR FROM THE FUEL SYSTEM


IMPORTANT: NEVER use the starter motor to crank the engine in order to prime the fuel system. This may cause the starter motor to overheat and damage the coils, pinion gear and/or ring gear.
IMPORTANT: If the engine stalls due to fuel shortage, add fuel, turn the key to the ON position for 60 seconds, and then turn it to the START position. Running the starter for a long time before there is enough fuel is going through can cause the starter to fail.

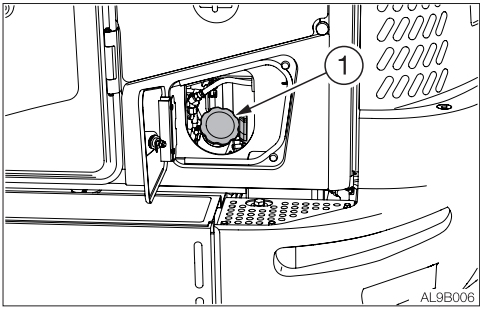

1. Add fuel.

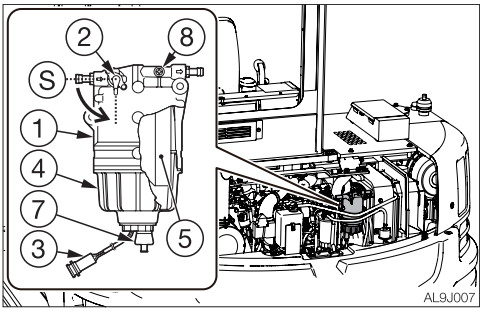

(S): Close
2. Open the engine hood.
3. Open the valve (2) of the water separator.

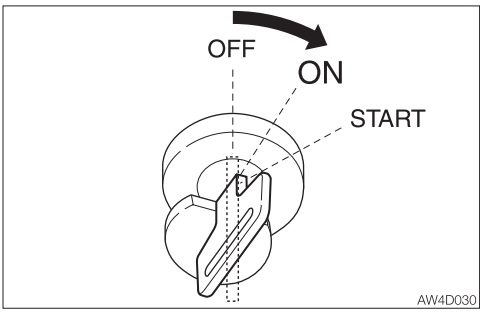

4. Turn the ignition key to the ON position and hold it for about 60 seconds.
   The automatic air bleeder bleeds air from the fuel system.
5. Start the engine and check for fuel leakage.

Note: Air in the fuel system causes the engine to fail to start or to have other problems. Always bleed air when the fuel tank is emptied or when there is air in the fuel system.

MEMO

IF A WARNING LAMP FLASHES

If an alarm is sounded or a warning lamp starts flashing during operation, park the machine in a safe place and perform the remedy procedures described below.

Warning lamp	Lamp name	Causes and remedies
 AW4J007	**Vehicle and engine emergency lamp**	There is a problem in the machine. Refer to the respective warning lamp below. Get the vehicle or engine error code number from the multi-information display and consult your sales or service dealer referring to the “Vehicle error code list” or “Engine error code list”. Refer to “Multi-information display” on pages 2-14 to 2-33. Refer to “Vehicle error code list” on pages 6-12 to 6-13. Refer to “Engine error code list” on pages 6-14 to 6-21.
 AW4J0041	**ECM error warning lamp**	There is a problem in the engine. If an error code is displayed on the multi-information display, inform your sales or service dealer of the code and ask for help. Refer to “Multi-information display” on pages 2-14 to 2-33. Refer to “Engine error code list” on pages 6-14 to 6-21.
 AL9J003	**Battery charge warning lamp**	There is a problem with the fan belt or charger. Check the fan belt for slack or breakage and adjust as necessary. If the lamp continues flashing after maintenance, there is likely a problem with the charger. Consult your sales or service dealer for help. Refer to “Inspecting and adjusting the fan belt” on page 5-24.
 AG7J017	**Engine oil pressure warning lamp**	There is a problem in the engine lubrication system. Check the engine oil level. If the lamp is flashing when the level is normal or even after replenishment of oil or coolant, consult your sales or service dealer. Refer to “Inspecting and replenishing the engine oil” on page 5-19.
 AL9J004	**Water separator warning lamp**	Water is in the water separator. Drain water. Refer to “Draining the water from the water separator” on page 5-62.

Warning lamp	Lamp name	Causes and remedies
 AG7J018	**Coolant temperature warning lamp**	The coolant temperature is too high and the engine is overheating. Refer to “If the engine overheats” on page 6-3.
 AG7J020	**Air cleaner warning lamp**	The air cleaner is clogged. Clean it. Refer to “Cleaning the air cleaner” on page 5-38.
 AL9J005	**Fuel level warning lamp**	The fuel level is too low. Add fuel. Refer to “Inspecting the fuel level” on page 5-20.
 AQ0J004	**Third auxiliary hydraulic warning lamp**	Pressure in the third auxiliary hydraulic line is too low Consult your sales or service dealer for help.
 AM1J005	**Lift overload warning indicator lamp**	This lamp starts flashing if the overload warning device is activated. If it occurs, reduce the load to be lifted. Refer to “Lift overload warning switch” on page 2-44.

VEHICLE ERROR CODE LIST

If an error code appears on the display, consult your sales or service dealer.

Error code	Error details
9	Impossible to sense ACC key
402	CAN 0 communication error
502	CAN communication error (EECU)
602	CAN communication error (cluster gauge)
612	CAN communication error (OX024)
822	CAN communication error (TAKEUCHI Security System)
1703	Main power supply voltage error (too high)
1704	Main power supply voltage error (too low)
1713	OX024 power supply voltage error (too high)
1714	OX024 power supply voltage error (too low)
2503	Sensor voltage error (too high) MMC
2504	Sensor voltage error (too low) MMC
3300	Alternator charge faulty
3401	Engine oil pressure error
3500	Overheat
3600	Air cleaner clogged
3700	Water separator alarm
5303	Accelerator sensor error (too high)
5304	Accelerator sensor error (too low)
5505	Fuel gauge resistance value error (cable break)
5603	Lift alarm sensor error (too high)
5604	Lift alarm sensor error (too low)
5613	Boom angle sensor error (high pressure)
5614	Boom angle sensor error (low pressure)
5623	Offset arm angle sensor error (high pressure)
5624	Offset arm angle sensor error (low pressure)

Error code	Error details
6503	AUX1 slide switch voltage value error (too high)
6504	AUX1 slide switch voltage value error (too low)
6509	AUX1 slide switch neutral error
6519	AUX1 (L) switch error
6529	AUX1 (R) switch error
6603	AUX2 slide switch voltage value error (too high)
6604	AUX2 slide switch voltage value error (too low)
6609	AUX2 slide switch neutral error
6709	AUX3 switch error (Foot)
6719	AUX3 switch error (Grip)
8005	Pump PWM output voltage error (too low)
8006	Pump PWM output voltage error (too high)
8015	AUX1 (L) PWM output voltage error (too low)
8016	AUX1 (L) PWM output voltage error (too high)
8025	AUX1 (R) PWM output voltage error (too low)
8026	AUX1 (R) PWM output voltage error (too high)
8035	AUX2 (L) PWM output voltage error (too low)
8036	AUX2 (L) PWM output voltage error (too high)
8045	AUX2 (R) PWM output voltage error (too low)
8046	AUX2 (R) PWM output voltage error (too high)
9990	Model changed
9991	Unknown model

PWM = Pulse width modulation

ENGINE ERROR CODE LIST

If an error code appears on the display, consult your sales or service dealer.

Error code		Error details	DTC
SPN	FMI		
522400	2	Crank speed sensor (Crank signal malfunction)	P0336
	5	Crank speed sensor (No crank signal)	P0337
522401	2	Cam speed sensor (Cam signal malfunction)	P0341
	5	Cam speed sensor (No cam signal)	P0342
	7	Cam speed sensor (Angle offset failure)	P1341
523249	5	No signal on both crank and cam speed sensor	P0008
91	3	Accelerator sensor 1 (Excessive sensor output)	P0123
	4	Accelerator sensor 1 (Insufficient sensor output)	P0122
28	3	Accelerator sensor 2 (Excessive sensor output)	P0223
	4	Accelerator sensor 2 (Insufficient sensor output)	P0222
522624	7	Dual accelerator sensor (closed position) failure	P1646
522623	7	Dual accelerator sensor (open position) failure	P1647
29	3	Accelerator sensor 3 (Excessive sensor output)	P0228
	4	Accelerator sensor 3 (Insufficient sensor output)	P0227
	8	Pulse sensor failure (Pulse communication)	P1227
28	0	Accelerator sensor 3 failure (Foot pedal in open position)	P1126
	1	Accelerator sensor 3 failure (Foot pedal in closed position)	P1125
51	3	Intake throttle opening sensor fault (High voltage)	P02E9
	4	Intake throttle opening sensor fault (Low voltage)	P02E8

Error code		Error details	DTC
SPN	FMI		
102	3	EGR low pressure side sensor fault (High voltage)	P0238
	4	EGR low pressure side sensor fault (Low voltage)	P0237
	13	EGR low pressure side sensor fault (Abnormal learning value)	P0236
1209	3	EGR high pressure side sensor fault (High voltage)	P0473
	4	EGR high pressure side sensor fault (Low voltage)	P0472
	13	EGR high pressure side sensor (Abnormal learning value)	P0471
110	3	Cooling water temperature sensor fault (High voltage)	P0118
	4	Cooling water temperature sensor fault (Low voltage)	P0117
	0	Cooling water temperature sensor temperature abnormal high (Overheat)	P0217
172	3	New air temperature sensor fault (High voltage)	P0113
	4	New air temperature sensor fault (Low voltage)	P0112
174	3	Fuel temperature sensor fault (High voltage)	P0183
	4	Fuel temperature sensor fault (Low voltage)	P0182
	0	Fuel temperature sensor temperature abnormal high	P0168
157	3	Rail pressure sensor fault (High voltage)	P0193
	4	Rail pressure sensor fault (Low voltage)	P0192
3251	3	DPF differential pressure sensor fault (High voltage)	P2455
	4	DPF differential pressure sensor fault (Low voltage)	P2454
	0	DPF differential pressure sensor differential pressure abnormal high	P2452
	13	DPF differential pressure sensor (Abnormal learning value)	P2453
3609	3	DPF high pressure side sensor fault (High voltage)	P1455
	4	DPF high pressure side sensor fault (Low voltage)	P1454
3242	3	DPF inlet temperature sensor fault (High voltage)	P1428
	4	DPF inlet temperature sensor fault (Low voltage)	P1427
	0	DPF inlet temperature sensor temperature abnormal high	P1436

Error code		Error details	DTC
SPN	FMI		
3250	3	DPF intermediate temperature sensor fault (High voltage)	P1434
	4	DPF intermediate temperature sensor fault (Low voltage)	P1435
	1	DPF intermediate temperature sensor temperature abnormal low temperature	P0420
	0	DPF intermediate temperature sensor temperature abnormal high (Post-injection failure)	P1426
108	3	Atmospheric pressure sensor fault (High voltage)	P2229
	4	Atmospheric pressure sensor fault (Low voltage)	P2228
	10	Atmospheric pressure sensor characteristic fault	P1231
412	3	EGR gas temperature sensor fault (High voltage)	P041D
	4	EGR gas temperature sensor fault (Low voltage)	P041C
105	3	Intake manifold temperature sensor fault (High voltage)	P040D
	4	Intake manifold temperature sensor fault (Low voltage)	P040C
173	3	Exhaust manifold temperature sensor fault (High voltage)	P0546
	4	Exhaust manifold temperature sensor fault (Low voltage)	P0545
1485	7	Main relay contact stuck	P068B
	2	Main relay early opening	P068A
522243	5	Startup assist relay interrupted	P0543
	6	Startup assist relay GND interrupted	P0541
651 (4TNV), 652 (3TNV)	5	Injector 1 open circuit (Inherent location of the injector)	P0204 (4TNV), P0203 (3TNV)
	6	Injector 1 coil short circuit	P0271 (4TNV), P0268 (3TNV)
	3	Injector 1 short circuit	P1271 (4TNV), P1262 (3TNV)

Error code		Error details	DTC
SPN	FMI		
653	5	Injector 2 open circuit (Inherent location of the injector)	P0202
	6	Injector 2 coil short circuit	P0265
	3	Injector 2 short circuit	P1265
654	5	Injector 3 open circuit (Inherent location of the injector)	P0201
	6	Injector 3 coil short circuit	P0262
	3	Injector 3 short circuit	P1262
652	5	Injector 4 open circuit (Inherent location of the injector)	P0203
	6	Injector 4 coil short circuit	P0268
	3	Injector 4 short circuit	P1268
4257	12	Injector drive IC error	P0611
2797	6	Injector drive circuit (Bank 1) short circuit (4TN: Common circuit for No.1, No.4 and all 3TN cylinders)	P1146
2798	6	Injector drive circuit (Bank 2) short circuit (4TN: Circuit for No.2 and No.3 cylinders)	P1149
523462	13	IQA corrected injection amount for injector 1 error	P1648
523463	13	IQA corrected injection amount for injector 2 error	P1649
523464	13	IQA corrected injection amount for injector 3 error	P1650
523465	13	IQA corrected injection amount for injector 4 error	P1651
522571	3	High-pressure pump drive circuit (Low side VB short-circuit)	P1641
	6	High-pressure pump drive circuit (Low side GND short-circuit)	P1643
633	3	High-pressure pump drive circuit (High side VB short-circuit)	P0629
	6	High-pressure pump drive circuit (High side GND short-circuit)	P1642
	5	High-pressure pump drive circuit (Open circuit)	P0627
522572	6	High-pressure pump drive circuit (Drive current (high level))	P062A
	11	High-pressure pump drive circuit (Pump overload error)	P1645

Error code		Error details	DTC
SPN	FMI		
157	0	Actual rail pressure rise error	P0088
	18	Rail pressure deviation error during the actual rail pressure drop	P0094
	15	Rail pressure deviation error during the actual rail pressure rise	P0093
	16	PLV open valve	P000F
523469	0	Rail pressure fault (The times of PLV valve opening error)	P1666
523470	0	Rail pressure fault (The time of PLV valve opening error)	P1667
523489	0	Rail pressure fault (The actual rail pressure is too high during PRV limp home)	P1668
523468	9	Rail pressure fault (Controlled rail pressure error after PLV valve opening)	P1665
523491	0	Rail pressure fault (Injector B/F temperature error during PLV4 limp home)	P1669
523460	7	Rail pressure fault (Operation time error during RPS limp home)	P1670
190	16	Overspeed	P0219
2950	5	No-load of throttle valve drive H bridge circuit	P0660
	3	Power short circuit of throttle valve drive H bridge output 1	P1658
	4	GND short circuit of throttle valve drive H bridge output 1	P1659
	6	Overload on the drive H bridge circuit of throttle valve	P1660
2951	3	VB Power short circuit of throttle valve drive H bridge output 2	P1661
	4	GND short circuit of throttle valve drive H bridge output 2	P1662
522596	9	TSC1 (CAN message) reception time out (SA1)	U0292
522597	9	TSC1 (CAN message) reception time out (SA2)	U1301
522599	9	Y_ECR1 (CAN message) reception time out	U1292
522600	9	Y_EC (CAN message) reception time out	U1293
522601	9	Y_RSS (CAN message) reception time out	U1294
522603	9	VH (CAN message) reception time out	U1296
522605	9	Y_ECM3 (CAN message) reception time out	U1298

Error code		Error details	DTC
SPN	FMI		
237	31	VI (CAN message) reception time out	U0168
	13	VI (CAN message) reception data fault	U3002
522609	9	Y_ETCP1 (CAN message) reception time out	U1300
522618	9	EBC1 (CAN message) reception time out	U1302
522619	9	Y_DPFIF (CAN message) reception time out	U1303
522610	9	CAN1 (for EGR): Reception time out	U010B
522611	9	Exhaust throttle (CAN message from the exhaust throttle time out)	U1107
2791	0	EGR over-voltage fault	P0404
	1	EGR under-voltage fault	P1404
	7	EGR feedback malfunction	P1409
	9	EGR ECM data fault	U0401
	12	Open circuit between the EGR motor coils	P0403
522579	12	Short circuit between the EGR motor coils	P1405
522580	12	EGR position sensor malfunction	P0488
522581	7	EGR stuck open valve malfunction	P148A
522582	7	EGR initialization malfunction	P049D
522183	1	EGR high temperature thermistor malfunction	P1410
522184	1	EGR low temperature thermistor malfunction	P1411
522617	12	EGR target value out of range	U1401
522746	12	Exhaust throttle (Voltage fault)	P1438
522747	12	Exhaust throttle (Motor fault)	P1439
522748	12	Exhaust throttle (Sensor system fault)	P1440
522749	12	Exhaust throttle (MPU fault)	P1441
522750	12	Exhaust throttle (PCB fault)	P1442
522751	19	Exhaust throttle (CAN fault)	P1443
630	12	EEPROM memory deletion error	P0601
522576	12	EEPROM memory read error	P160E

Error code		Error details	DTC
SPN	FMI		
522578	12	EEPROM memory writing error	P160F
522585	12	ECU internal fault (CY146 SPI communication fault)	P1613
522588	12	ECU internal fault (Excessive voltage of supply 1)	P1608
522589	12	ECU internal fault (Insufficient voltage of supply 1)	P1617
522590	12	ECU internal fault (Sensor supply voltage error 1)	P1609
522591	12	ECU internal fault (Sensor supply voltage error 2)	P1618
522592	12	ECU internal fault (Sensor supply voltage error 3)	P1619
522744	4	ECU internal fault (Actuator drive circuit 1 short to ground)	P1626
522994	4	ECU internal fault (Actuator drive circuit 2 short to ground)	P1633
523471	6	ECU internal fault (Actuator drive circuit 3 short to ground)	P1467
523473	12	ECU internal fault (AD converter fault 1)	P1469
523474	12	ECU internal fault (AD converter fault 2)	P1470
523475	12	ECU internal fault (External monitoring IC and CPU fault 1)	P1471
523476	12	ECU internal fault (External monitoring IC and CPU fault 2)	P1472
523477	12	ECU internal fault (ROM fault)	P1473
523478	12	ECU internal fault (Shutoff path fault 1)	P1474
523479	12	ECU internal fault (Shutoff path fault 2)	P1475
523480	12	ECU internal fault (Shutoff path fault 3)	P1476
523481	12	ECU internal fault (Shutoff path fault 4)	P1477
523482	12	ECU internal fault (Shutoff path fault 5)	P1478
523483	12	ECU internal fault (Shutoff path fault 6)	P1479
523484	12	ECU internal fault (Shutoff path fault 7)	P1480
523485	12	ECU internal fault (Shutoff path fault 8)	P1481
523486	12	ECU internal fault (Shutoff path fault 9)	P1482
523487	12	ECU internal fault (Shutoff path fault 10)	P1483
523488	0	ECU internal fault (Recognition error of engine speed)	P1484
522323	0	Air cleaner clogged alarm	P1101

Error code		Error details	DTC
SPN	FMI		
522329	0	Oil/water separator alarm	P1151
167	5	Charge switch (Charge switch open circuit)	P1562
	1	Charge switch (Charge alarm)	P1568
100	4	Oil pressure switch (Oil pressure switch open circuit)	P1192
	1	Oil pressure switch (Low oil pressure fault alarm)	P1198
522573	0	DPF over accumulation (Method C)	P2463
522574	0	DPF over accumulation (Method P)	P1463
522575	7	DPF regeneration defect (Stationary regeneration failure)	P2458
522577	11	DPF regeneration defect (Stationary regeneration not-performed)	P2459
3720	16	DPF OP interface (Ash cleaning request 1)	P242F
	0	DPF OP interface (Ash cleaning request 2)	P1420
3719	16	DPF OP interface (Stationary regeneration standby)	P1421
	0	DPF OP interface (Backup mode)	P1424
3695	14	DPF OP interface (Reset regeneration prohibited)	P1425
3719	9	DPF OP interface (Recovery regeneration failure)	P1445
	7	DPF OP interface (Recovery regeneration prohibition)	P1446

OTHER SYMPTOMS

For symptoms not included in the table below or if the problem persists after the proper remedies have been taken, consult your sales or service dealer.

Symptoms	Major causes	Remedies
Left and right operating levers do not move smoothly	• Insufficient grease on the left and right operating levers	• Grease the levers. Refer to page 5-63.
Travel levers, blade lever and pedals do not move smoothly	• Insufficient grease on travel levers, blade lever and pedals	• Grease the levers and pedals. Refer to page 5-63.
Operation of hoe attachment, dozer blade, auxiliary hydraulics, slewing or traveling is not possible.	• Safety lock lever is raised (locked)	• Lower (release) the safety lock lever. Refer to page 2-45.
	• Fuse is blown	• Replace the fuse. Refer to page 6-6.
Digging force is insufficient	• Hydraulic oil level too low	• Add to the specified level. Refer to page 5-21.
	• Hydraulic oil is not warm enough	• Perform the warm-up. Refer to pages 3-10 to 3-11.
	• Air cleaner is clogged	• Clean the air cleaner. Refer to page 5-38.
	• Hydraulic oil is not of suitable type	• Replace the hydraulic oil. Refer to page 5-53.
Traveling is not possible or not smooth	• Stones or foreign objects are stuck	• Remove the foreign object.
Machine veers to the right/left	• Stones or foreign objects are stuck	• Remove the foreign object.
	• Crawler belt tension is faulty.	• Check and adjust (ask your sales or service dealer). Refer to pages 5-28 and 5-67.
Travel speed cannot be changed	• Fuse is blown	• Replace the fuse. Refer to page 6-6.
Slewing is not possible or not smooth	• Insufficient grease on slew bearing	• Grease the bearing. Refer to page 5-28.
Hydraulic oil temperature is too high	• Hydraulic oil level too low	• Add up to the specified level. Refer to page 5-21.

Symptoms	Major causes	Remedies
Starter motor turns but engine does not start	• Insufficient fuel	• Add fuel. Refer to page 5-20.
	• Air in fuel system	• Bleed air. Refer to page 6-8.
	• Water in fuel system	• Drain water. Refer to page 5-31.
	• Fuel is frozen.	• Warm the fuel pipe with hot water or wait until the ambient temperature becomes high.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Preheating device is faulty.	• Adjust or repair (ask your sales or service dealer).
Crawlers come off	• Crawlers too loose	• Check and adjust (ask your sales or service dealer). Refer to pages 5-30 and 5-67.
Engine exhaust is white or bluish	• Excessive engine oil	• Adjust to the specified level. Refer to page 5-19.
	• Insufficient engine warm-up.	• Perform the warm-up operation. Refer to page 3-7.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Prolonged idling (approx. two hours or more)	• Increase the engine RPM and check for smoke.
	• Poor fuel	• Replace the fuel.

Symptoms	Major causes	Remedies
Engine exhaust is occasionally black	• Air cleaner is clogged	• Clean the air cleaner. Refer to page 5-38.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Clogging in the exhaust line.	• Adjust or repair (ask your sales or service dealer).
	• DPF is faulty.	• Adjust or repair (ask your sales or service dealer).
Irregular noise is produced from the engine (combustion or mechanical noise)	• Low quality fuel is being used	• Replace the fuel.
	• Engine is overheating	• Refer to “If the engine overheats” on page 6-3.
	• Damage inside the muffler	• Replace the muffler. For replacement, ask your sales or service dealer.

LOWERING THE BOOM TO THE GROUND

If the hoe attachment must be lowered to the ground while the engine is stopped, use the following procedure.

Perform this operation within 10 minutes after the engine stopping.

1. Sit at the operator's seat.
2. Turn the starter switch to the ON position.
3. Lower the safety lock lever to the unlock position
4. Slowly push the operating lever forward to lower the boom.

TOWING

⚠ WARNING


When towing, serious injury or death could result, if performed incorrectly or the wire rope being used is inappropriate or not properly inspected.

- **It becomes dangerous if the wire rope breaks or becomes disengaged. Use a wire rope appropriate for the required tractive force.**
- **Do not use a wire rope that is kinked, twisted or otherwise damaged.**
- **Do not apply heavy loads abruptly to the wire rope.**
- **Wear safety gloves when handling the wire rope.**
- **Make sure there is an operator on the machine being towed as well as on the machine that is towing.**
- **Never tow on slopes.**
- **Do not let anyone come near to the wire rope while towing.**

IMPORTANT: Do not tow a machine if its engine does not start or if the machine does not run. Doing so could damage the machine being towed.
IMPORTANT: Be sure to follow the steps below closely when using the towing hole to tow. Failure to heed even one of the steps may cause damage to the towing hole or other parts of the frame.

Towing the machine

Use the procedure described below to tow heavy objects or the machine itself if it should get stuck in the mud and not be able to get out on its own.

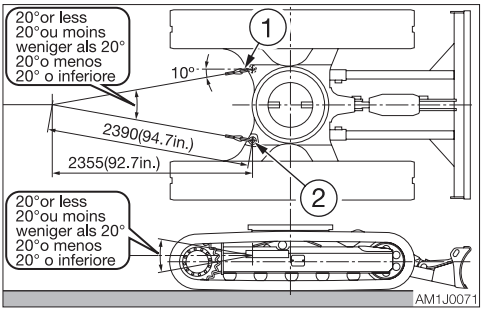

- Permissible forces: 125.2 kN (28146 lbf)
  Do not tow using only a towing hole on one side.

1. Attach the wire rope to the shackle (1).
2. Fasten the shackle (1) to the towing holes (2).
3. Make sure that the wire rope is at a cone angle of 20° or less to the travel frame.
4. Move the machine to tension the wire rope.
5. Move the machine at a low speed of 2 km/h (1.24 mph) or less to a place (convenient location for repair) a short distance from the site.

IF THE CAB IS DAMAGED

⚠ WARNING

Immediately replace the damaged cab. Serious injury or death may occur if the machine is operated with damaged cab. Do not operate the machine until the replacement is complete. Do not try to repair the damaged cab by welding. Doing so could endanger the safety of the cab.

Cab part number: 03986-00007

SPECIFICATIONS




BASIC SPECIFICATIONS

Type				Standard arm	Middle arm	Long arm
MASS						
Operating mass	kg (lb)	Rubber crawlers		8500 (18735)	8520 (18780)	8530 (18810)
		Steel crawlers		8695 (19170)	8715 (19210)	8730 (19240)
PERFORMANCE						
Bucket capacity (Standard bucket)	m^3 (cu. ft.)	Heaped		0.245 (8.65)		
		Struck		0.185 (6.53)		
Slew speed	min^{-1} (rpm)			10 (10)		
Travel speed	km/h (mph)	Rubber crawlers	1st	2.7 (1.68)		
			2nd	5.2 (3.23)		
		Steel crawlers	1st	2.6 (1.62)		
			2nd	4.9 (3.04)		
Gradeability	(degrees)			30		
Ground pressure	kPa (psi)	Rubber crawlers		37.9 (5.50)	38 (5.51)	38.1 (5.53)
		Steel crawlers		39.3 (5.70)	39.4 (5.71)	39.5 (5.73)
Noise level dB (A)		Sound power level		L_{WA} 99		
		Emission sound pressure level at the operator's position (ISO 6396, 2008:)		L_{pA} 77		
ENGINE						
Manufacturer and model				Yanmar 4TNV98CT-WTBZ		
Rated output		Net (ISO 14396)	kW/min^{-1} (hp/rpm)	51.6/2000 (69.2/2000)		
		Net (ISO 9249/ SAEJ1349)	kW/min^{-1} (hp/rpm)	49.6/2000 (66.5/2000)		
Displacement	ml (cu.in.)			3318 (202.5)		
Starter	V-kW			12-3.0		
Alternator	V-kW			12-0.96		
Battery (IEC 60095-1)	V-A·h			12-90		

MEMO

MACHINE DIMENSIONS

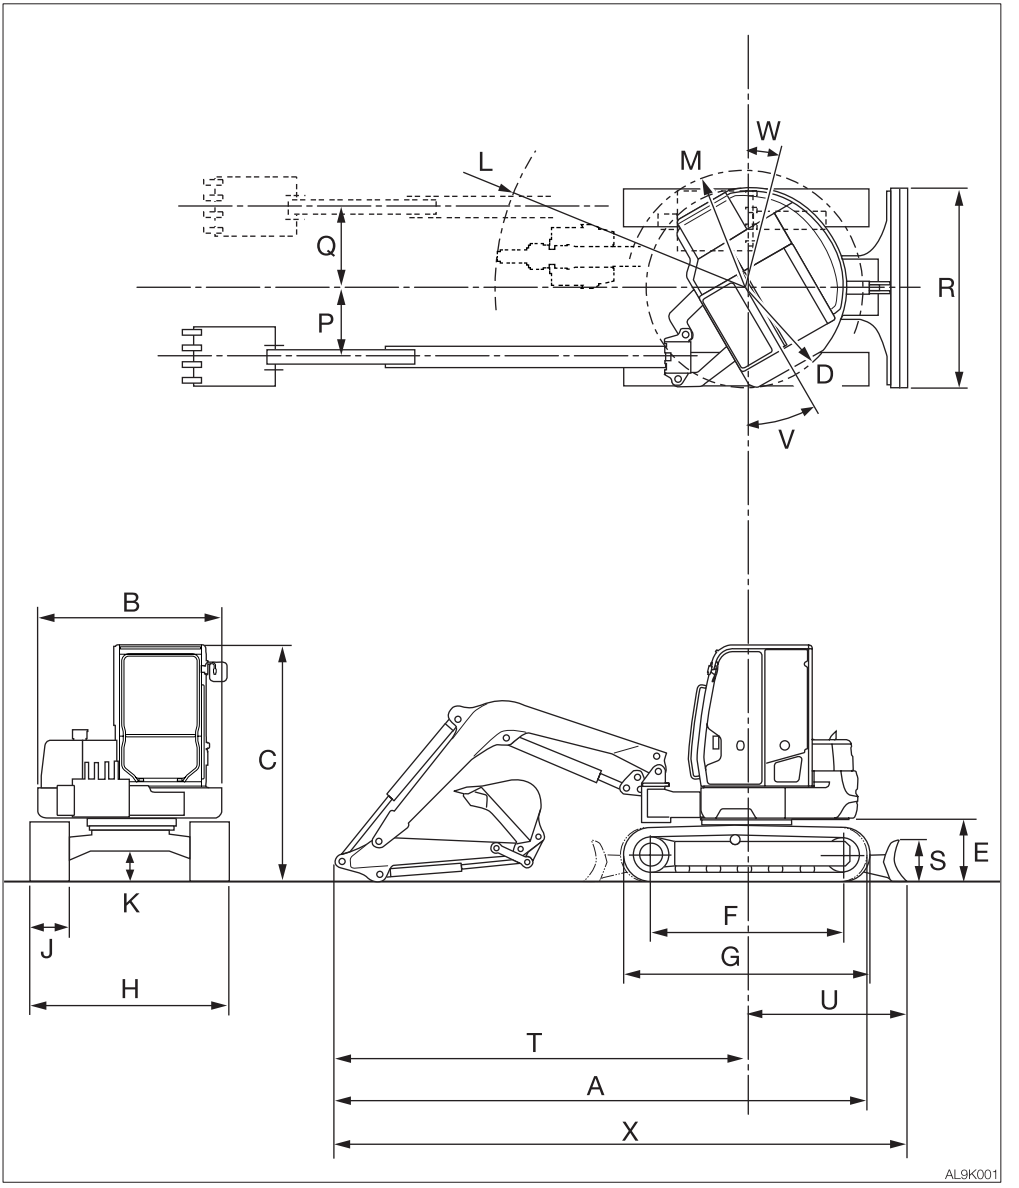


Unit: mm (inch)

	Item	Standard arm	Middle arm	Long arm
		Rubber crawlers		
A	Overall length	6160 (242.5)	6175 (243.1)	6285 (247.4)
B	Upperstructure overall width	2170 (85.4)	←	←
C	Overall height	2725 (107.4) 2735 (107.7)*	←	←
D	Slew radius	1280 (50.3)	←	←
E	Clearance height under upperstructure	715 (28.1) 720 (28.4)*	←	←
F	Crawler base	2210 (87) 2180 (85.8)*	←	←
G	Crawler overall length	2855 (112.4) 2830 (111.4)*	←	←
H	Crawler overall width	2300 (90.6)	←	←
J	Crawler shoe width	450 (17.7)	←	←
K	Ground clearance of undercarriage	315 (12.3) 320 (12.6)*	←	←
L	Minimum radius of equipment and attachment	2835 (111.6)	2880 (113.3)	←
M	Minimum radius of equipment at maximum front offset	1610 (63.5)	←	←
P	Offset distance of bucket (Left offset)	805 (31.6)	←	←
Q	Offset distance of bucket (Right offset)	945 (37.1)	←	←
R	Dozer blade width	2300 (90.6)	←	←
S	Dozer blade height	500 (19.7)	←	←
T	Front distance to axis of rotation	4755 (187.2)	4770 (187.7)	4795 (188.9)
U	Dozer blade distance to axis of rotation	2055 (80.9)	←	←
V	Boom offset angle (Left)	30°	←	←
W	Boom offset angle (Right)	15°	←	←
X	Overall length (dozer blade at rear)	6845 (269.5)	6860 (270)	6885 (271.1)

*: With steel crawlers

OPERATING RANGES

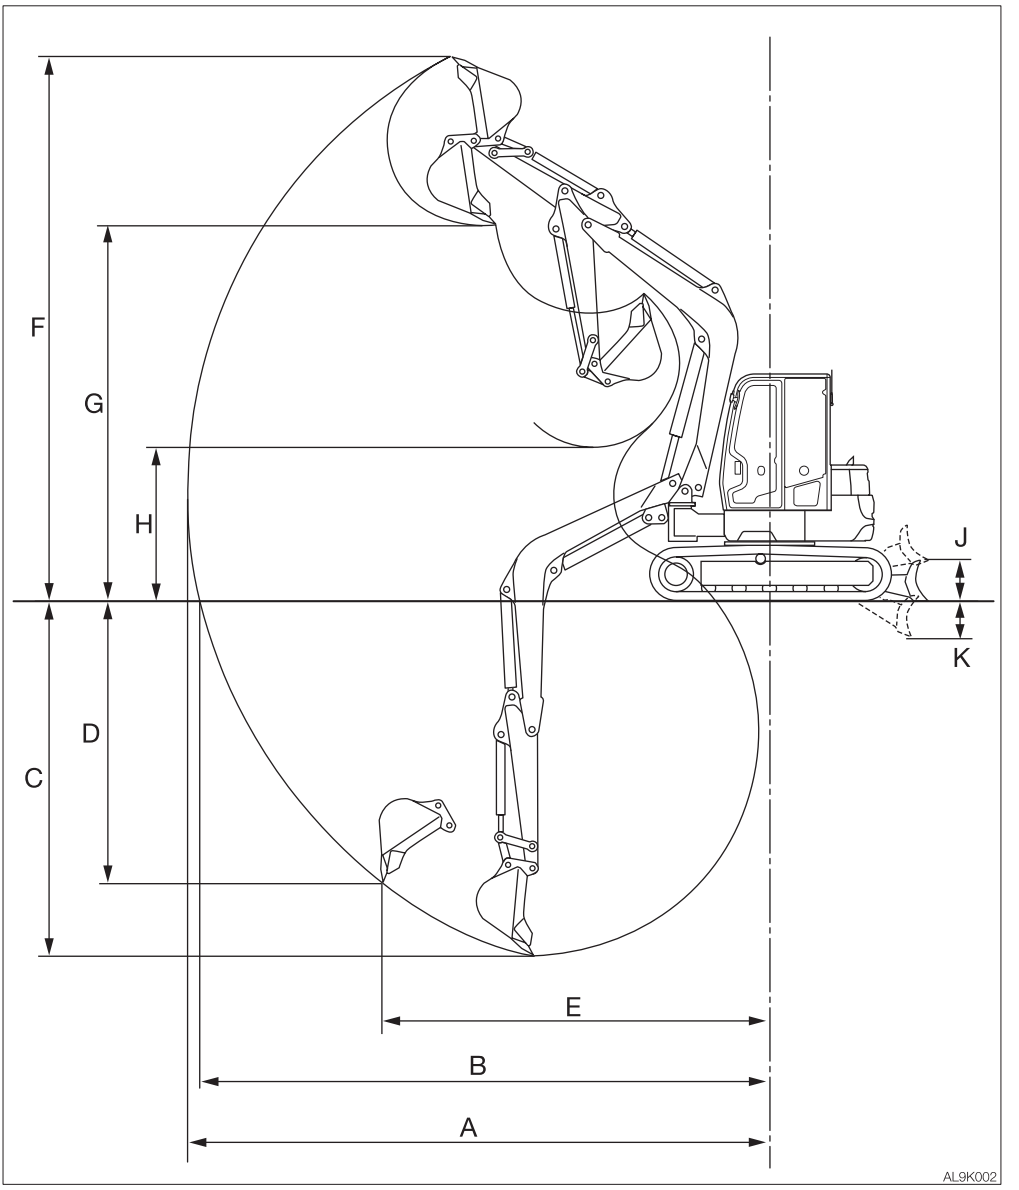

Unit: mm (inch)

	Item	Standard arm	Middle arm	Long arm
		Rubber crawlers		
A	Maximum reach	6870 (270.5)	7035 (277)	7195 (283.2)
B	Maximum reach at ground reference plane	6715 (264.3)	6885 (271)	7045 (277.4)
C	Maximum digging depth	4195 (165.1) 4185 (164.8)*	4375 (172.2) 4365 (171.9)*	4540 (178.8) 4535 (178.5)*
D	Maximum vertical digging depth	3160 (124.4) 3150 (124.1)*	3330 (131.1) 3320 (130.8)*	3495 (137.5) 3485 (137.2)*
E	Reach at maximum vertical digging depth	4700 (185.1)	4750 (187)	4795 (188.7)
F	Maximum height of cutting edge	6280 (247.3) 6290 (247.6)*	6375 (251) 6385 (251.3)*	6465 (254.5) 6475 (254.8)*
G	Maximum dumping height	4295 (169.1) 4305 (169.4)*	4390 (172.8) 4400 (173.1)*	4480 (176.4) 4490 (176.7)*
H	Minimum dumping height	1765 (69.4) 1770 (69.7)*	1575 (62.1) 1585 (62.4)*	1405 (55.4) 1415 (55.7)*
J	Dozer blade maximum lifting	525 (20.6)	←	←
K	Dozer blade maximum lowering	490 (19.2)	←	←

*: With steel crawlers

MEMO

LIFTING CAPACITIES

Rated lift capacity chart

- The loads in the charts do not exceed 87% of hydraulic lift capacity or 75% of tipping load.
- Figures marked with an asterisk (※) are hydraulically-limited capacities.
- The mass of slings and any other lifting devices shall be deducted from the rated load to determine the net load that may be lifted.
- The load point is the bucket hinge pin, and the bucket posture is with the standard bucket completely retracted under the arm.
- Unit: daN (lbs)

Load hooking system


A load hooking system must be provided with the following capabilities.

1. A system which can withstand twice the rated lift capacity no matter at what position the load is applied.
2. A system that poses no risk of the lifted load falling from the hooking device. For example, equipped with a hook slippage prevention device.
3. A system that poses no risk of the hooking system slipping from the hoe attachment.

⚠ WARNING


- **Do not attempt to lift or hold any load that is greater than these rated values at their specified load radii and height.**
- **The rated lift capacities are based on the machine being level and situated on a firm supporting surface. For safe lifting, the operator is expected to make due allowance for the particular job conditions such as soft or uneven ground, non-level condition, load to the machine sides, hazardous conditions, experience of personnel, etc. The operator and other personnel should fully acquaint themselves with the operator's manual furnished by the manufacturer before operating this machine. When operating the machine, the safety rules of the equipment must also be followed.**
- **Do not travel while lifting a load; It is very dangerous.**

Standard arm

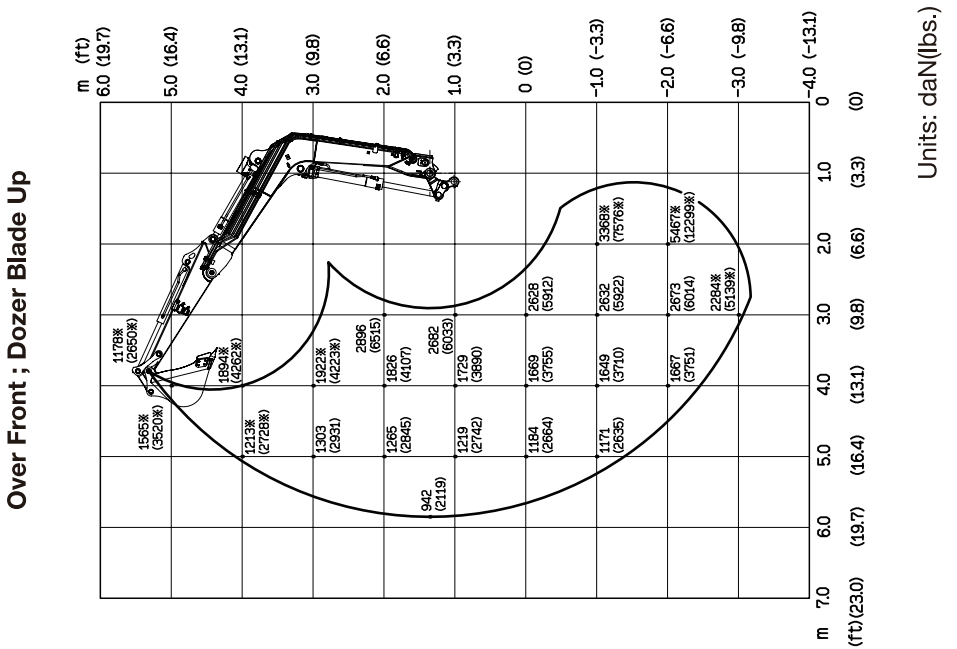


AL9K007E

Standard arm

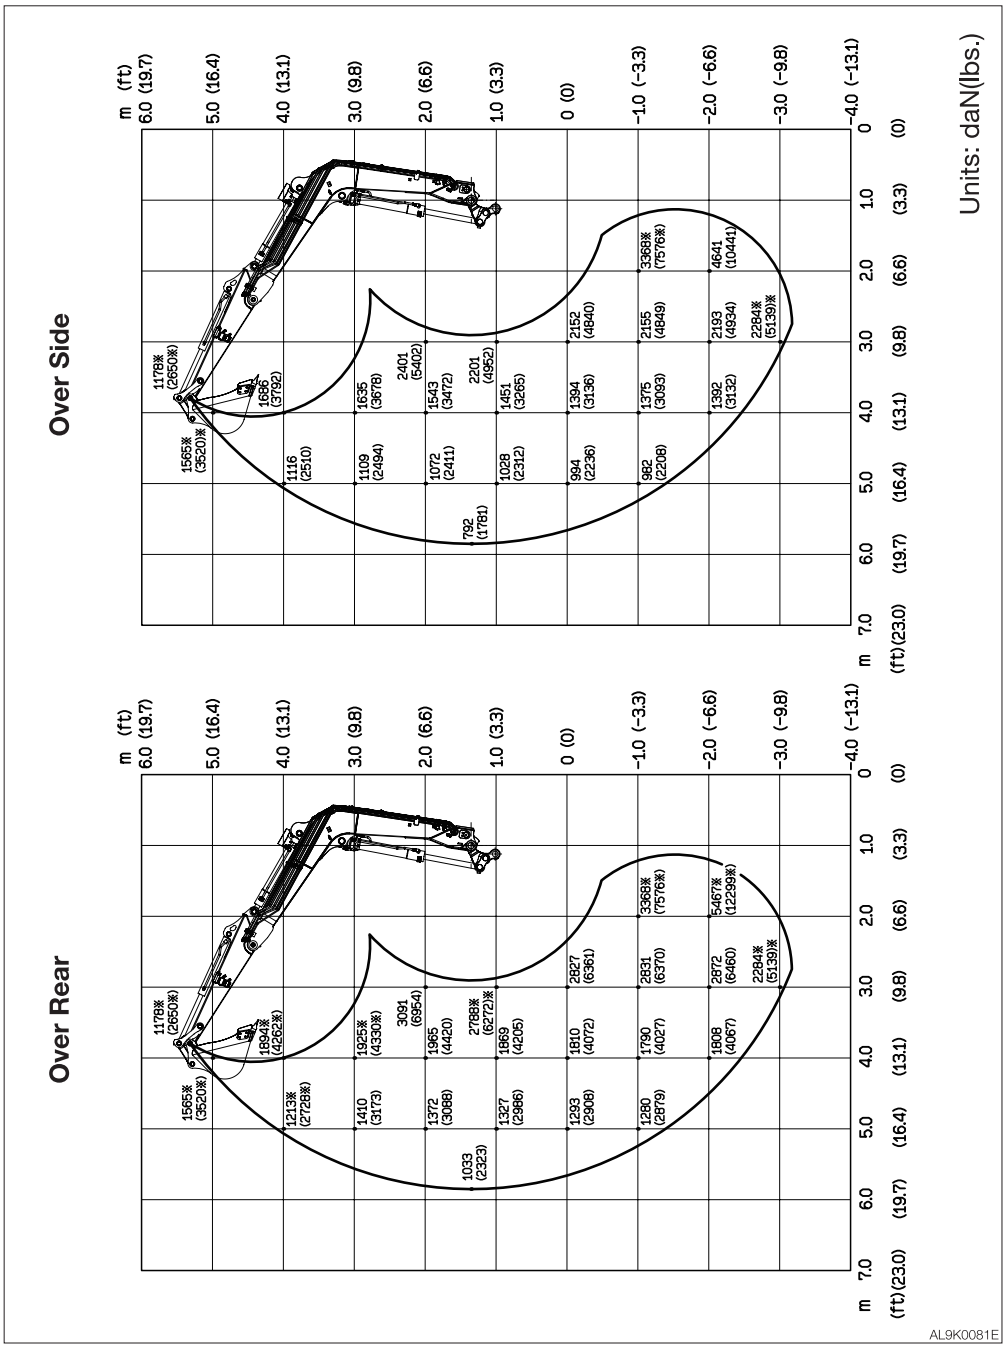


Middle arm

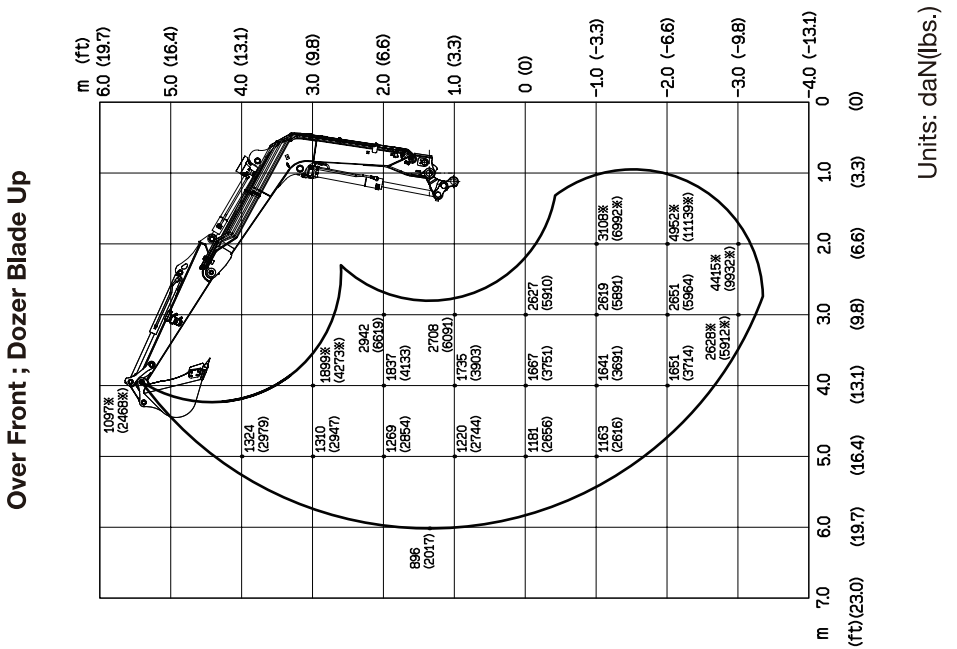


AL9K003E

Middle arm

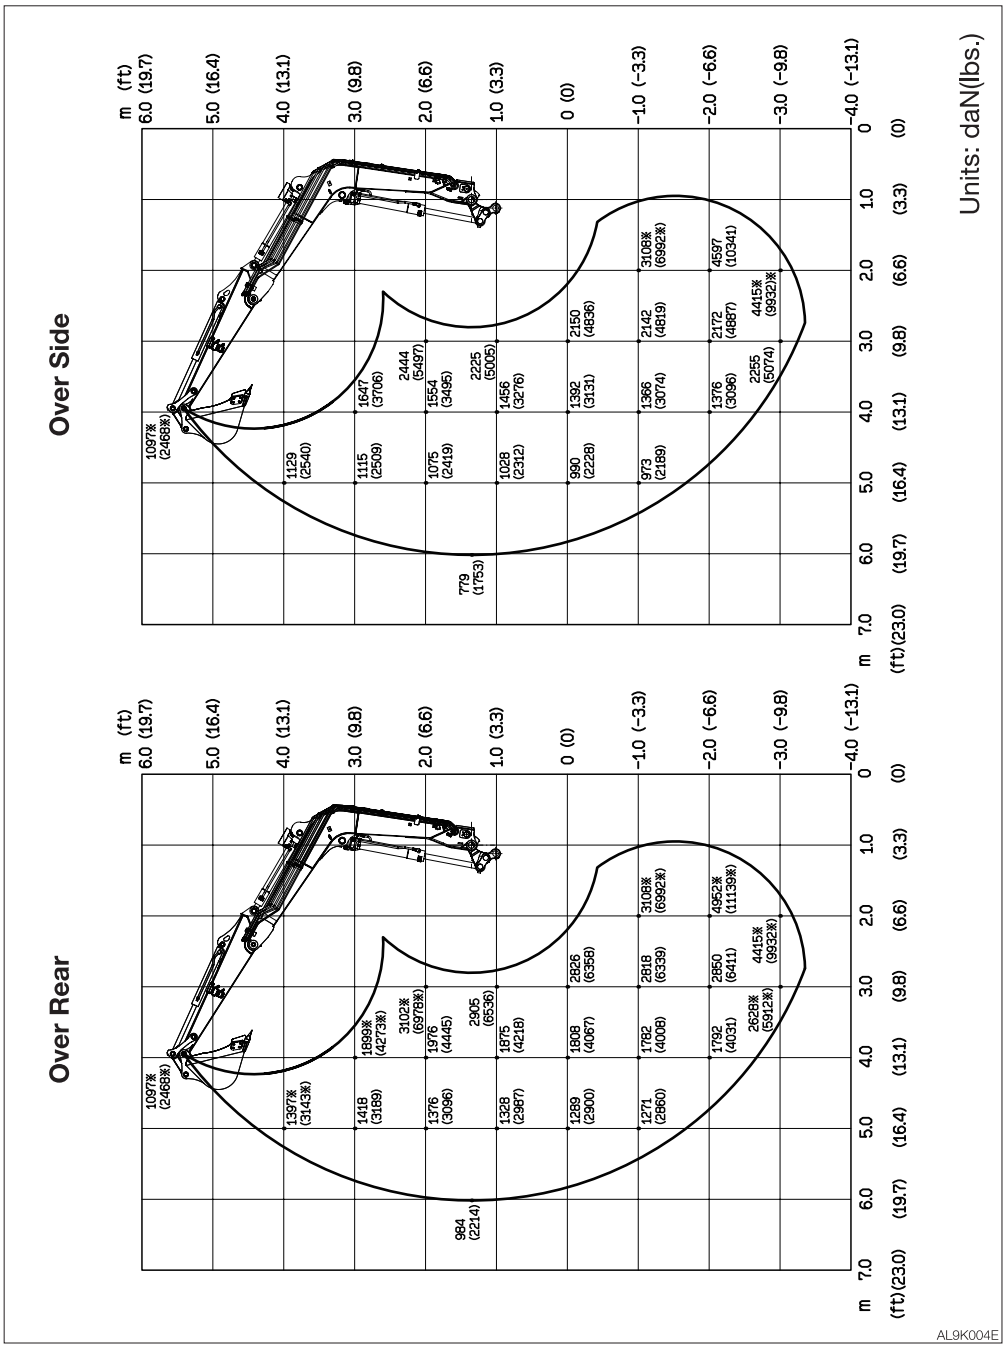

Over Rear
Over Side
m (ft)
6.0 (19.7)
5.0 (16.4)
4.0 (13.1)
3.0 (9.8)
2.0 (6.6)
1.0 (3.3)
0 (0)
-1.0 (-3.3)
-2.0 (-6.6)
-3.0 (-9.8)
-4.0 (-13.1)
m 7.0 6.0 5.0 4.0 3.0 2.0 1.0 0
(ft) (23.0) (19.7) (16.4) (13.1) (9.8) (6.6) (3.3) (0)
1097# (2468#)
1397# (3143#)
1418 (3189)
1899# (4273#)
3102# (6976#)
1376 (3096)
1976 (4445)
2905 (6536)
984 (2214)
1328 (2987)
1875 (4218)
1289 (2900)
1808 (4067)
2826 (6358)
1271 (2860)
1782 (4006)
2818 (6339)
3108# (6992#)
1792 (4031)
2850 (6411)
4952# (11139#)
2628# (5912#)
4415# (9932#)
779 (1753)
1028 (2312)
1456 (3276)
2225 (5005)
1075 (2419)
1554 (3495)
2444 (5497)
1115 (2509)
1647 (3706)
1129 (2540)
990 (2228)
1392 (3131)
2150 (4836)
973 (2189)
1366 (3074)
2142 (4819)
3108# (6992#)
1376 (3096)
2172 (4887)
4597 (10341)
2255 (5074)
4415# (9932#)
Units: daN(lbs.)
AL9K004E

Long arm

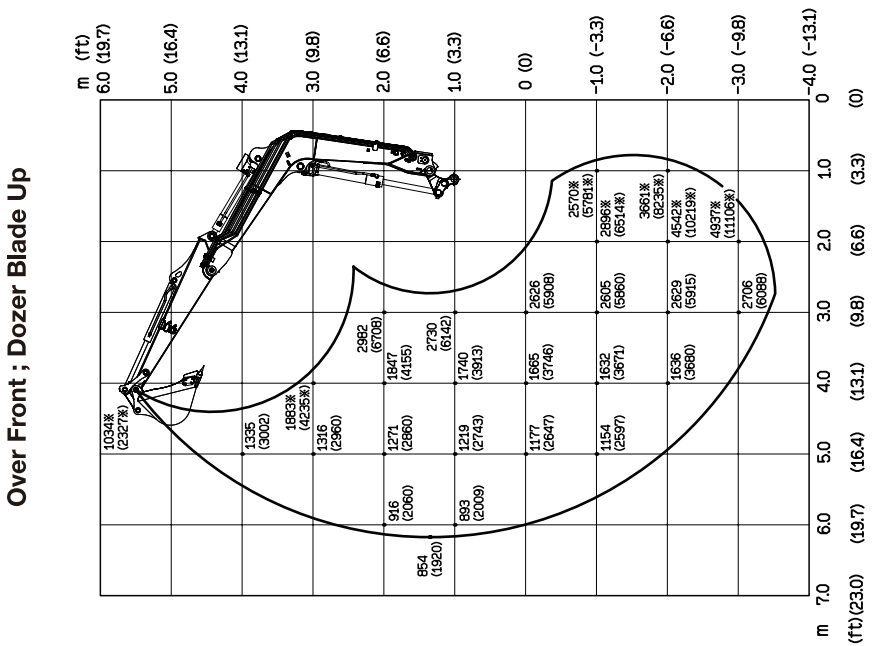

AL9K005E

Long arm

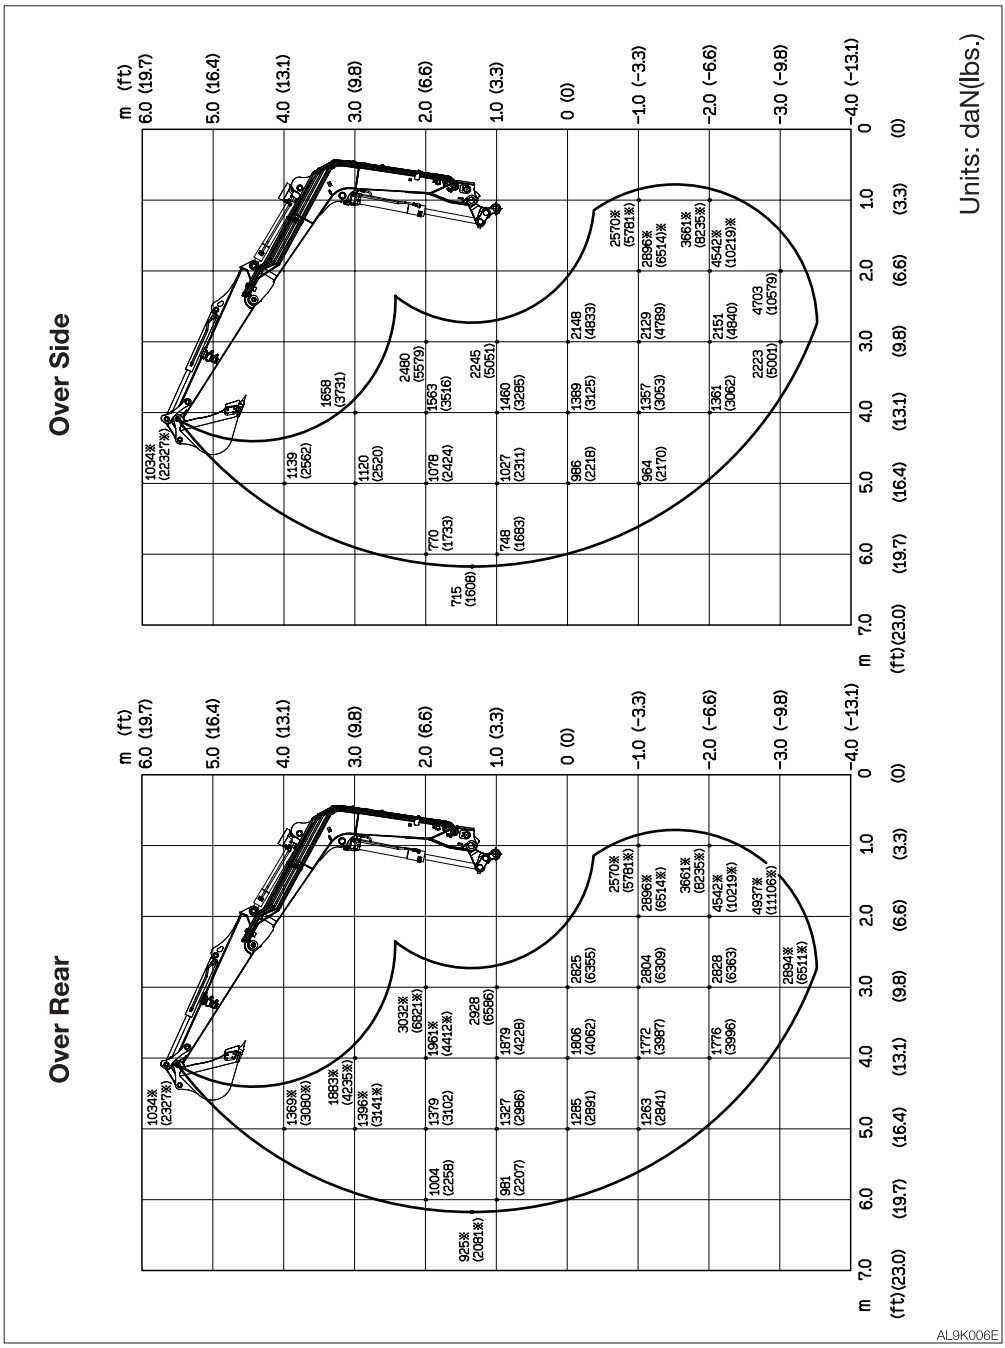
Over Rear
Over Side
m (ft)
6.0 (19.7)
5.0 (16.4)
4.0 (13.1)
3.0 (9.8)
2.0 (6.6)
1.0 (3.3)
0 (0)
-1.0 (-3.3)
-2.0 (-6.6)
-3.0 (-9.8)
-4.0 (-13.1)
m (ft)
7.0 (23.0)
6.0 (19.7)
5.0 (16.4)
4.0 (13.1)
3.0 (9.8)
2.0 (6.6)
1.0 (3.3)
0 (0)
Units: daN(lbs.)
AL9K006E

OPTIONS

GENERAL PRECAUTIONS

SAFETY PRECAUTIONS

⚠ WARNING

When removing or installing an attachment or optional part, take the following precautions.

- Consult with Takeuchi before installing an optional attachment.
- Do not use any attachments not approved by Takeuchi. Doing so may cause safety problems. Or, it may adversely affect the machine's operation or service life.
- We will not be held responsible for any injuries, accidents or damage to its products caused by the use by a non-approved attachment.
- Select a firm, level work area. Also, be sure to park in a well ventilated place.
- Clear obstacles and dangerous objects, and clean up spilled fuel immediately.
- When hoisting, be sure to designate a person to act as a signalman. Follow the instructions of the signalman regarding the procedure and measures.
- When it is necessary to temporally place a heavy object or an attachment on the ground during removal or installation, be sure to place it in a stable position.
- Keep everyone out of the area when hoisting. There is a hazard of objects falling or contacting with people in the area.
- Use a crane to move heavy objects (25 kg (55 lb.) or greater).
- Before removing a heavy object, be sure to put a support to it. When lifting with a crane, pay attention to the center of gravity of the load to keep the machine in balance.
- Do not operate the machine while the load is lifted by a crane stand.
- Use the proper procedure when mounting a boom or arm; otherwise serious damage could result. Consult your sales or service dealer for help.


CAUTIONS WHEN INSTALLING ATTACHMENTS

Be sure to perform a test operation after an optional or other special attachment has been replaced. Inspect the hydraulic oil level and recharge it as necessary. Consult your sales or service dealer for detailed procedures on installing/removing attachments.

CAUTIONS WHEN OPERATING ATTACHMENTS

⚠ WARNING


Long attachments reduce stability of the machine. The machine may tip over if it loses the balance when traveling or slewing on slopes.
Never perform the operations listed below as they are extremely dangerous.

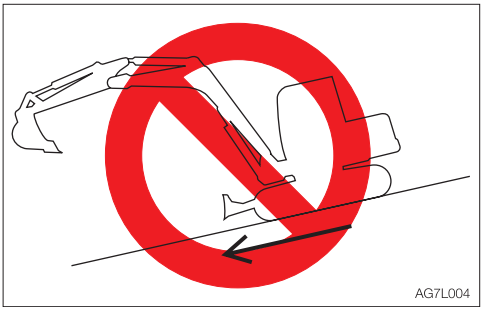

- Traveling down the slopes with the attachment raised



- Traveling across slopes

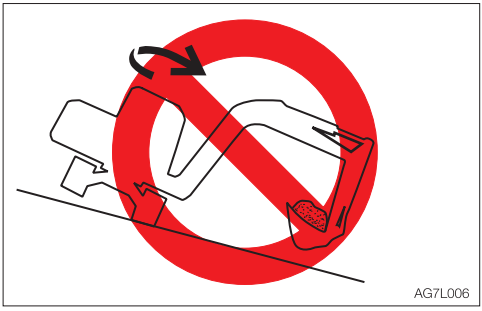

- Slewing on slopes
- If there is a heavy attachment is installed, the machine takes longer distance than usual to come to a complete stop when the stopping operation is performed. Carefully judge the distance so as not to bump into an object around the machine. Keep a safe distance from surrounding obstacles. When a heavy attachment is installed, natural drop (the gradual dropping of the attachment under its own weight when it is stopped in midair) increases.
- The machine can tip over more easily in the lateral direction than in the longitudinal direction.
  - Do not slew sideways with a heavy load at the how attachment. In particular, do not slew sideways on slopes.
  - The attachment is heavier for machines equipped with breakers or crushers than for machines equipped with the standard bucket. Do not operate such machines sideways, especially digging downhill.
- When a long arm is installed, the operating range increases. Carefully judge the distance so as not to bump into an object around the machine. Keep a safe distance from surrounding obstacles.

ATTACHMENT COMBINATION TABLE

The table below shows which bucket should be installed when the machine is using a standard arm, middle arm or long arm. Select a proper bucket by following the table.

⚠ WARNING

- **Consult with Takeuchi before installing an optional attachment.**
- **Do not use any attachments not approved by Takeuchi. Doing so may cause safety problems. Or, it may adversely affect the machine's operation or service life.**
- **We will not be held responsible for any injuries, accidents or damage to its products caused by the use by a non-approved attachment.**

√ :Can be used.
Δ :Can be used only for light operations (digging and loading of dry and loose soil or mud)
— :Cannot be used.
Total bucket mass = Bucket mass + Heaped bucket load (specific gravity: 1.8)


Bucket	Rated capacity m^3 (cu.yd.)	Bucket cutting width mm (inch)	Standard arm 1650 mm (65 in.)	Middle arm 1810 mm (71.3 in.)	Long arm 2000 mm (78.7 in.)
750 W (S.T.D.)	0.245 (0.33)	750 (29.5)	√	√	√
Total bucket mass: 600 kg (1318 lb.) or less					

SELECTING A LEVER PATTERN


The operating pattern of the left and right operating levers can be changed.

⚠ WARNING

Before starting the engine, check the selector to see which operating pattern the left and right operating levers are set.

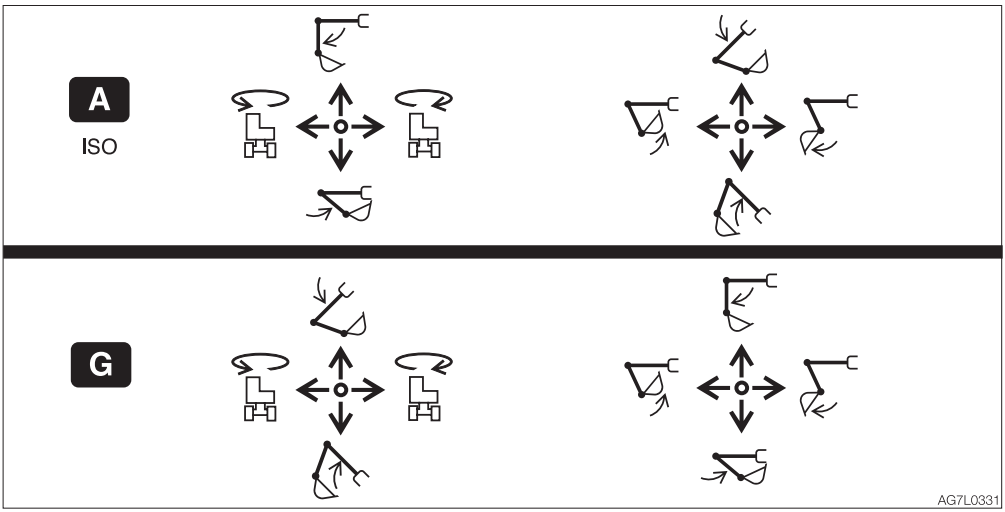

SWITCHING THE LEVER PATTERN

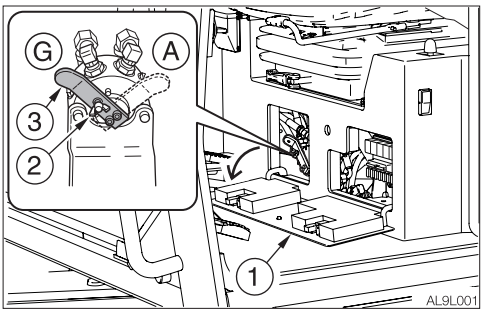

(A) : ISO pattern
(G) : G pattern


1. Park the machine on a flat and rigid ground, and stop the engine.
2. Fully open the cab door and fix it in place.
3. Open the fuse box cover (1).
4. Loosen the wing bolt (2).
5. Turn the selector valve lever (3) to change the pattern.
6. Tighten the wing bolt (2) and fasten the lever (3) in place.
7. Close the fuse box cover (1).
8. Confirm the lever pattern.

HYDRAULIC BREAKER


For handling of the breaker, read the hydraulic breaker's manual, provided separately.

IMPORTANT: When installing an attachment, make sure that it is appropriate for the machine being used. Contact your sales or service dealer for advice on selecting attachments.


CAUTIONS ON OPERATING

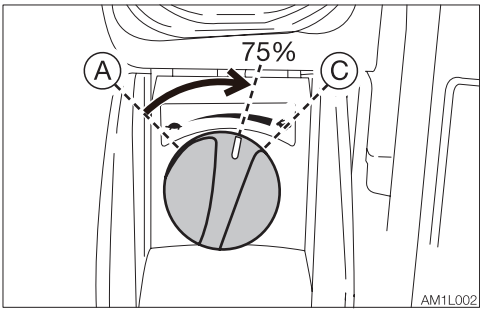


- Start the engine and run it at 75% of the maximum speed.

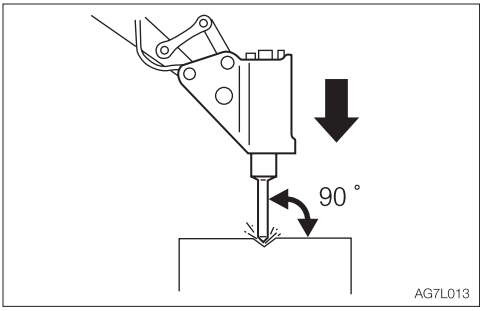


- Pound with the chisel pressed perpendicular to the surface to be pounded.
- When pounding, press the chisel properly against the object to be broken so as to avoid pounding the air.

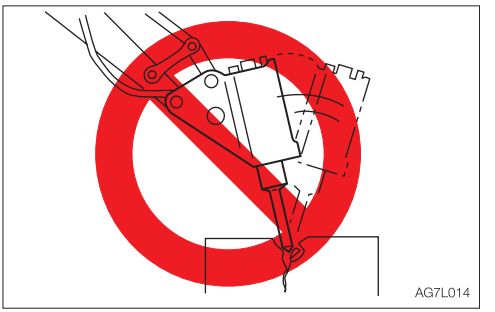


- Do not pry with the chisel or do not pry while pounding.
- Do not move the chisel while pounding.
- Do not pound continuously for over 30 seconds on the same surface.

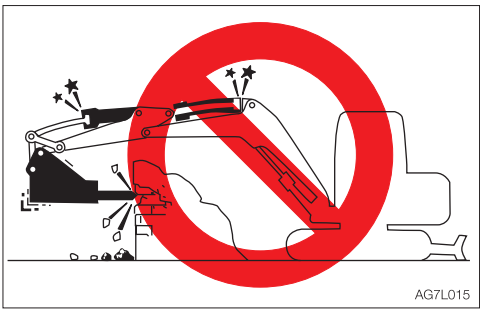

- Do not pound with the cylinder fully extended or retracted (at the stroke end). Leave a margin of at least 50mm (2 in).

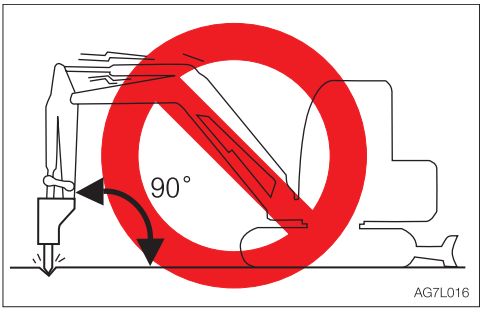

- Do not pound with the arm placed perpendicular to the ground surface.

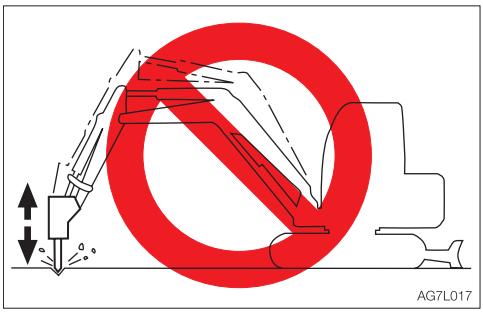

- Do not drop the breaker itself on the object to be broken in order to break it.
- Do not move objects to be broken or rocks with the breaker itself.
- Slew the machine occasionally to cool the engine.
- If a hydraulic hose is vibrating abnormally, nitrogen gas may be leaking from the accumulator. Ask for an inspection early.

REPLACING THE HYDRAULIC OIL REGULARLY


When a hydraulic breaker is used, the oil deteriorates more quickly than that used for a usual operation. Be sure to replace the hydraulic oil and the return filter elements.

- Failure to replace these in time can lead to damage to the machine and the breaker hydraulic system. To improve the service life of the hydraulic systems, be sure to replace the hydraulic oil and return filter element after the number of hours shown on the diagram below.
- When replacing the hydraulic oil, clean the suction strainer.

Replacement interval (hours)

Item	Hydraulic oil	Filter element
1st time	—	25
2nd time	—	100
Periodically	1200 (600)	200

When the breaker operating ratio is 100%.

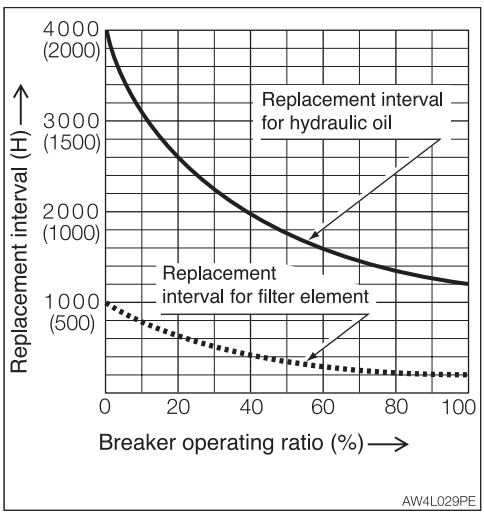

( ): When using conventional antiwear hydraulic oil.


TRAVEL ALARM

The alarm sounds while the machine is traveling and stops when the machine stops traveling.
If the alarm does not sound when the machine travels, the fuse may be blown. Inspect the fuses.


⚠ WARNING

If the fuse blows again soon after replacement, then the electric system is likely faulty. It may pose a fire hazard if not properly repaired. Contact your sales or service dealer for advice.

1. Turn the starter key to the OFF position to stop the engine.

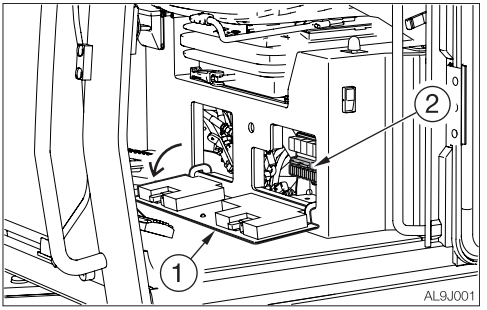

2. Open the fuse box cover (1).
3. Check for any blown fuses (2).

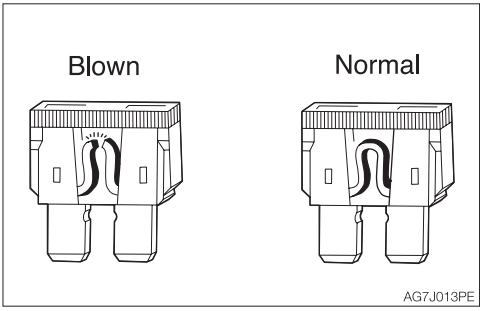

4. If a fuse is blown, replace it with a spare fuse of the same capacity.

Fuse layout and circuits protected

Capacity	Symbol	Protected circuit
20A		Light
10A		Wiper
20A		Lever lock
15A	CTL	Controller power supply, **travel alarm**
20A	CTL (OX)	OX controller power supply
25A	CAB	Cab interior power supply
25A	OPT(1)	Option (1)
25A		AC motor
10A		Immobilizer
15A		Air conditioner compressor
20A	CAB	Cab light
5A		Switch lighting

Capacity	Symbol	Protected circuit
10A		Horn
15A		Starter switch
10A		Feed pump
25A		Fuel supply pump

OPTIONAL EQUIPMENT MASS

Machine mass kg (lb.) (Not including operator)		Rubber crawlers		
		Standard arm 8420 (18565)	Middle arm 8445 (18615)	Long arm 8455 (18645)
OPTION				
Steel crawlers		200 (440)		
Segmental rubber crawler		266 (585)		
Shoe guide		18 (40)		
Center guide		21 (46)		
Middle arm		20 (45)		
Long arm		35 (75)		
Auxiliary hydraulic lines	Auxiliary 3rd	30 (65)		
	Auxiliary 3rd + Auxiliary 4th.	50 (110)		
Roof guard (Level II: ISO 10262)		23 (50)		
Front guard (Level II: ISO 10262)		42 (95)		

Units: kg (lb)

*: Mass of optional equipment is added to the standard machine mass.
*: This table only contains the optional equipment of 10kg (20lb) or more in mass.

BIODEGRADABLE OIL

Biodegradable oil is a new type of hydraulic oil that is decomposed into carbon dioxide and water by microorganisms in the soil and water. It is highly safe for living organisms and offers advantages in term of environmental protection.

- Recommended biodegradable oil: Mobile EAL Envirosyn 46H (an ester synthetic oil). When replacing the hydraulic oil with biodegradable oil, use the above or an equivalent oil.
  Note that other oils, even other brands of ester synthetic oils, may damage O-rings, packings and seals. Takeuchi products shipped with the optional biodegradable oil are shipped with the above brand of oil.
- When switching from a mineral oil to a biodegradable oil, the parking brake torque decreases by about 30%.

REPLACING THE HYDRAULIC OIL WITH BIODEGRADABLE OIL

Mixing mineral oil with biodegradable oil will result in a decrease of the hydraulic oil's performance as well as a decrease in biodegradability and safety. The hydraulic oil system must be flushed as described below before supplying the biodegradable oil. This operation is dangerous and requires experience. Have it performed by a Takeuchi sales or service outlet.


Flushing

To be performed by a Takeuchi sales or service outlet

1. Drain the hydraulic oil (mineral oil) from the hydraulic oil tank and clean the inside of the tank and suction strainer.
   Refer to "Replacing the hydraulic oil and cleaning the suction strainer".
2. Remove the cylinder hoses and drain the hydraulic oil (mineral oil) from inside the cylinders.
3. Supply new biodegradable oil to the hydraulic oil tank.
4. Bleed the air from the hydraulic oil system.
5. Operate the hydraulic devices for 30 minutes.
6. Drain the biodegradable oil from the tank and cylinders.
7. Replace the hydraulic oil return filter with a new filter.
8. Repeat steps 3 and 4.
9. Operate the hydraulic devices for 30 minutes.
10. Drain the biodegradable oil from the tank and cylinders.
11. Repeat steps 3 and 4.
12. Operate the hydraulic devices for 1 hour.
13. Drain the biodegradable oil from the tank and cylinders.
14. Replace the return filter with a new filter.
15. Repeat steps 3 and 4.
16. Operate the hydraulic devices, then check for oil leakage.

There is no need to flush the hydraulic oil system when switching from biodegradable to mineral hydraulic oil.

CAB OPTIONS

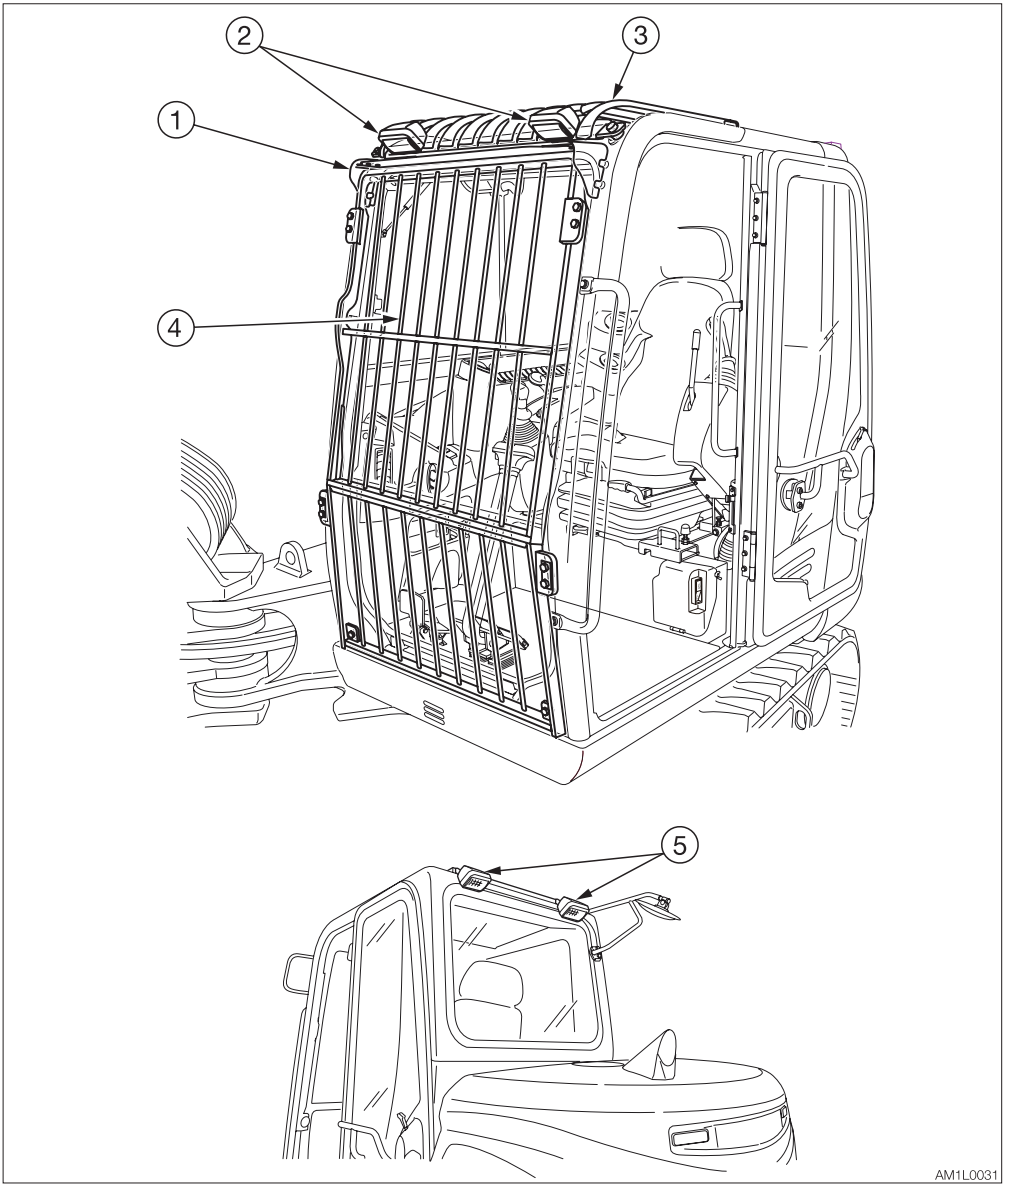


1. Rain guard
2. Front light
3. Roof guard (Level II: ISO 10262)
4. Front guard (Level II: ISO 10262)
5. Rear light

TAKEUCHI SECURITY SYSTEM


The Takeuchi Security System is a system that allows only registered starter keys to be used for starting the engine.
The engine cannot be started with any unregistered or counterfeit starter keys. If a registered starter key is lost or stolen, you can set the system to delete the registered key information, so that the lost or stolen key cannot be used to start the engine. Although machine theft cannot be completely prevented, the system certainly helps reduce the risk of theft.

STARTER KEY

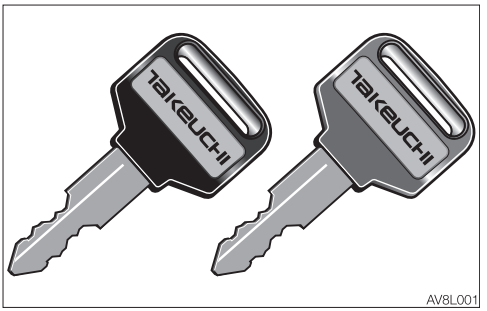


There are two types of starter key, red and black, which can be registered in the Takeuchi Security System.
The red key is the master key. The black key is the starting key.

STARTING THE ENGINE

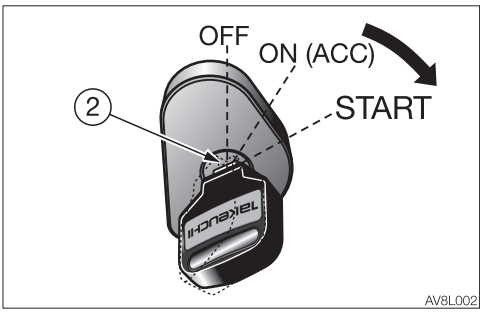

The engine can be started using the normal method with a registered BLACK key.
The engine cannot be started using the RED master key.
Refer to Chapter 3, “Starting and stopping the engine”.

If an attempt is made to start the engine with an unregistered key:

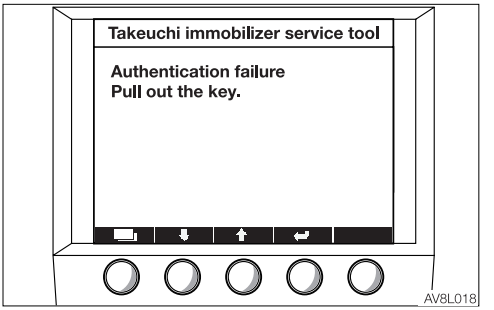

If an unregistered starter key is turned from the OFF to the ON (ACC) position, the message “Authentication failure” appears and the alarm starts sounding.
If this attempt is repeated five times in a row, the horn sounds for two minutes, and the engine cannot be started. The horn stops when the key is turned to the OFF position.


REGISTERING AND DELETING THE STARTER KEY

⚠ WARNING


- **Sit on the operator's seat.**
- **Raise the safety lock lever to the locked position.**
- **Clear all people from the machine and the area.**
- **Sound the horn to warn people around the machine.**

Registration may fail if the starter key is on a keyring or keychain; remove it before starting registration.
A malfunction could occur if multiple starter keys are brought near to the key cylinder. Be sure that no starter keys other than the correct key are near the key cylinder during registration.


Starter key registration procedure
For Steps 1 to 6 below, complete each step and proceed to the next one within five minutes. If no operation is performed for five minutes during this procedure, the system returns to the initial state.
From Step 7 onward, the system automatically ends the operation if no operation is performed for five minutes.

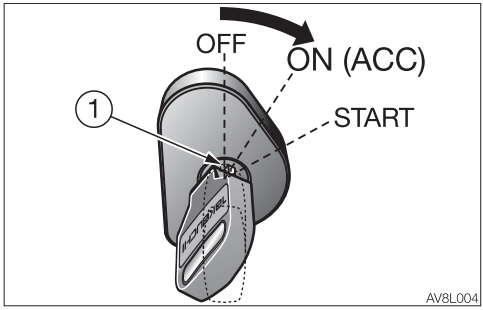


1. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position.

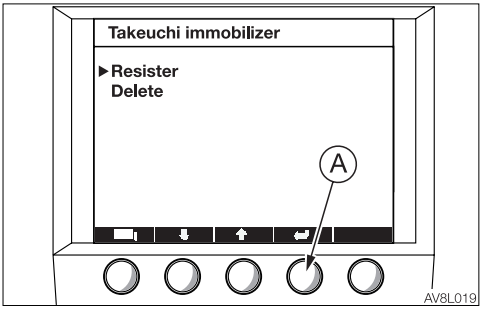


2. On the LCD, select “REGISTER” and press (A).

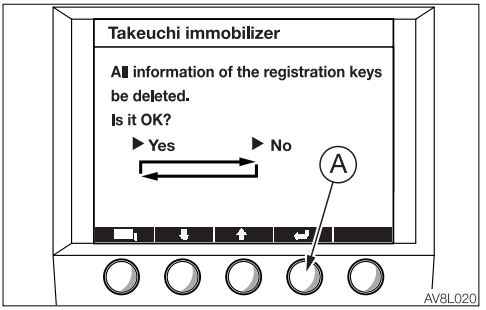



3. Select whether to delete all of the existing registration information.
   On the LCD, select “YES” and press (A): All registration information will be deleted; register a new key.
   On the LCD, select “NO” and press (A): A new starter key will be added to the existing registration information.

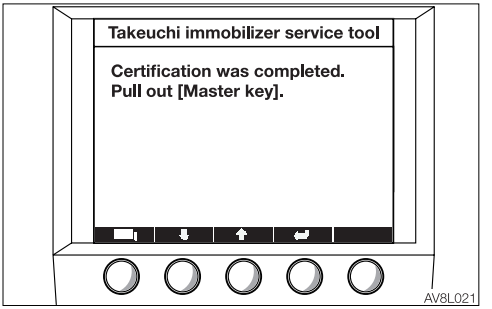

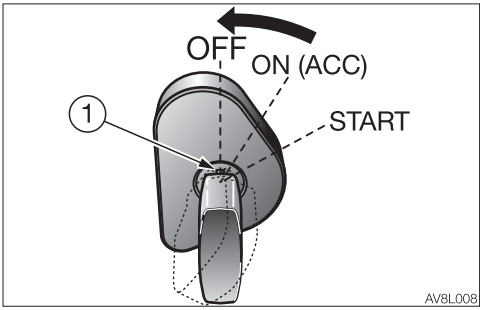


4. When the message “Certification was completed” appears on the LCD, turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   The number (3) in the lower left indicates the number of starter keys currently registered (only for canopy). Up to 13 starter keys can be registered.

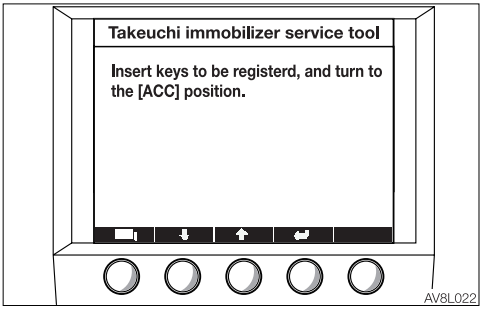


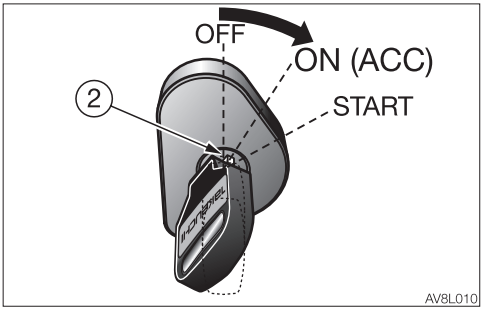


5. Insert the starter key (2) to be registered into the starter switch and turn the key from the OFF to the ON (ACC) position.

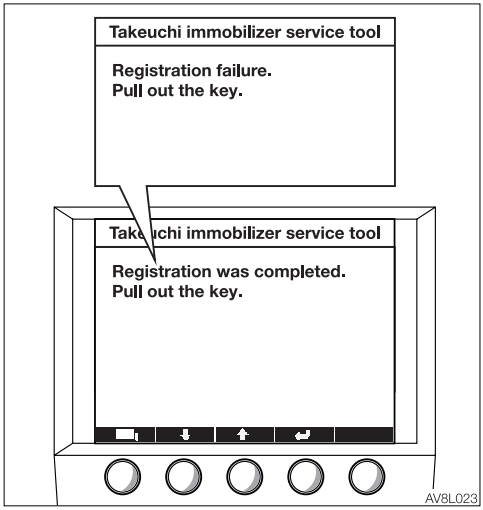


6. If the registration was successfully completed, the message “Registration was completed” appears. This means that the starter key (2) currently inserted has been registered.
   If the registration fails, the message “Registration failure” appears.

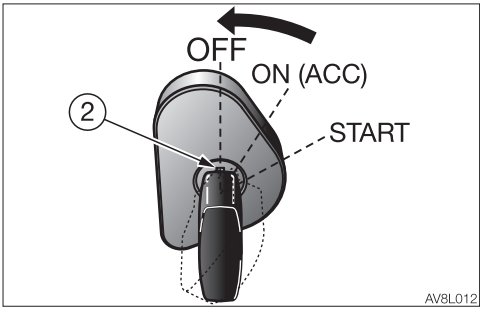


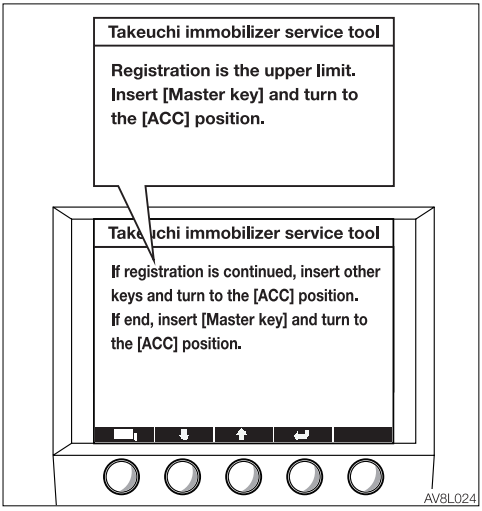

7. Turn the starter key (2) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   To continue registration, repeat the steps from Step 5.
   To end registration, proceed to Step 8.

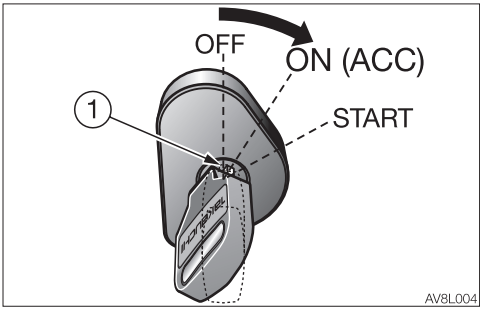


8. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position. Or, wait for five minutes or more.

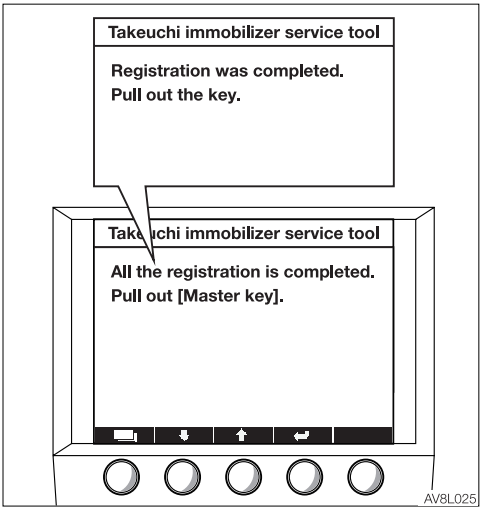


9. If any starter key has been registered, the message “All the registration is completed” appears. Turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch to complete the registration.
   If no starter key has been registered, the message “Registration failure” appears, and the registration information is returned to the initial state.


Deleting a registered starter key
The information of each registered starter key can be deleted to cancel its ability to start the engine.

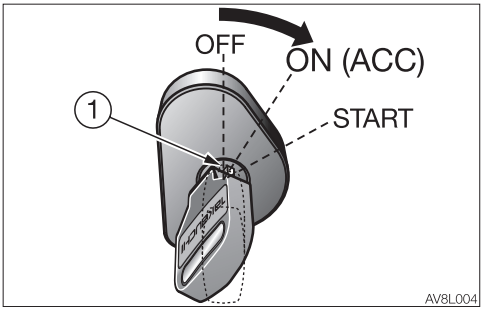


1. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position.

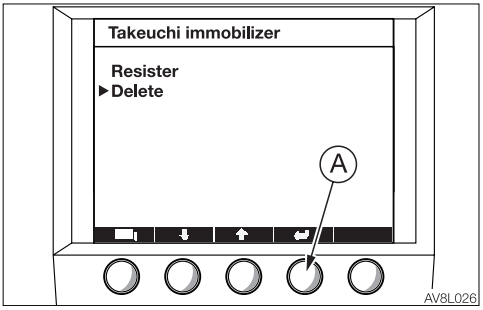


2. On the LCD, select “DELETE” and press (A).

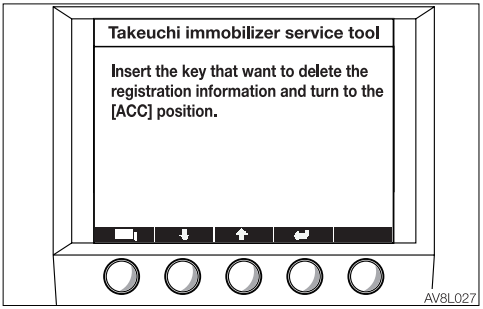


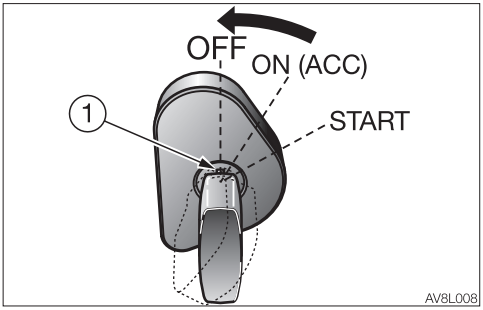


3. When the display shown as the illustration appears on the LCD, turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
Note: If the registered key is lost and you want to delete all registration information, please refer to STEP 3 (A) on page 8-14.

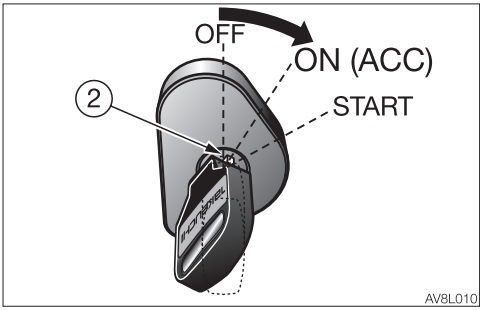

4. Insert the starter key (2) to be deleted into the starter switch and turn the key from the OFF to the ON (ACC) position.

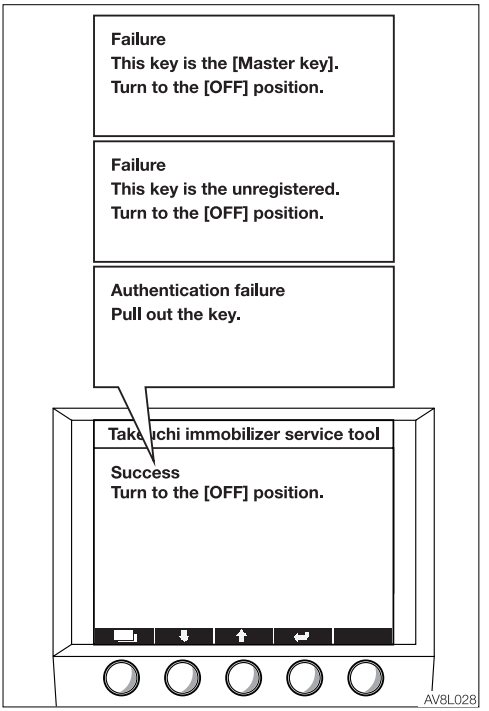

5. If the deletion is successful, the message “Success” appears. This means that the information registered for the starter key (2) currently inserted has been deleted. If the deletion fails, the message “Failure” or “Authentication failure” appears on the LCD. Remove the starter key, and then repeat the steps from Step 1 again.

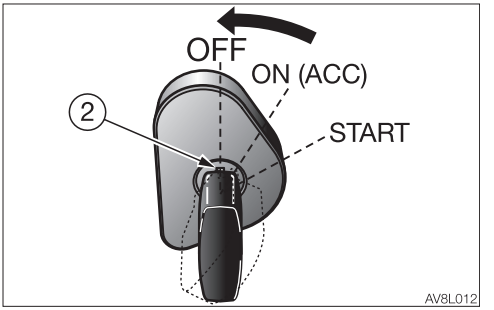

6. Turn the starter key (2) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   To continue deletion, repeat the steps from Step 1.

IF THE MASTER KEY IS LOST

If you lose your master key, contact your service or sales dealer for assistance.

COUNTRIES WHERE THE SYSTEM CAN BE USED

To use the Takeuchi Security System, “radio wave authentication” must be obtained in the country where the system is to be used. The system can be used in the countries listed below, as of January 2017. Do not use the system in other countries. For details on how to disable the system, please contact your service or sales dealer for assistance.

Countries where the system can be used:
Ireland, Italy, UK, Estonia, Austria, Holland, Cyprus, Greece, Croatia, Sweden, Spain, Slovakia, Slovenia, Czech, Denmark, Germany, Hungary, Finland, France, Bulgaria, Belgium, Poland, Portugal, Malta, Latvia, Lithuania, Rumania, Luxemburg, Iceland, Norway, Liechtenstein, Switzerland, Turkey

First Published June 2014
Eleventh Published August 2018

OPERATOR'S MANUAL

TB280FR Hydraulic excavator

Edited and issued by TAKEUCHI MFG. CO., LTD.

Printed in Japan by STATION M Co., Ltd.

<Cab>

ASAHI DENSO

6-2-1 Somejidai, Hamakita-ku, Hamamatsu, Shizuoka 434-0046, Japan

EU DECLARATION of CONFORMITY (DoC)

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Name:	ASAHI DENSO CO.,LTD
Address:	6-2-1 Somejidai, Hamakita-ku, Hamamatsu, Shizuoka, 434-0046 Japan

We declare that the DoC is issued under our sole responsibility and belongs to the following product.

Object of the declaration:

Product Name	Immobilizer
Model Name	CZ156
Accessories	N/A

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

Radio Equipment (RE) Directive (2014/53/EU)

The following harmonized standards and technical specifications have been applied:

Health & Safety (Article 3.1(a)):	EN 60065: 2014
EMC (Article 3.1(b)):	EN 301 489-1 V2.1.1 EN 301 489-3 V2.1.1 (Final draft)
Radio Spectrum (Article 3.2):	EN 300 330 V2.1.1

Japan, Shizuoka	May 29, 2017	Tomohiro Yaguchi
Place of Issue:	Date of Issue:	Tomohiro Yaguchi Section chief Engineering Department

Declaration of Conformity

We herewith declare that following named machine, based on its conception and design and in the form brought into service is in accordance with the relevant, basic safety and health requirements of the following EU directives. In case of any alteration of the machine not coordinated with us, this certificate loses its validity.

Designation of the machine	Hydraulic Excavator
Manufacturer	TAKEUCHI MFG. CO., LTD 205 Uwadaira, Sakaki-machi, Hanishina-gun, Nagano 389-0605, Japan

Model	TB280FR
Engine type	4TNV98CT-WTBZ
Engine power	51.6 kW @ 2000 rpm

The machine is in accordance with the requirements of EU directives:

1) Machine directive 2006/42/EC and appendix
2) Electromagnetic compatibility-regulation 2014/30/EU and appendix
3) Noise directive 2000/14/EC (Evaluation procedure according to appendix VI), 2005/88/EC and appendices.
4) Regulations on engine emissions: 97/68/EC as last amended by Directive 2011/88/EU.

Harmonized norms: EN474-1:2006+A4:2013, EN474-5:2006+A3:2013.

Compiler of the technical files:
Hans Friedrich
Oliver Scharschmidt
Wilhelm Schäfer GmbH
68307 Mannheim-Sandhofen GERMANY

Issued in Sakaki, Japan
Akio Takeuchi, President

 **WARNING:** Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.



WARNING:

Cancer and Reproductive Harm –
www.P65Warnings.ca.gov