
INSPECTING THE RUBBER CRAWLERS

Repair or replace the rubber crawlers if their condition becomes as described below. Consult your sales or service dealer for repair or replacement.


Rubber crawler
Replace the crawler if the entire crawler is stretched and cannot be adjusted.

(1) Lug

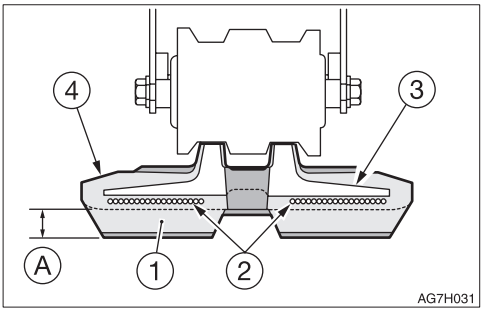


Replace if the height of (A) is 5 mm (0.2 in.) or below.

(2) Steel cord

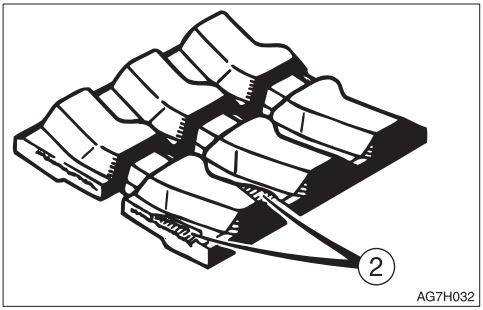


Replace if the steel cord is exposed for two links or more.
Replace if the half or more of the steel cords on one side are cut.

(3) Metal core

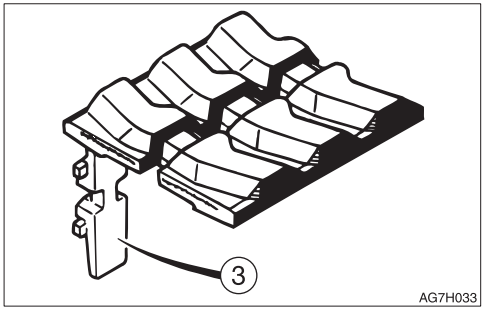

Replace if even one metal core is off.

(4) Rubber

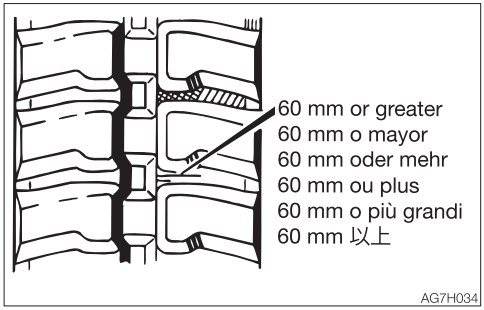

Repair if there are cracks of 60 mm (2.4 in.) or greater in length.
If the steel cord is visible, repair as soon as possible, regardless of the length of the crack.

REPLACING THE RUBBER CRAWLERS


⚠ WARNING

- **If you must work beneath the raised machine or working equipment, always use wood blocks, jack-stands or other rigid and stable supports. Never get under the machine or working equipment if they are not sufficiently supported.**
- **If maintenance must be performed with the engine running, always work as a two person team communicating each other.**
  - **One person must sit in the operator's seat so that he/she can immediately stop the engine when necessary. He/she must take care not to touch the lever or pedal unless necessary.**
  - **The one who performs maintenance must make sure to keep his/her body or clothing away from the moving part of the machine.**


IMPORTANT: When replacing the crawler belts, replace the right and left belts at the same time.
IMPORTANT: When the travel speed button is set to the 2nd speed side while the engine is running, the tensioning cylinder rods extend and the crawler belt tension is increased. Keep the engine at the 1st speed when replacing. Do not set to the 2nd unless for increasing tension.

Note: This machine uses a hydraulic cylinder to adjust the tension of the crawler belts. It is not necessary to regularly perform adjustments of the crawler belt tension.


Removal

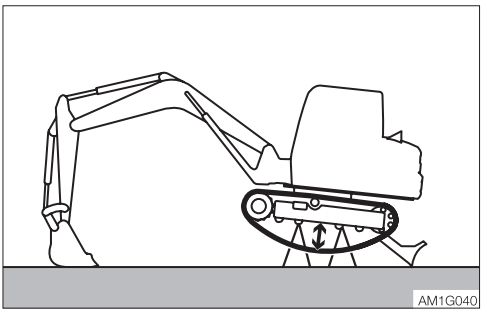

1. Start the engine and raise the machine body with the hoe attachment and the dozer blade.
2. Stop the engine.

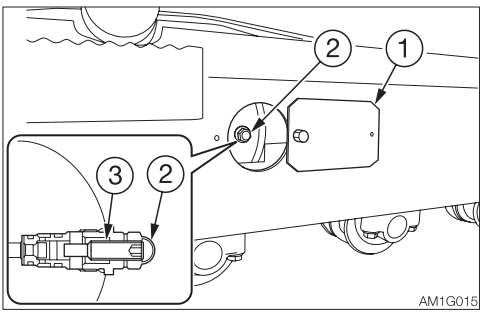


3. Remove the valve cover (1) at the center of one of the crawler frames.
4. Turn the plug (2) counterclockwise and remove it.
5. Turn the stem (3) counterclockwise with a hex wrench to completely loosen the tension of the crawler.
6. Once the crawler belt is completely loose, tighten the stem (3) until it is firm.
   - Tightening torque: 18.6 to 21.6 N·m (13.7 to 15.9 ft-lb.)
7. Tighten the plug (2).
   - Tightening torque: 18.6 to 21.6 N·m (13.7 to 15.9 ft-lb.)
8. Do the same for the other side.

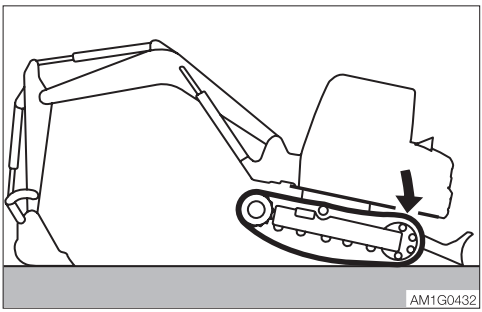


9. Slowly lower the dozer blade side of the machine body. (Do not start the engine.)
10. Lower the machine body until the crawlers contact the ground with the maximum slack.
11. When the crawlers are disengaged from the idlers, slide the crawlers to the outside and remove them.
12. Remove the crawlers from the sprockets, and then remove the crawlers from the crawler frames.

Installation


1. Engage the crawlers around the left and right sprockets.
2. Set the left and right crawlers on the idlers.
3. Start the engine.
4. Press the travel speed button once to set it to the 2nd speed side. The left and right crawler belts are tightened simultaneously.

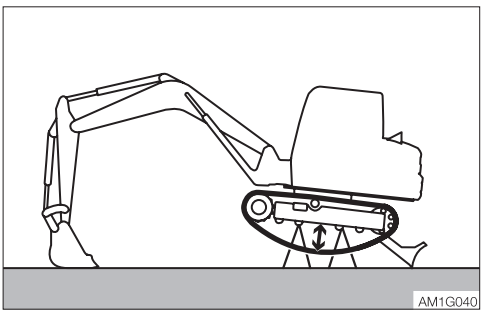

5. Check that the crawler belts are properly tightened.

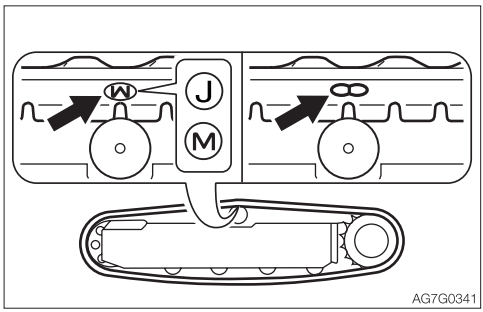

6. For rubber crawlers, move the machine so that the “M”, “J” or “∞” mark at the joint is at the top center of the crawler frame.

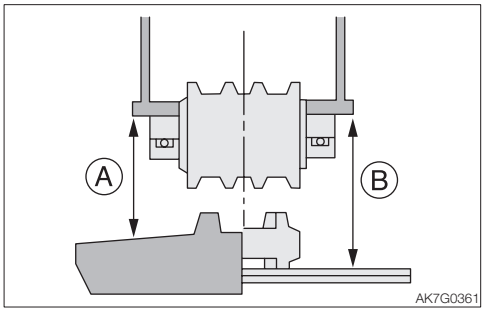

7. Inspect the gap (A or B) between the bottom surface of the frame at the center of the crawler frame and the top surface of the crawler.
   The gap (A or B) must be within the following range:

   (A).....Rubber crawler
   160 to 180 mm (6.3 to 7.1 in.)
   (B).....Steel crawler
   270 to 290 mm (10.6 to 11.4 in.)
   (B).....Segmental rubber crawler
   257 to 277 mm (10.1 to 10.9 in.)

Note: When the self-adjusting shoe tension system is properly working, the shoe should have the gap (A or B) as described above, at the time of installation.
When the machine is lowered and driven in 2nd speed, the crawler belts will be stretched to the correct tension. The values of shoe tension (gap values) after the 2nd speed travel are different from those described above.

EVERY 2 YEARS

REPLACING THE RECEIVER DRYER

This operation requires experience. Ask your sales or service dealer for it.

MAINTENANCE DURING EXTENDED STORAGE PERIOD

Storage procedures

If the machine is to be stored for 30 days or more, store it indoors. If it must be stored outdoors, park the machine on a surface laid with lumber on a flat ground, and place a waterproof cover over it so that it stays dry.

1. Clean the machine.
2. Inspect for oil leakage, water leakage, cracks and loose nuts and bolts.
3. Add fuel and replace the hydraulic oil and oil.
4. To prevent rusting and freezing, replace the engine coolant with long-life coolant (LLC).
   Refer to “Cleaning the engine cooling system” on page 5-50 or page 5-55.
5. Use the grease gun to lubricate the grease fittings.
6. Fully retract the bucket and arm cylinders and lower the bucket and dozer blade to the ground.
7. Apply rust-inhibiting oil to the hydraulic cylinder rods.
8. Disconnect the negative cable from the battery and cover the battery to prevent freezing.

During storage

⚠ WARNING

- **Do not operate the machine in an enclosed area without adequate ventilation.**
- **If natural ventilation is not possible, install ventilators, fans, exhaust extension pipes or other venting devices.**

1. To prevent rusting, operate the machine once a month so that the oil can be circulated throughout the system.
2. Inspect the battery and recharge it as necessary.
   Ask your sales or service dealer for recharging.

Starting the machine after storage

IMPORTANT: If the above “Storage procedures” have not been followed during the extended storage periods, consult your sales or service dealer before starting the machine again.

1. Wipe off the rust-inhibiting oil that was applied on the piston rods of the hydraulic oil cylinders.
2. Add oil or grease as necessary.

Returning the engine to service


1. Perform the daily checks.
2. The engine should be pre-oiled before startup.
   a. Crank the engine, leaving the fuel system shut off so the engine will not start, for 15 seconds.
   b. Then pause for 30 seconds.
   c. Repeat the procedure until you have cranked the engine for a total of one minute. This will circulate the oil in the engine’s lubrication system.
3. Prime the fuel system.
4. Start the engine. Allow the engine to idle for approximately 15 minutes while you check for:
   · Proper oil pressure
   · Fuel, engine oil or coolant leaks
   · Proper operation of the indicators and/or gauges
5. Avoid prolonged operation at minimum or maximum engine speeds and loads for the remainder of the first hour of operation.

TROUBLESHOOTING




SYMPTOMS THAT ARE NOT MALFUNCTIONS

The symptoms listed below are not malfunctions.

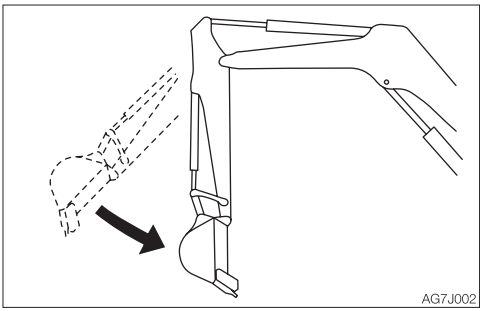

- The arm retracting speed momentarily slows down when it reaches an almost vertical position while the engine is running at low speed.

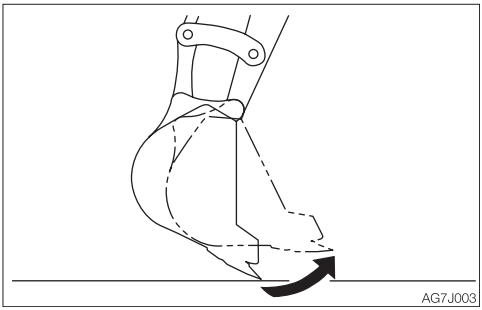

- The bucket teeth moving speed momentarily slows down when it reaches an almost horizontal position while the engine is running at low speed.
- The slew motor produces noise at the beginning and end of the slewing.
- The travel motor produces noise when stopped suddenly from its high speed traveling.
- The control valve produces noise if excessive force is applied to the working equipment or when it moved to the stroke end.
- It becomes less easy to operate the machine when an attachment weighing more than a standard arm or bucket is installed.

Applicable machine models 185100001 or later


- In some cases smoke may be emitted from the tail pipe while the DPF regeneration is being performed. This is not a failure; it is due to burning of the particulate matter (PM).
- In some cases the noise associated with the DPF regeneration operation or cancel operation may change; this is not a failure.

IF THE ENGINE OVERHEATS

⚠ WARNING

- **Do not open the engine hood when steam is coming from it. The steam or hot water may spurt out and cause burns.**
- **Do not try to remove the radiator cap or the drain plug when the cooling water is hot. Stop the engine, wait until the engine and the radiator cool, and then slowly loosen the radiator cap to release the internal pressure.**
- **Before performing maintenance, stop the engine and allow the machine to cool down.**

The symptoms listed below indicate overheating.

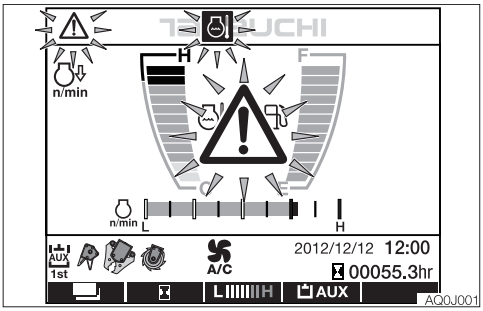

- An alarm is sounded and the engine emergency lamp and the coolant temperature warning lamp start flashing.
- The water temperature gauge level is in the red zone.
- Steam comes from the engine room.

Remedy procedure

1. Park the machine in a safe place.
2. Check if steam is coming out of the closed engine hood.
3. If there is steam, stop the engine immediately and contact your sales or service dealer for repair. If steam, is not coming out run the engine at low idle and let the water temperature cool down.
4. When the water temperature gauge level drops in the green zone, stop the engine.
5. Perform the inspections and the remedies listed below once the engine cools down.
   - Fan belt slack..... Adjust
     Refer to page 5-26.
   - Coolant level ..... Add
     Refer to page 5-20.
   - Water leakage..... Repair
   - Radiator fins..... Clean
     Refer to page 5-41.
   - Sediment in cooling system
     ..... Clean
     Refer to page 5-50 or page 5-55.

If the problem persists after the above remedies, contact your sales or service dealer for repair.

IF THE BATTERY GOES DEAD

The symptoms below indicate that the battery is dead.
- The starter motor does not turn or fails to start the engine.
- The horn is too weak.

Remedy procedure

Start the engine using the booster battery on the other vehicle (booster vehicle) and the jumper cables.


⚠ WARNING

- **When starting the engine using the jumper cables, be sure to connect the cables by following the proper steps. Improper use of jumper cables can result in battery explosion or unexpected machine motion.**
  - **Do not allow the booster vehicle and the machine with a dead battery (dead machine) to touch each other.**
  - **Do not allow the positive (+) and the negative (–) clips of the jumper cables to touch each other.**
  - **When connecting, attach the jumper cable to the positive (+) terminals first. When disconnecting, remove the cable from the negative (–) terminal (ground) first.**
  - **Connect the last clip of the jumper cable to a point as far away from the battery as possible.**
- **Always wear the protective goggle when jump starting the engine by using the jumper cables.**

IMPORTANT: Use the jumper cables and clips of a size suited to the capacity of battery. Do not use damaged or corroded jumper cables and clips.
IMPORTANT: Be sure that the battery of the booster vehicle has the same capacity as the battery of the dead machine.
IMPORTANT: Be sure to connect the clips securely.

Connecting the jumper cables

IMPORTANT: Set the starter keys of the booster vehicle and the dead machine to the OFF position.

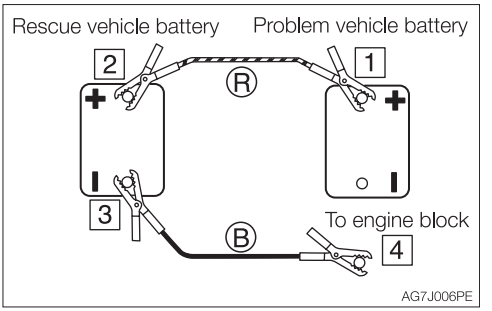


1. Connect the clip of jumper cable (R) to the positive (+) battery terminal of the dead machine.
2. Connect the other clip of jumper cable (R) to the positive (+) battery terminal of the booster vehicle.
3. Connect the clip of jumper cable (B) to the negative (–) battery terminal of the booster vehicle.
4. Connect the other clip of jumper cable (B) to the engine block of the dead machine. Connect the clip to a place as far from the battery as possible.

Starting the engine

1. Check that the clips are securely connected to the terminals.
2. Start the engine of the booster vehicle and run it at high speed.
3. Start the engine of the dead machine.

Disconnecting the jumper cables

Once the dead machine is successfully running, remove the jumper cables by following the same steps as for connection in the reverse order.

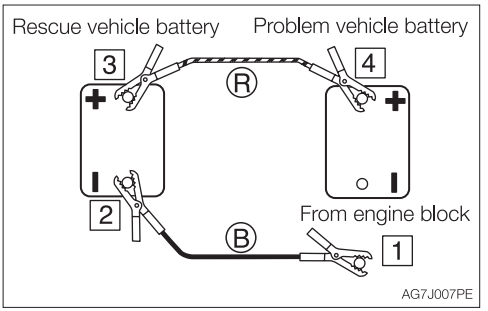

1. Disconnect the clip of jumper cable (B) from the engine block of the dead machine.
2. Disconnect the other clip of jumper cable (B) from the negative (–) battery terminal of the booster vehicle.
3. Disconnect the clip of jumper cable (R) from the positive (+) battery terminal of the booster vehicle.
4. Disconnect the clip of jumper cable (R) from the positive (+) battery terminal of the dead machine.

Recharging

Ask your sales or service dealer for recharging the dead battery.

IF A FUSE BLOWS


If a light does not come on or the electrical system does not work, a fuse may be blown. Inspect the fuses.

INSPECTING AND REPLACING THE FUSE


⚠ WARNING

If the fuse blows again soon after replacement, then the electric system is likely faulty. It may pose a fire hazard if not properly repaired. Contact your sales or service dealer for advice.

1. Turn the starter key to the OFF position to stop the engine.

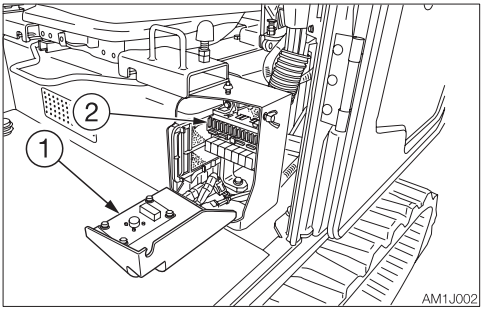

2. Open the fuse box cover (1).
3. Check for any blown fuses (2).

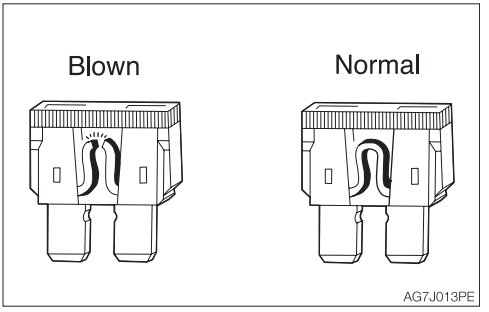

4. If a fuse is blown, replace it with a spare fuse of the same capacity.


Fuse layout and circuits protected

Capacity	Symbol	Protected circuit
25A		Light
10A		Wiper
20A		Lever lock
15A	CTL	Controller power supply
20A	CTL (OX)	OX controller power supply
25A	CAB	Cab interior power supply
25A	OPT(1)	Option (1)
20A	OPT(2)	Option (2)
10A		Air conditioner compressor
5A		AC motor
10A		Immobilizer
25A		Air conditioner blower motor

Capacity	Symbol	Protected circuit
25A	CAB	Cab light
5A		Switch lighting
10A		Horn
5A* 10A** 15A***		Starter switch

*: Applicable machine models 185100001 to 185104995
**: Applicable machine models 185104996 or later
***: Applicable machine models 190200001 or later

INSPECTING THE FUSIBLE LINK

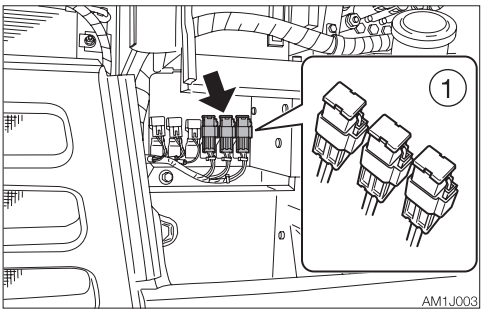


If the machine is not turned on after turning the starter switch to the ON position, the cartridge type fusible links (1) is likely blown. Open the side cover and inspect it. If the fusible link is blown, contact your sales or service dealer.

Note: Fusible links are large type fuses used in high current applications. Like a regular fuse, they act as fuses by protecting the electric components and wirings from damage caused by excessive current draw.

RESTARTING AFTER ADDING FUEL


BLEEDING AIR FROM THE FUEL SYSTEM

IMPORTANT: NEVER use the starter motor to crank the engine in order to prime the fuel system. This may cause the starter motor to overheat and damage the coils, pinion gear and/or ring gear.
IMPORTANT: If the engine stalls due to fuel shortage, add fuel, turn the key to the ON position for 60 seconds, and then turn it to the START position. Running the starter for a long time before there is enough fuel is going through can cause the starter to fail.

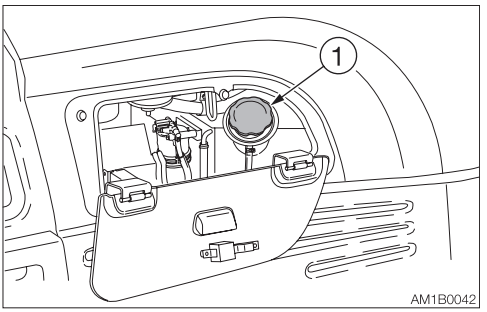


1. Add fuel.

<Applicable machine models 185100001 or later>

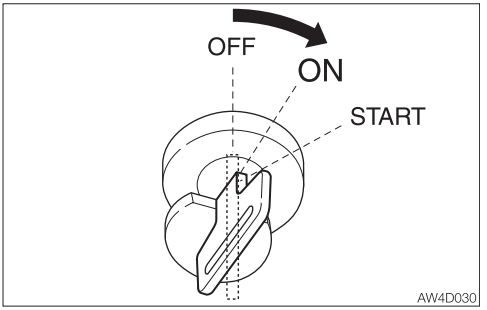


2. Turn the starter key to the ON position and hold it for about 60 seconds.
   The automatic air bleeder bleeds air from the fuel system.

<Applicable machine models 190200001 or later>

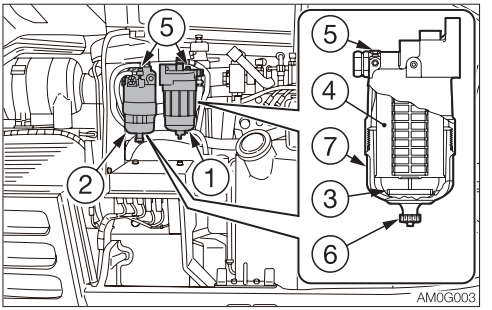

2. Loosen the vent plug (5) of the main fuel filter (2).

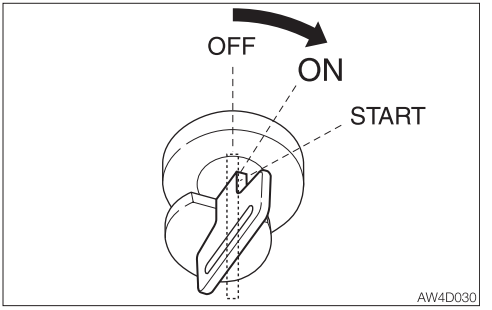

3. Turn the starter key to the ON position and wait for the air to be bled from the vent plug (5).
4. Retighten the vent plug (5) when air bleeding is finished and fuel starts leaking out from around the vent plug (5).
5. Turn and hold the starter key to the ON position for three minutes before turning it back to the OFF position.

Note: Air in the fuel system causes the engine to fail to start or to have other problems. Always bleed air when the fuel tank is emptied or when there is air in the fuel system.

MEMO

IF A WARNING LAMP FLASHES

If an alarm is sounded or a warning lamp starts flashing during operation, park the machine in a safe place and perform the remedy procedures described below.

Warning lamp	Lamp name	Causes and remedies
 AW4J007	**Vehicle and engine emergency lamp**	There is a problem in the machine. Refer to the respective warning lamp below. Get the vehicle or engine error code number from the multi-informaion display and consult your sales or service dealer referring to the “Vehicle error code list” or “Engine error code list”. Refer to “Multi-information display” on pages 2-16 to 2-38. Refer to “Vehicle error code list” on pages 6-12 to 6-13. Refer to “Engine error code list” on pages 6-14 to 6-24.
 AW4J0041	**ECM error warning lamp**	There is a problem in the engine. If an error code is displayed on the multi-information display, inform your sales or service dealer of the code and ask for help. Refer to “Multi-information display” on pages 2-16 to 2-38. Refer to “Engine error code list” on pages 6-14 to 6-24.
 AG7J019	**Battery charge warning lamp**	There is a problem with the fan belt or charger. Check the fan belt for slack or breakage and adjust as necessary. If the lamp continues flashing after maintenance, there is likely a problem with the charger. Consult your sales or service dealer for help. Refer to “Inspecting and adjusting the fan belt” on page 5-26.
 AG7J017	**Engine oil pressure warning lamp**	There is a problem in the engine lubrication system. Check the engine oil level. If the lamp is flashing when the level is normal or even after replenishment of oil or coolant, consult your sales or service dealer. Refer to “Inspecting and replenishing the engine oil” on page 5-21.
 AW4J009	**Water separator warning lamp**	Water is in the water separator. Drain water. Refer to “Draining the water from the water separator” on pages 5-68 to 5-69.

Warning lamp	Lamp name	Causes and remedies
 AG7J018	**Coolant temperature warning lamp**	The coolant temperature is too high and the engine is overheating. Refer to “If the engine overheats” on page 6-3.
 AG7J020	**Air cleaner warning lamp**	The air cleaner is clogged. Clean it. Refer to “Cleaning the air cleaner” on page 5-40.
 AQ0J008	**Fuel filter warning lamp**	The fuel filter is clogged. Replace the fuel filter. Refer to “Replacing the fuel filter” on page 5-46.
 AK8J004	**NCD warning lamp NCD: NOx Control Diagnostic system**	A problem is detected in the exhaust system. Get the engine error code number from the multi-information display and consult your sales or service dealer referring to the “Engine error code list”. Refer to “Multi-information display” on page 2-16. Refer to “Engine error code list” on page 6-14.
 AW4J010	**Fuel level warning lamp**	The fuel level is too low. Add fuel. Refer to “Inspecting the fuel level” on page 5-23.
 AQ0J004	**Third auxiliary hydraulic warning lamp**	Pressure in the third auxiliary hydraulic line is too low Consult your sales or service dealer for help.
 AM1J005	**Lift overload warning indicator lamp**	This lamp starts flashing if the overload warning device is activated. If it occurs, reduce the load to be lifted. Refer to “Lift overload warning switch” on page 2-47.

VEHICLE ERROR CODE LIST

If an error code appears on the display, consult your sales or service dealer.

Error code	Error details
9	Impossible to sense ACC key
19	Parameter version mismatching
402	CAN 0 communication error
502	CAN communication error (EECU)
602	CAN communication error (cluster gauge)
612	CAN communication error (OX024)
822	CAN communication error (TAKEUCHI Security System)
1703	Main power supply voltage error (too high)
1704	Main power supply voltage error (too low)
1713	OX024 power supply voltage error (too high)
1714	OX024 power supply voltage error (too low)
2503	Sensor voltage error (too high) MMC
2504	Sensor voltage error (too low) MMC
3300	Alternator charge faulty
3350	Fuel filter clogged (phase 1) <Applicable machine models 190200001 or later>
3359	Fuel filter clogged (phase 2) <Applicable machine models 190200001 or later>
3401	Engine oil pressure error
3500	Overheat
3600	Air cleaner clogged
3700	Water separator alarm
5303	Accelerator sensor error (too high)
5304	Accelerator sensor error (too low)
5505	Fuel gauge resistance value error (cable break)
5603	Lift alarm sensor error (too high)
5604	Lift alarm sensor error (too low)

Error code	Error details
6503	AUX1 slide switch voltage value error (too high)
6504	AUX1 slide switch voltage value error (too low)
6509	AUX1 slide switch neutral error
6519	AUX1 (L) switch error
6529	AUX1 (R) switch error
6603	AUX2 slide switch voltage value error (too high)
6604	AUX2 slide switch voltage value error (too low)
6609	AUX2 slide switch neutral error
6709	AUX3 switch error (Foot)
6719	AUX3 switch error (Grip)
8005	Pump PWM output voltage error (too low)
8006	Pump PWM output voltage error (too high)
8015	AUX1 (L) PWM output voltage error (too low)
8016	AUX1 (L) PWM output voltage error (too high)
8025	AUX1 (R) PWM output voltage error (too low)
8026	AUX1 (R) PWM output voltage error (too high)
8035	AUX2 (L) PWM output voltage error (too low)
8036	AUX2 (L) PWM output voltage error (too high)
8045	AUX2 (R) PWM output voltage error (too low)
8046	AUX2 (R) PWM output voltage error (too high)

PWM = Pulse width modulation

ENGINE ERROR CODE LIST

If an error code appears on the display, consult your sales or service dealer.

<Applicable machine models 185100001 or later>

Error code		Error details	DTC
SPN	FMI		
522400	2	Crank speed sensor (Crank signal malfunction)	P0336
	5	Crank speed sensor (No crank signal)	P0337
522401	2	Cam speed sensor (Cam signal malfunction)	P0341
	5	Cam speed sensor (No cam signal)	P0342
	7	Cam speed sensor (Angle offset failure)	P1341
523249	5	No signal on both crank and cam speed sensor	P0008
91	3	Accelerator sensor 1 (Excessive sensor output)	P0123
	4	Accelerator sensor 1 (Insufficient sensor output)	P0122
28	3	Accelerator sensor 2 (Excessive sensor output)	P0223
	4	Accelerator sensor 2 (Insufficient sensor output)	P0222
522624	7	Dual accelerator sensor (closed position) failure	P1646
522623	7	Dual accelerator sensor (open position) failure	P1647
29	3	Accelerator sensor 3 (Excessive sensor output)	P0228
	4	Accelerator sensor 3 (Insufficient sensor output)	P0227
	8	Pulse sensor failure (Pulse communication)	P1227
28	0	Accelerator sensor 3 failure (Foot pedal in open positon)	P1126
	1	Accelerator sensor 3 failure (Foot pedal in closed positon)	P1125
51	3	Intake throttle opening sensor fault (High voltage)	P02E9
	4	Intake throttle opening sensor fault (Low voltage)	P02E8

Error code		Error details	DTC
SPN	FMI		
102	3	EGR low pressure side sensor fault (High voltage)	P0238
	4	EGR low pressure side sensor fault (Low voltage)	P0237
	13	EGR low pressure side sensor fault (Abnormal learning value)	P0236
	10	Detected value error (EGR low pressure side pressure sensor)	P1673
1209	3	EGR high pressure side sensor fault (High voltage)	P0473
	4	EGR high pressure side sensor fault (Low voltage)	P0472
	13	EGR high pressure side sensor (Abnormal learning value)	P0471
	10	Detected value error (EGR high pressure side pressure sensor)	P1679
110	3	Cooling water temperature sensor fault (High voltage)	P0118
	4	Cooling water temperature sensor fault (Low voltage)	P0117
	0	Cooling water temperature sensor temperature abnormal high (Overheat)	P0217
	10	Detected value error (Engine coolant temperature sensor)	P1674
172	3	New air temperature sensor fault (High voltage)	P0113
	4	New air temperature sensor fault (Low voltage)	P0112
174	3	Fuel temperature sensor fault (High voltage)	P0183
	4	Fuel temperature sensor fault (Low voltage)	P0182
	0	Fuel temperature sensor temperature abnormal high	P0168
157	3	Rail pressure sensor fault (High voltage)	P0193
	4	Rail pressure sensor fault (Low voltage)	P0192
3251	3	DPF differential pressure sensor fault (High voltage)	P2455
	4	DPF differential pressure sensor fault (Low voltage)	P2454
	0	DPF differential pressure sensor differential pressure abnormal high	P2452
	13	DPF differential pressure sensor (Abnormal learning value)	P2453
3609	3	DPF high pressure side sensor fault (High voltage)	P1455
	4	DPF high pressure side sensor fault (Low voltage)	P1454
	10	Detected value error (DPF high pressure side pressure sensor)	P167C
4795	31	Removal of DPF substrate (empty-can)	P226D
3242	3	DPF inlet temperature sensor fault (High voltage)	P1428
	4	DPF inlet temperature sensor fault (Low voltage)	P1427
	0	DPF inlet temperature sensor temperature abnormal high	P1436
	10	Detected value error (DPF Inlet temperature sensor)	P167E

Error code		Error details	DTC
SPN	FMI		
3250	3	DPF intermediate temperature sensor fault (High voltage)	P1434
	4	DPF intermediate temperature sensor fault (Low voltage)	P1435
	1	DPF intermediate temperature sensor temperature abnormal low temperature	P0420
	0	DPF intermediate temperature sensor temperature abnormal high (Post-injection failure)	P1426
	10	Detected value error (DPF Inside temperature sensor)	P167A
108	3	Atmospheric pressure sensor fault (High voltage)	P2229
	4	Atmospheric pressure sensor fault (Low voltage)	P2228
	10	Atmospheric pressure sensor characteristic fault	P1231
412	3	EGR gas temperature sensor fault (High voltage)	P041D
	4	EGR gas temperature sensor fault (Low voltage)	P041C
	10	Detected value error (EGR gas temperature sensor)	P1675
105	3	Intake manifold temperature sensor fault (High voltage)	P040D
	4	Intake manifold temperature sensor fault (Low voltage)	P040C
	10	Detected value error (Intake manifold temperature sensor)	P1676
173	3	Exhaust manifold temperature sensor fault (High voltage)	P0546
	4	Exhaust manifold temperature sensor fault (Low voltage)	P0545
	10	Detected value error (Exhaust manifold temperature sensor)	P1677
1485	7	Main relay contact stuck	P068B
	2	Main relay early opening	P068A
522243	5	Startup assist relay interrupted	P0543
	6	Startup assist relay GND interrupted	P0541
651 (4TNV), 652 (3TNV)	5	Injector 1 open circuit (Inherent location of the injector)	P0204 (4TNV), P0203 (3TNV)
	6	Injector 1 coil short circuit	P0271 (4TNV), P0268 (3TNV)
	3	Injector 1 short circuit	P1271 (4TNV), P1262 (3TNV)

Error code		Error details	DTC
SPN	FMI		
653	5	Injector 2 open circuit (Inherent location of the injector)	P0202
	6	Injector 2 coil short circuit	P0265
	3	Injector 2 short circuit	P1265
654	5	Injector 3 open circuit (Inherent location of the injector)	P0201
	6	Injector 3 coil short circuit	P0262
	3	Injector 3 short circuit	P1262
652	5	Injector 4 open circuit (Inherent location of the injector)	P0203
	6	Injector 4 coil short circuit	P0268
	3	Injector 4 short circuit	P1268
4257	12	Injector drive IC error	P0611
2797	6	Injector drive circuit (Bank 1) short circuit (4TN: Common circuit for No.1, No.4 and all 3TN cylinders)	P1146
2798	6	Injector drive circuit (Bank 2) short circuit (4TN: Circuit for No.2 and No.3 cylinders)	P1149
523462	13	IQA corrected injection amount for injector 1 error	P1648
523463	13	IQA corrected injection amount for injector 2 error	P1649
523464	13	IQA corrected injection amount for injector 3 error	P1650
523465	13	IQA corrected injection amount for injector 4 error	P1651
522571	3	High-pressure pump drive circuit (Low side VB short-circuit)	P1641
	6	High-pressure pump drive circuit (Low side GND short-circuit)	P1643
633	3	High-pressure pump drive circuit (High side VB short-circuit)	P0629
	6	High-pressure pump drive circuit (High side GND short-circuit)	P1642
	5	High-pressure pump drive circuit (Open circuit)	P0627
522572	6	High-pressure pump drive circuit (Drive current (high level))	P062A
	11	High-pressure pump drive circuit (Pump overload error)	P1645

Error code		Error details	DTC
SPN	FMI		
157	0	Actual rail pressure rise error	P0088
	18	Rail pressure deviation error during the actual rail pressure drop	P0094
	15	Rail pressure deviation error during the actual rail pressure rise	P0093
	16	PLV open valve	P000F
523469	0	Rail pressure fault (The times of PLV valve opening error)	P1666
523470	0	Rail pressure fault (The time of PLV valve opening error)	P1667
523489	0	Rail pressure fault (The actual rail pressure is too high during PRV limp home)	P1668
523468	9	Rail pressure fault (Controlled rail pressure error after PLV valve opening)	P1665
523491	0	Rail pressure fault (Injector B/F temperature error during PLV4 limp home)	P1669
523460	7	Rail pressure fault (Operation time error during RPS limp home)	P1670
190	16	Overspeed	P0219
2950	5	No-load of throttle valve drive H bridge circuit	P0660
	3	Power short circuit of throttle valve drive H bridge output 1	P1658
	4	GND short circuit of throttle valve drive H bridge output 1	P1659
	6	Overload on the drive H bridge circuit of throttle valve	P1660
2951	3	VB Power short circuit of throttle valve drive H bridge output 2	P1661
	4	GND short circuit of throttle valve drive H bridge output 2	P1662
522596	9	TSC1 (CAN message) reception time out (SA1)	U0292
522597	9	TSC1 (CAN message) reception time out (SA2)	U1301
522599	9	Y_ECR1 (CAN message) reception time out	U1292
522600	9	Y_EC (CAN message) reception time out	U1293
522601	9	Y_RSS (CAN message) reception time out	U1294
522603	9	VH (CAN message) reception time out	U1296
522605	9	Y_ECM3 (CAN message) reception time out	U1298

Error code		Error details	DTC
SPN	FMI		
237	31	VI (CAN message) reception time out	U0168
	13	VI (CAN message) reception data fault	U3002
522609	9	Y_ETCP1 (CAN message) reception time out	U1300
522618	9	EBC1 (CAN message) reception time out	U1302
522619	9	Y_DPFIF (CAN message) reception time out	U1303
522610	9	CAN1 (for EGR): Reception time out	U010B
522611	9	Exhaust throttle (CAN message from the exhaust throttle time out)	U1107
2791	0	EGR over-voltage fault	P0404
	1	EGR under-voltage fault	P1404
	7	EGR feedback malfunction	P1409
	9	EGR ECM data fault	U0401
	12	Open circuit between the EGR motor coils	P0403
522579	12	Short circuit between the EGR motor coils	P1405
522580	12	EGR position sensor malfunction	P0488
522581	7	EGR stuck open valve malfunction	P148A
522582	7	EGR initialization malfunction	P049D
522183	1	EGR high temperature thermistor malfunction	P1410
522184	1	EGR low temperature thermistor malfunction	P1411
522617	12	EGR target value out of range	U1401
522746	12	Exhaust throttle (Voltage fault)	P1438
522747	12	Exhaust throttle (Motor fault)	P1439
522748	12	Exhaust throttle (Sensor system fault)	P1440
522749	12	Exhaust throttle (MPU fault)	P1441
522750	12	Exhaust throttle (PCB fault)	P1442
522751	19	Exhaust throttle (CAN fault)	P1443
630	12	EEPROM memory deletion error	P0601
522576	12	EEPROM memory read error	P160E

Error code		Error details	DTC
SPN	FMI		
522578	12	EEPROM memory writing error	P160F
522585	12	ECU internal fault (CY146 SPI communication fault)	P1613
522588	12	ECU internal fault (Excessive voltage of supply 1)	P1608
522589	12	ECU internal fault (Insufficient voltage of supply 1)	P1617
522590	12	ECU internal fault (Sensor supply voltage error 1)	P1609
522591	12	ECU internal fault (Sensor supply voltage error 2)	P1618
522592	12	ECU internal fault (Sensor supply voltage error 3)	P1619
522744	4	ECU internal fault (Actuator drive circuit 1 short to ground)	P1626
522994	4	ECU internal fault (Actuator drive circuit 2 short to ground)	P1633
523471	6	ECU internal fault (Actuator drive circuit 3 short to ground)	P1467
523473	12	ECU internal fault (AD converter fault 1)	P1469
523474	12	ECU internal fault (AD converter fault 2)	P1470
523475	12	ECU internal fault (External monitoring IC and CPU fault 1)	P1471
523476	12	ECU internal fault (External monitoring IC and CPU fault 2)	P1472
523477	12	ECU internal fault (ROM fault)	P1473
523478	12	ECU internal fault (Shutoff path fault 1)	P1474
523479	12	ECU internal fault (Shutoff path fault 2)	P1475
523480	12	ECU internal fault (Shutoff path fault 3)	P1476
523481	12	ECU internal fault (Shutoff path fault 4)	P1477
523482	12	ECU internal fault (Shutoff path fault 5)	P1478
523483	12	ECU internal fault (Shutoff path fault 6)	P1479
523484	12	ECU internal fault (Shutoff path fault 7)	P1480
523485	12	ECU internal fault (Shutoff path fault 8)	P1481
523486	12	ECU internal fault (Shutoff path fault 9)	P1482
523487	12	ECU internal fault (Shutoff path fault 10)	P1483
523488	0	ECU internal fault (Recognition error of engine speed)	P1484
522323	0	Air cleaner clogged alarm	P1101

Error code		Error details	DTC
SPN	FMI		
522329	0	Oil/water separator alarm	P1151
167	5	Charge switch (Charge switch open circuit)	P1562
	1	Charge switch (Charge alarm)	P1568
100	4	Oil pressure switch (Oil pressure switch open circuit)	P1192
	1	Oil pressure switch (Low oil pressure fault alarm)	P1198
522573	0	DPF over accumulation (Method C)	P2463
522574	0	DPF over accumulation (Method P)	P1463
522575	7	DPF regeneration defect (Stationary regeneration failure)	P2458
522577	11	DPF regeneration defect (Stationary regeneration not-performed)	P2459
3720	16	DPF OP interface (Ash cleaning request 1)	P242F
	0	DPF OP interface (Ash cleaning request 2)	P1420
3719	16	DPF OP interface (Stationary regeneration standby)	P1421
	0	DPF OP interface (Backup mode)	P1424
3695	14	DPF OP interface (Reset regeneration prohibited)	P1425
3719	9	DPF OP interface (Recovery regeneration failure)	P1445
	7	DPF OP interface (Recovery regeneration prohibition)	P1446

<Applicable machine models 190200001 or later>

Error code		Error details	DTC
SPN	FMI		
91	3	Accelerator sensor 1 error (high-voltage error)	P2123
	4	Accelerator sensor 1 error (low-voltage error)	P2122
	2	Accelerator sensor 1-2 comparison error	P2138
	3	Accelerator sensor 2 error (high-voltage error)	P2128
	4	Accelerator sensor 2 error (low-voltage error)	P2127
100	3	Engine oil pressure sensor error (high-voltage error)	P0523
	4	Engine oil pressure sensor error (low-voltage error)	P0522
102	3	Boost pressure sensor error (high-voltage error)	P0238
	4	Boost pressure sensor error (low-voltage error)	P0237
108	3	Barometric sensor error (high-voltage error)	P2229
	4	Barometric sensor error (low-voltage error)	P2228
110	0	Engine overheat	P0217
	3	Water temp. sensor error (high-voltage error)	P0118
	4	Water temp. sensor error (low-voltage error)	P0117
157	3	Common rail pressure sensor error (high-voltage error)	P0193
	4	Common rail pressure sensor error (low-voltage error)	P0192
	15	Common rail pressure error (over pumping)	P0089
158	3	Battery line high-voltage error	P0563
174	3	Fuel temp. sensor error (high-voltage error)	P0183
	4	Fuel temp. sensor error (low-voltage error)	P0182
190	0	Engine overspeed	P0219
628	2	ROM error	P0601
633	7	Pressure limitter open	P0087
636	2	Cam sensor error (no signal)	P0340

Error code		Error details	DTC
SPN	FMI		
639	2	CAN timeout error	U0101
	19	CAN BusOff error	U0073
651	5	Injector #1 failure	P0201
652	5	Injector #2 failure	P0202
653	5	Injector #3 failure	P0203
654	5	Injector #4 failure	P0204
676	5	Glow relay failure	P0380
677	5	Starter cut relay failure	P0615
723	2	Crank sensor error (no signal)	P0335
	2	Crank sensor error (abnormal signal)	P0336
1077	2	CPU error	P0606
1079	2	5V power system 1 error	P0641
1080	2	5V power system 2 error	P0651
1131	3	Manifold temp. sensor error (high-voltage error)	P041C
	4	Manifold temp. sensor error (low-voltage error)	P041D
1239	17	Common rail pressure error (insufficient pumping)	P1093
1347	3	SCV drive system +B short-circuit (high-voltage error)	P0092
	4	SCV drive system cable break +GND short-circuit (low-voltage error)	P0091
1381	3	Fuel filter clogging sensor error (high-voltage error)	P1294
	4	Fuel filter clogging sensor error (low-voltage error)	P1293
1485	5	Main relay system error (not activated)	P0685
	6	Main relay line error (not shut off)	P0687

Error code		Error details	DTC
SPN	FMI		
10001	2	EGR position sensor error (brushless specified)	P0409
	13	EGR zero-point learning error	P1404
10002	2	EGR valve control error	P0404
10003	2	Injector com 1 error	P2146
10004	2	Injector com 2 error	P2149
10005	1	Charge circuit error (bank 1)	P1261
10006	1	Charge circuit error (bank 2)	P1262
10007	2	Sub CPU error	P0606
10008	2	A/D converter error	P060B
10009	2	5V power system 3 error	P0697
10010	2	5V power system 4 error	P1655
10013	2	EEPROM error	P1621
10023	3	EVRV vacuum sensor error (high-voltage error)	P2528
	4	EVRV vacuum sensor error (low-voltage error)	P2527
10032	2	QR code error	P0602
10033	2	RAM error	P0604
10040	19	CAN BusOff error (ISO-CAN)	U0001

MEMO

OTHER SYMPTOMS

For symptoms not included in the table below or if the problem persists after the proper remedies have been taken, consult your sales or service dealer.

Symptoms	Major causes	Remedies
Left and right operating levers do not move smoothly	• Insufficient grease on the left and right operating levers	• Grease the levers. Refer to page 5-70.
Travel levers, blade lever and pedals do not move smoothly	• Insufficient grease on travel levers, blade lever and pedals	• Grease the levers and pedals. Refer to page 5-70.
Operation of hoe attachment, dozer blade, auxiliary hydraulics, slewing or traveling is not possible.	• Safety lock lever is raised (locked)	• Lower (release) the safety lock lever. Refer to page 2-48.
	• Fuse is blown	• Replace the fuse. Refer to page 6-6.
Digging force is insufficient	• Hydraulic oil level too low	• Add to the specified level. Refer to page 5-24.
	• Hydraulic oil is not warm enough	• Perform the warm-up. Refer to pages 3-10 to 3-11.
	• Air cleaner is clogged	• Clean the air cleaner. Refer to page 5-40.
	• Hydraulic oil is not of suitable type	• Replace the hydraulic oil. Refer to page 5-57.
Traveling is not possible or not smooth	• Stones or foreign objects are stuck	• Remove the foreign object.
Machine veers to the right/left	• Stones or foreign objects are stuck	• Remove the foreign object.
	• Crawler belt tension is faulty.	• Check and adjust (ask your sales or service dealer). Refer to pages 5-30 and 5-72.
Travel speed cannot be changed	• Fuse is blown	• Replace the fuse. Refer to page 6-6.
Slewing is not possible or not smooth	• Insufficient grease on slew bearing	• Grease the bearing. Refer to page 5-30.
Hydraulic oil temperature is too high	• Hydraulic oil level too low	• Add up to the specified level. Refer to page 5-24.

Symptoms	Major causes	Remedies
Starter motor turns but engine does not start	• Insufficient fuel	• Add fuel. Refer to page 5-23.
	• Air in fuel system	• Bleed air. Refer to page 6-8.
	• Water in fuel system	• Drain water. Refer to page 5-31.
	• Fuel is frozen.	• Warm the fuel pipe with hot water or wait until the ambient temperature becomes high.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Preheating device is faulty.	• Adjust or repair (ask your sales or service dealer).
Crawlers come off	• Crawlers too loose	• Check and adjust (ask your sales or service dealer). Refer to pages 5-30 and 5-72.
Engine exhaust is white or bluish	• Excessive engine oil	• Adjust to the specified level. Refer to page 5-21.
	• Insufficient engine warm-up.	• Perform the warm-up operation. Refer to page 3-6.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Prolonged idling (approx. two hours or more)	• Increase the engine RPM and check for smoke.
	• Poor fuel	• Replace the fuel.

Symptoms	Major causes	Remedies
Engine exhaust is occasionally black	• Air cleaner is clogged	• Clean the air cleaner. Refer to page 5-40.
	• Engine control system is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Fuel line is faulty.	• Adjust or repair (ask your sales or service dealer).
	• Clogging in the exhaust line.	• Adjust or repair (ask your sales or service dealer).
	• DPF is faulty.	• Adjust or repair (ask your sales or service dealer).
Irregular noise is produced from the engine (combustion or mechanical noise)	• Low quality fuel is being used	• Replace the fuel.
	• Engine is overheating	• Refer to “If the engine overheats” on page 6-3.
	• Damage inside the muffler	• Replace the muffler. For replacement, ask your sales or service dealer.

LOWERING THE BOOM TO THE GROUND


If the hoe attachment must be lowered to the ground while the engine is stopped, use the following procedure.

Procedure 1 (machines with an accumulator)
Perform this operation within 10 minutes after the engine stopping.
1. Sit at the operator's seat.
2. Turn the starter switch to the ON position.
3. Lower the safety lock lever to the unlock position
4. Slowly push the operating lever forward to lower the boom.


Procedure 2 (machines without an accumulator)
This operation is dangerous and requires experience. Ask your sales or service dealer for it.

⚠ WARNING

- **Stop the engine and allow the machine to cool down before performing maintenance.**
  - **The engine and the hydraulic system and many other parts of the machine are hot immediately after the engine is stopped. Touching these parts will cause burns.**
  - **The hydraulic oil is also hot and under high pressure immediately after the engine is stopped. Be careful when loosening the caps or plugs. Working on the machine under these conditions could result in burns or injuries due to the hot oil spurting out.**
- **Keep away from the working area when the hoe attachment is lowered. You may be hit by dirt falling out of the bucket or the hoe attachment as it drops.**
- **Stand in a position away from danger of lowering boom and loosen the hose nut. Otherwise, you could be hit by the boom.**
- **Do not loosen or remove the hoses not located in the specified places. Oil may spurt out if wrongly handled.**
- **Slowly turn the hose nut and lower the boom at a slow pace.**

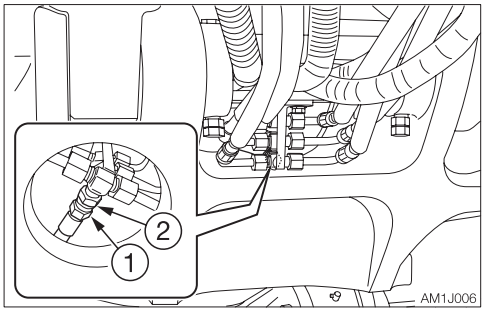

2-Piece boom

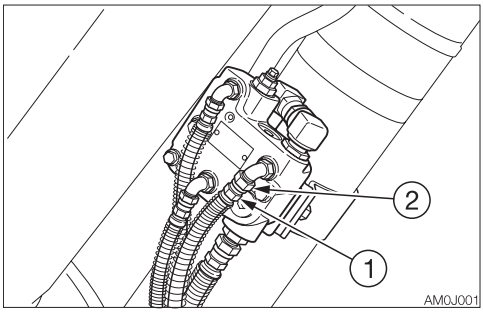

1. Place a pan under the hose to catch the waste oil.
2. Hold the hose fitting (1) with a wrench and slowly loosen the hose nut (2) with another wrench.
3. The oil in the boom cylinder is drained and the hoe attachment is lowered.
4. After the hoe attachment is lowered to the ground, check the safety and stability of the machine.
5. Hold the hose fitting (1) with a wrench and tighten the hose nut (2) with another wrench.
   - Tightening torque: 24.5 to 29.4 N·m (18.1 to 21.7 ft-lb.)

TOWING

⚠ WARNING


When towing, serious injury or death could result, if performed incorrectly or the wire rope being used is inappropriate or not properly inspected.

- **It becomes dangerous if the wire rope breaks or becomes disengaged. Use a wire rope appropriate for the required tractive force.**
- **Do not use a wire rope that is kinked, twisted or otherwise damaged.**
- **Do not apply heavy loads abruptly to the wire rope.**
- **Wear safety gloves when handling the wire rope.**
- **Make sure there is an operator on the machine being towed as well as on the machine that is towing.**
- **Never tow on slopes.**
- **Do not let anyone come near to the wire rope while towing.**

IMPORTANT: Do not tow a machine if its engine does not start or if the machine does not run. Doing so could damage the machine being towed.
IMPORTANT: Be sure to follow the steps below closely when using the towing hole to tow. Failure to heed even one of the steps may cause damage to the towing hole or other parts of the frame.

Towing the machine

Use the procedure described below to tow heavy objects or the machine itself if it should get stuck in the mud and not be able to get out on its own.

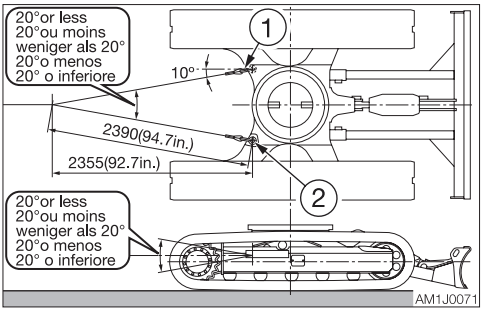

- Permissible forces: 125.2 kN (28146 lbf)
  Do not tow using only a towing hole on one side.

1. Attach the wire rope to the shackle (1).
2. Fasten the shackle (1) to the towing holes (2).
3. Make sure that the wire rope is at a cone angle of 20° or less to the travel frame.
4. Move the machine to tension the wire rope.
5. Move the machine at a low speed of 2 km/h (1.24 mph) or less to a place (convenient location for repair) a short distance from the site.

IF THE CAB IS DAMAGED

⚠ WARNING

Immediately replace the damaged cab. Serious injury or death may occur if the machine is operated with damaged cab. Do not operate the machine until the replacement is complete. Do not try to repair the damaged cab by welding. Doing so could endanger the safety of the cab.

Cab part number: 05686-00128

EXHAUST GAS CONTROL SYSTEM ERROR

ERROR CODE LIST

If the exhaust gas control system detects an error, the ECM error warning lamp turns on or flashes and the following error codes are displayed.
If an error code appears, immediately repair the fault part detected, or consult your sales or service dealer for help.

Error code		Error description		DTC	NCD or PCD Error*	Limited engine
SPN	FMI	Fault location	Cause			Level
102	3	EGR Differential Pressure Sensor	1. Wiring Bypass	P0238	N	2
102	4	EGR Differential Pressure Sensor	1. Wiring Disconnection 2. Sensor Removal	P0237	N	2
102	10	EGR Differential Pressure Sensor	1. Pressure Hose Removal 2. Sensor Leave in Atmosphere 3. Dummy Registance	P1673	N	6
110	4	Coolant Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P0117	N	4
3251	3	DPF Differential Pressure Sensor	1. Wiring Bypass	P2455	N	2
3251	4	DPF Differential Pressure Sensor	1. Wiring Disconnection 2. Sensor Removal	P2454	N	2
4795	31	DPF Differential Pressure Sensor	1. Pressure Hose Removal 2. SF Removal 3. Sensor Leave in Atmosphere 4. Dummy Registance	P226D	P	6
3242	3	DPF Inlet Temperature Sensor	1. Wiring Bypass	P1428	P	2
3242	4	DPF Inlet Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P1427	P	2
3250	3	DPF Intermediate Temperature Sensor	1. Wiring Bypass	P1434	P	2
3250	4	DPF Intermediate Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P1435	P	2
412	3	EGR Gas Temperature Sensor	1. Wiring Bypass	P041D	N	3
412	4	EGR Gas Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P041C	N	3
105	3	Intake Manifold Temperature Sensor	1. Wiring Bypass	P040D	N	2
105	4	Intake Manifold Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P040C	N	2
173	3	Exhaust Manifold Temperature Sensor	1. Wiring Bypass	P0546	N	3
173	4	Exhaust Manifold Temperature Sensor	1. Wiring Disconnection 2. Sensor Removal	P0545	N	3
2791	12	EGR Valve	1. Wiring Disconnection	P0403	N	4

*:
N: NCD (NOx Control Diagnostic system)
P: PCD (Particulate Control Diagnostic system)

NOX CONTROL DIAGNOSTIC SYSTEM (NCD)

The NCD system warns the operator of any error detected by turning on the warning lamp and displaying an engine error code. The engine output is limited depending on the type of fault.


PARTICULATE CONTROL DIAGNOSTIC SYSTEM (PCD)

The PCD system warns the operator of any error detected in the particulate after-treatment system such as the DPF, by using the warning lamp and displaying an engine error code. The engine output is limited depending on the type of fault.

LIMITING THE ENGINE OUTPUT

If the exhaust gas control system detects an error, the engine output is limited depending on the type of fault.
There are three types of engine output limitation, each corresponding to the fault level determined.
Note: If the time interval between the fault repairing and error detecting is short, the regular operation may be executed with a shorter pre operation.


Level 2

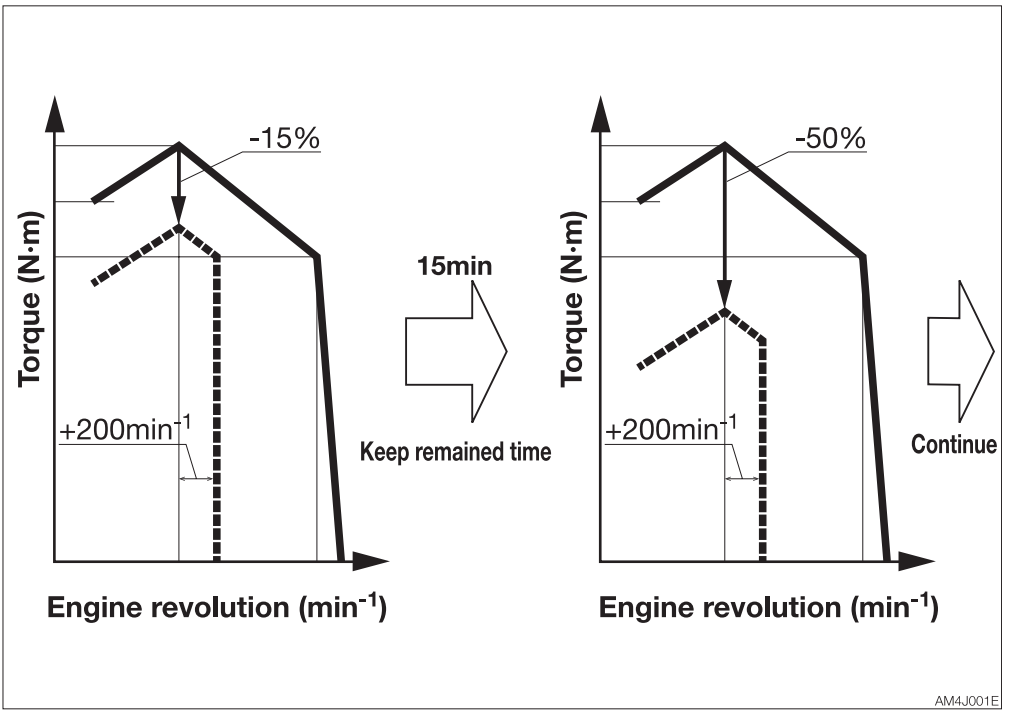

: Normal
: Limited output

Pre operation: when the error is detected, the engine torque is reduced by 85%, compared to the normal operation.
The engine revolution becomes +200 min-1, compared to the maximum torque.
Regular operation: after 15-minute pre operation, the regular operation starts. The engine torque is reduced by 50%, compared to the normal operation. The engine revolution becomes +200 min-1, compared to the maximum torque. The regular operation continues until the error is resolved.


Level 3 or 4

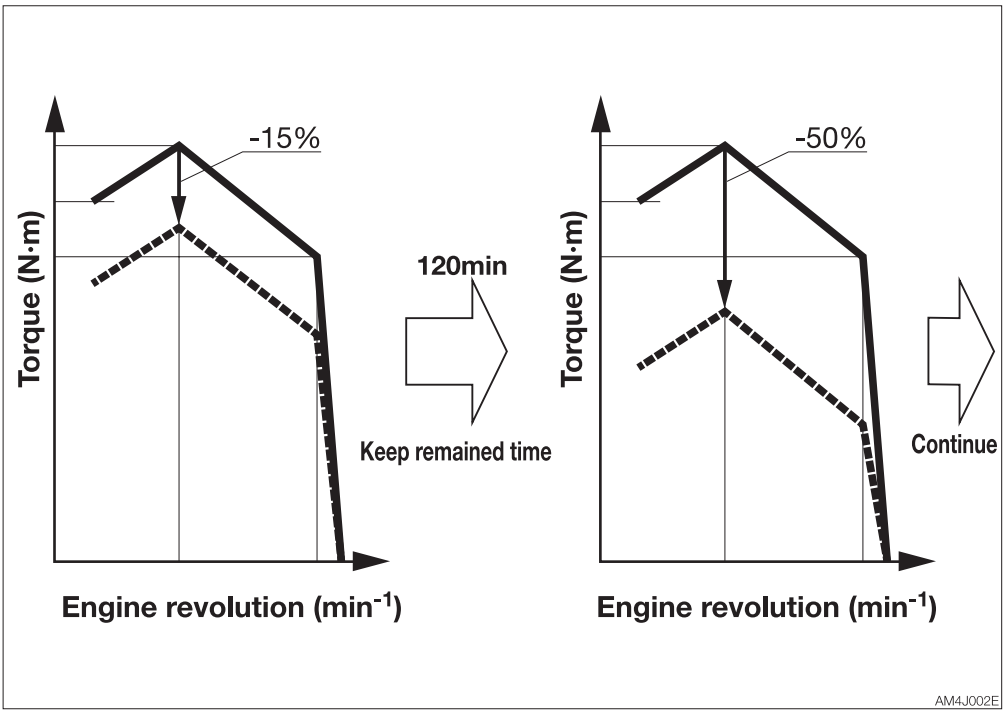

: Normal
: Limited output

Pre operation: when the error is detected, the engine torque is reduced by 85%, compared to the normal operation.
Regular operation: after 120-minute pre operation, the regular operation starts. The engine torque is reduced by 50%, compared to the normal operation. The regular operation continues until the error is resolved.

Level 6 (only NCD)

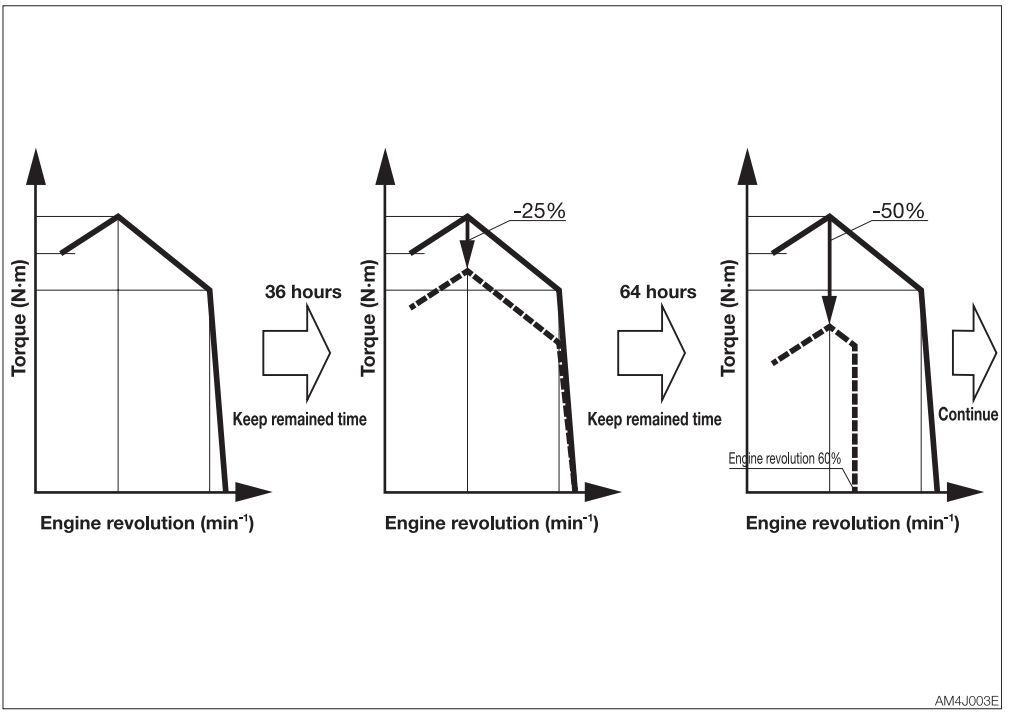

: Normal
: Limited output

Pre operation 1: If an error is detected, the warning lamp turns on or starts flashing; the engine output is not limited.
Pre operation 2: Pre operation 2 starts after pre operation 1 continues 36 hours. The engine torque is reduced by 75%, compared to the normal operation.
Regular operation: Regular operation starts after the pre operation 2 continues 64 hours. The engine torque is reduced by 50%, compared to the normal operation. The regular operation continues until the error is resolved.

SPECIFICATIONS



BASIC SPECIFICATIONS

<Applicable machine models 185100001 or later>


Type				Mono boom	2-Piece boom
MASS					
Operating mass	kg (lb)	Rubber crawlers		8400 (18520)	8715 (19213)
		Steel crawlers		8635 (19035)	8950 (19731)
PERFORMANCE					
Bucket capacity (Standard bucket)	m^3 (cu. ft.)	Heaped		0.245 (8.65)	
		Struck		0.185 (6.53)	
Slew speed	min^{-1} (rpm)			10.3 (10.3)	
Travel speed	km/h (mph)	Rubber crawlers	1st	2.6 (1.62)	
			2nd	5.0 (3.11)	
		Steel crawlers	1st	2.5 (1.55)	
			2nd	4.8 (2.98)	
Gradeability	(degrees)			35	
Ground pressure	kPa (psi)	Rubber crawlers		37.6 (5.45)	39.0 (5.66)
		Steel crawlers		39.1 (5.67)	40.5 (5.87)
Noise level dB (A)	Sound power level			L_{WA} 99	
	Emission sound pressure level at the operator's position (ISO 6396,2008:)			L_{pA} 74	
ENGINE					
Manufacturer and model				Yanmar 4TNV98CT-WTB	
Rated output	Net (ISO 14396)	kW/min^{-1} (hp/rpm)		51.6/2000 (69.2/2000)	
	Net (ISO 9249/ SAEJ1349)	kW/min^{-1} (hp/rpm)		49.6/2000 (66.5/2000)	
Displacement		ml (cu.in.)		3318 (202.5)	
Starter		V-kW		12-3.0	
Alternator		V-kW		12-0.96	
Battery (IEC 60095-1)		V-A·h		12-90	

<Applicable machine models 190200001 or later>

Type				Mono boom	2-Piece boom
MASS					
Operating mass	kg (lb)	Rubber crawlers		8425 (18575)	8740 (19268)
		Steel crawlers		8660 (19090)	8975 (19786)
PERFORMANCE					
Bucket capacity (Standard bucket)	m^3 (cu. ft.)	Heaped		0.245 (8.65)	
		Struck		0.185 (6.53)	
Slew speed	min^{-1} (rpm)			10.3 (10.3)	
Travel speed	km/h (mph)	Rubber crawlers	1st	2.6 (1.62)	
			2nd	5.0 (3.11)	
		Steel crawlers	1st	2.5 (1.55)	
			2nd	4.8 (2.98)	
Gradeability	(degrees)			35	
Ground pressure	kPa (psi)	Rubber crawlers		37.7 (5.47)	39.1 (5.67)
		Steel crawlers		39.1 (5.67)	40.6 (5.89)
Noise level dB (A)	Sound power level			L_{WA} 99	
	Emission sound pressure level at the operator's position (ISO 6396,2008:)			L_{pA} 74	
ENGINE					
Manufacturer and model				ISUZU 4JJ1T	
Rated output	Net (ISO 14396)	kW/min^{-1} (hp/rpm)		52.0/2000 (69.7/2000)	
	Net (ISO 9249/ SAEJ1349)	kW/min^{-1} (hp/rpm)		49.9/2000 (66.9/2000)	
Displacement		ml (cu.in.)		2999 (183)	
Starter		V-kW		12-2.5	
Alternator		V-kW		12-1.32	
Battery (IEC 60095-1)		V-A·h		12-90	

MACHINE DIMENSIONS

Mono boom

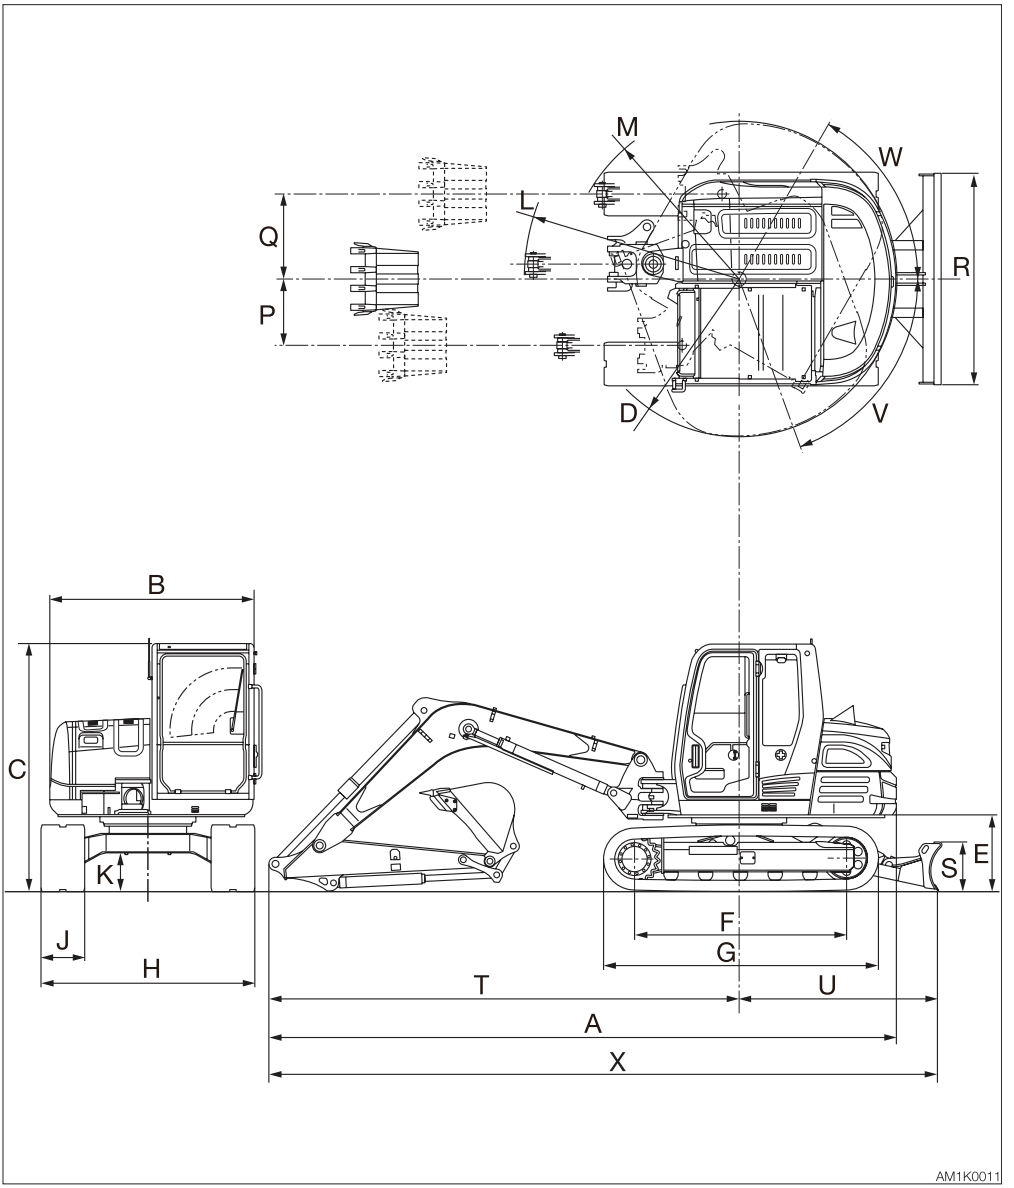


Mono boom

Unit: mm (inch)

	Item	Standard arm	Middle arm	Long arm
		Rubber crawlers		
A	Overall length	6530 (257.1) 6565 (258.5)**	6575 (258.9) 6610 (260.2)**	6660 (262.3) 6695 (263.7)**
B	Upperstructure overall width	2140 (84.3)	←	←
C	Overall height	2550 (100.5) 2560 (100.8)*	←	←
D	Slew radius	1650 (65) 1685 (66.3)**	←	←
E	Clearance height under upperstructure	770 (30.4) 760 (29.9)*	←	←
F	Crawler base	2210 (87) 2180 (85.8)*	←	←
G	Crawler overall length	2855 (112.4) 2830 (111.4)*	←	←
H	Crawler overall width	2200 (86.6)	←	←
J	Crawler shoe width	450 (17.7)	←	←
K	Ground clearance of undercarriage	370 (14.6) 360 (14.2)*	←	←
L	Minimum radius of equipment and attachment	2240 (88.2)	2360 (92.9)	2495 (98.2)
M	Minimum radius of equipment at maximum front offset	1810 (71.3)	1910 (75.3)	2030 (79.9)
P	Offset distance of bucket (right swing)	685 (27)	←	←
Q	Offset distance of bucket (left swing)	890 (35)	←	←
R	Dozer blade width	2200 (86.6)	←	←
S	Dozer blade height	500 (19.7)	←	←
T	Front distance to axis of rotation	4890 (192.5)	4935 (194.3)	5020 (197.7)
U	Dozer blade distance to axis of rotation	2055 (81.0) 2060 (81.1)*	←	←
V	Boom swing angle (Left)	70°	←	←
W	Boom swing angle (Right)	60°	←	←
X	Overall length (dozer blade at rear)	6945 (273.5)	7000 (275.6)	7085 (278.9)

* : With steel crawlers
** : With extra weight

2-Piece boom (One cylinder)

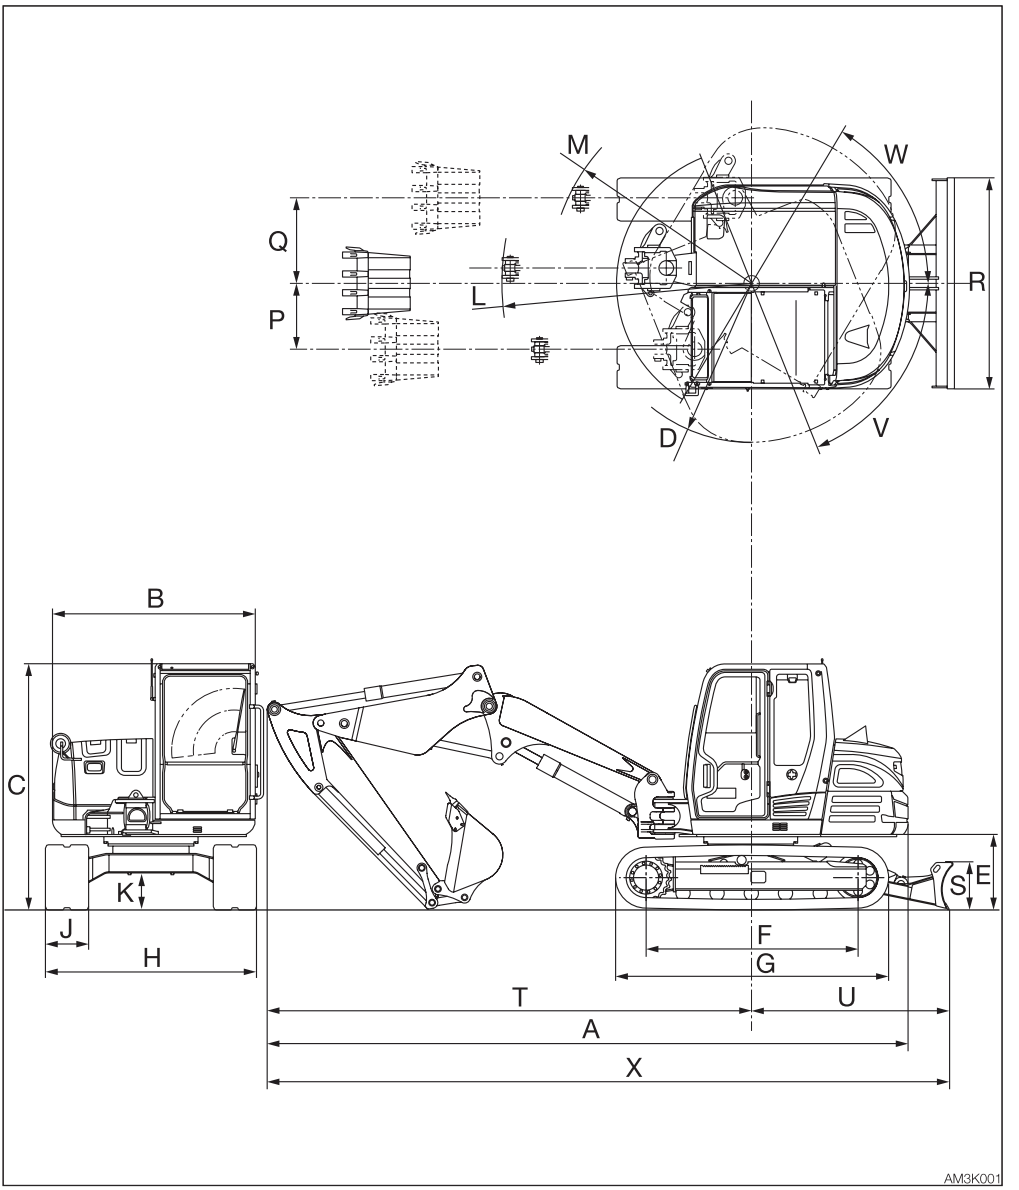


2-Piece boom (One cylinder)

Unit: mm (inch)

	Item	Rubber crawlers
A	Overall length	6700 (263.8) 6735 (265.2)**
B	Upperstructure overall width	2140 (84.3)
C	Overall height	2550 (100.5) 2560 (100.8)*
D	Slew radius	1650 (65) 1685 (66.3)**
E	Clearance height under upperstructure	770 (30.4) 760 (29.9)*
F	Crawler base	2210 (87) 2180 (85.8)*
G	Crawler overall length	2855 (112.4) 2830 (111.4)*
H	Crawler overall width	2200 (86.6)
J	Crawler shoe width	450 (17.7)
K	Ground clearance of undercarriage	370 (14.6) 360 (14.2)*
L	Minimum radius of equipment and attachment	2675 (105.3)
M	Minimum radius of equipment at maximum front offset	2190 (86.2)
P	Offset distance of bucket (right swing)	685 (27)
Q	Offset distance of bucket (left swing)	890 (35)
R	Dozer blade width	2200 (86.6)
S	Dozer blade height	500 (19.7)
T	Front distance to axis of rotation	5060 (199.2)
U	Dozer blade distance to axis of rotation	2055 (81.0) 2060 (81.1)*
V	Boom swing angle (Left)	70°
W	Boom swing angle (Right)	60°
X	Overall length (dozer blade at rear)	7120 (280.4)

* : With steel crawlers
** : With extra weight

2-Piece boom (Two cylinders)

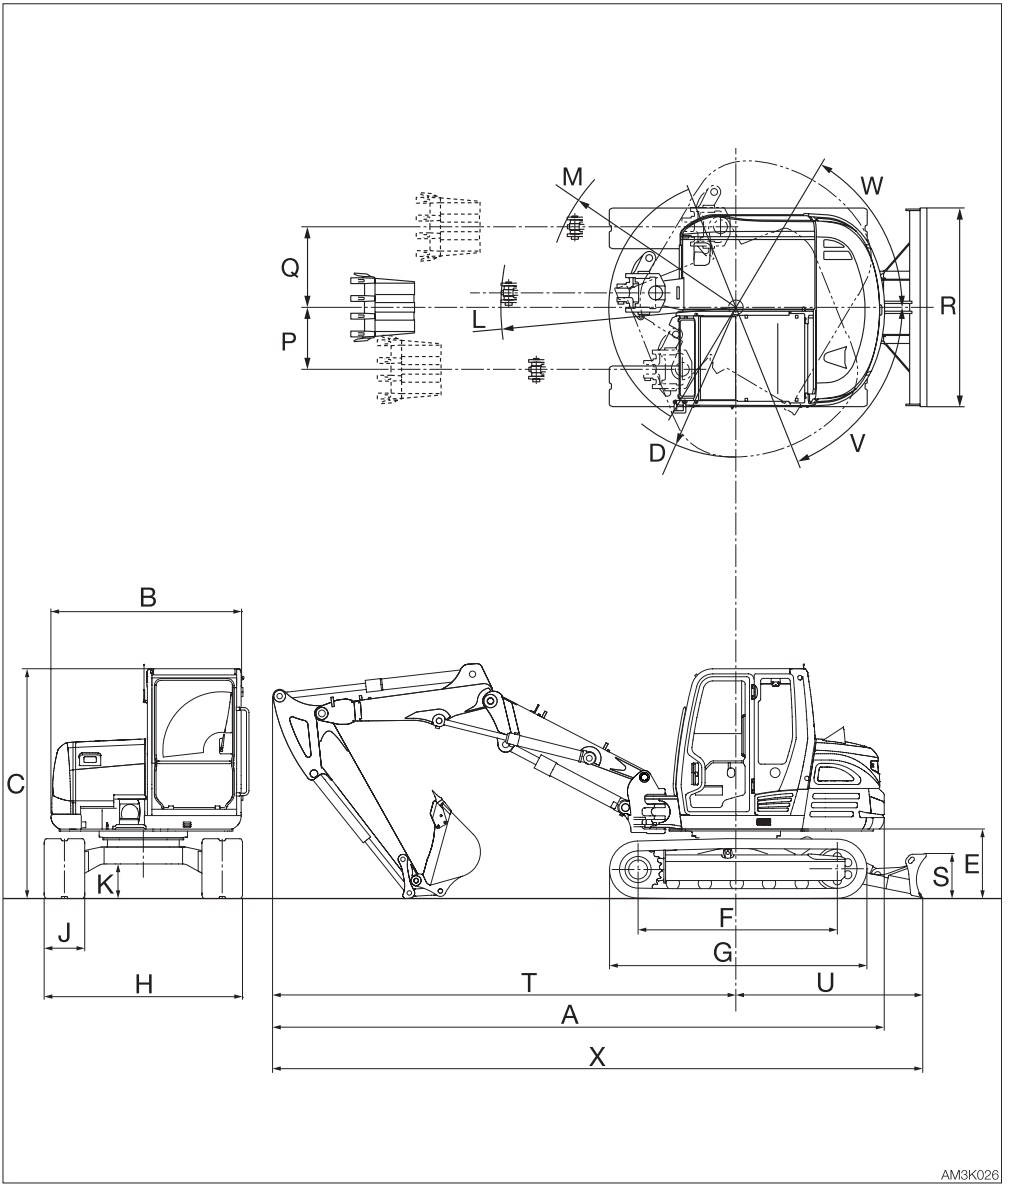

2-Piece boom (Two cylinders)


Unit: mm (inch)

	Item	Rubber crawlers
A	Overall length	6780 (266.9) 6790 (267.3)**
B	Upperstructure overall width	2140 (84.3)
C	Overall height	2550 (100.5)
D	Slew radius	1650 (65) 1685 (66.3)**
E	Clearance height under upperstructure	770 (30.4)
F	Crawler base	2210 (87)
G	Crawler overall length	2855 (112.4)
H	Crawler overall width	2200 (86.6)
J	Crawler shoe width	450 (17.7)
K	Ground clearance of undercarriage	370 (14.6)
L	Minimum radius of equipment and attachment	2705 (106.5)
M	Minimum radius of equipment at maximum front offset	2220 (87.4)
P	Offset distance of bucket (right swing)	685 (27)
Q	Offset distance of bucket (left swing)	890 (35)
R	Dozer blade width	2200 (86.6)
S	Dozer blade height	500 (19.7)
T	Front distance to axis of rotation	5140 (202.4)
U	Dozer blade distance to axis of rotation	2055 (81.0)
V	Boom swing angle (Left)	70°
W	Boom swing angle (Right)	60°
X	Overall length (dozer blade at rear)	7210 (283.9)

** : With extra weight

OPERATING RANGES

Mono boom

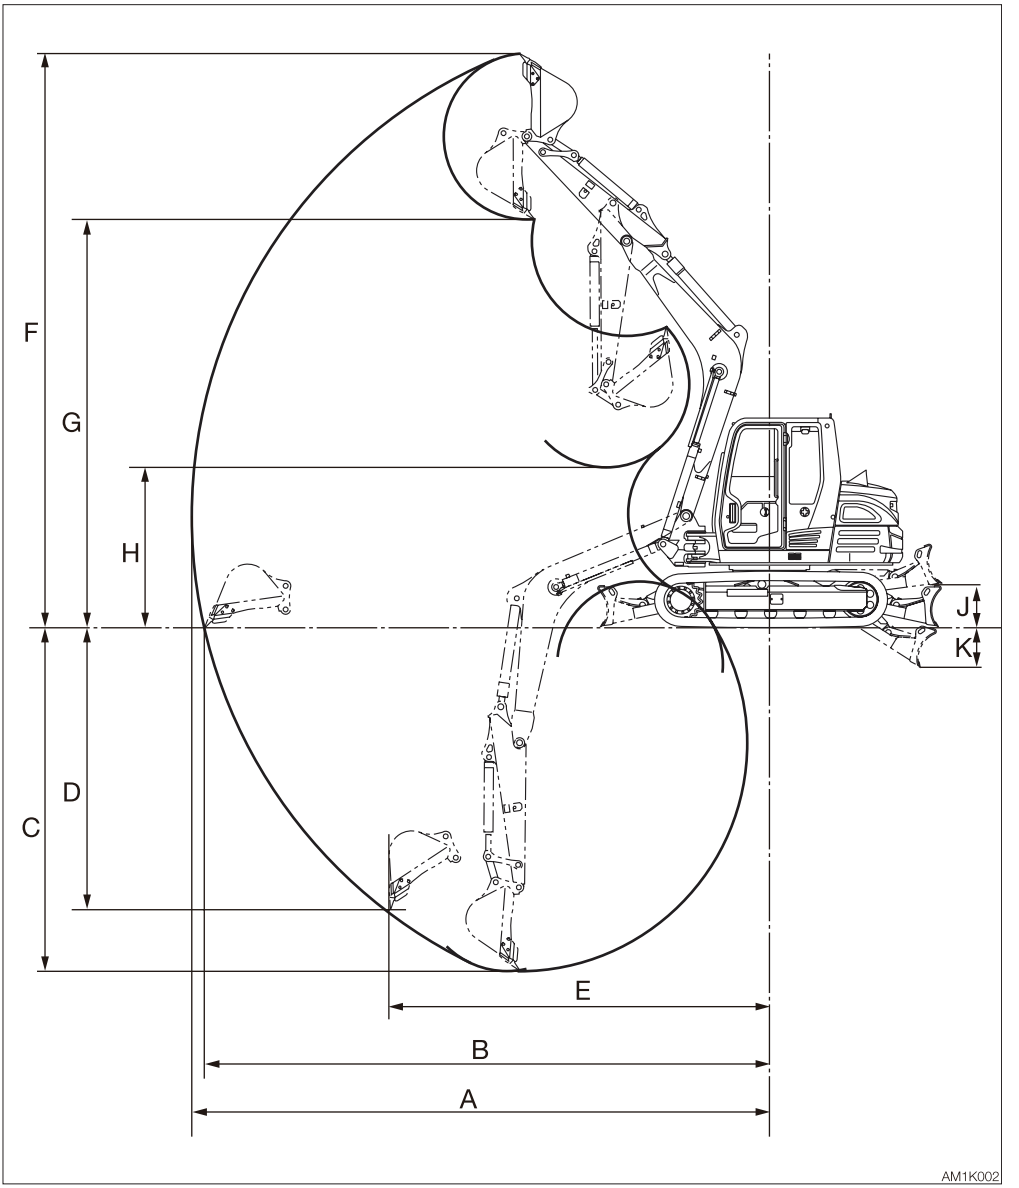


Mono boom

Unit: mm (inch)

	Item	Standard arm	Middle arm	Long arm
		Rubber crawlers		
A	Maximum reach	7105 (279.6)	7275 (286.3)	7435 (292.7)
B	Maximum reach at ground reference plane	6950 (273.7)	7125 (280.6)	7290 (287.1)
C	Maximum digging depth	4230 (166.6)	4410 (173.7)	4580 (180.4)
D	Maximum vertical digging depth	3470 (136.5)	3650 (143.6)	3820 (150.4)
E	Reach at maximum vertical digging depth	4685 (184.4)	4720 (185.8)	4755 (187.1)
F	Maximum height of cutting edge	7030 (276.8)	7165 (282.1)	7290 (287.1)
G	Maximum dumping height	4995 (196.7)	5135 (202.1)	5260 (207.1)
H	Minimum dumping height	1950 (76.7)	1785 (70.3)	1640 (64.6)
J	Dozer blade maximum lifting	505 (19.9)	←	←
K	Dozer blade maximum lowering	500 (19.7)	←	←

2-Piece boom (One cylinder)

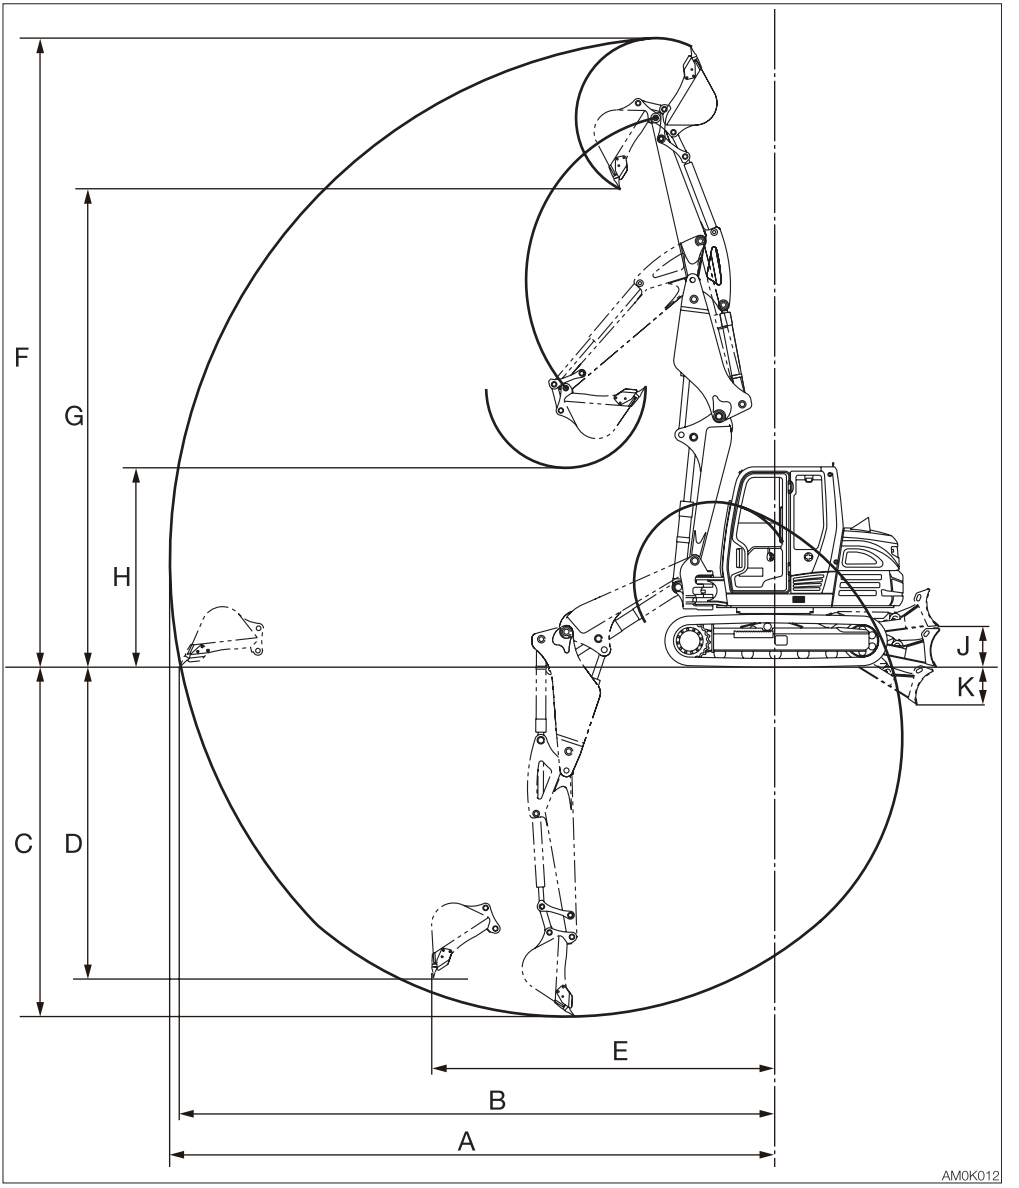


2-Piece boon (One cylinder)

Unit: mm (inch)

	Item	Rubber crawlers
A	Maximum reach	7730 (304.3)
B	Maximum reach at ground reference plane	7590 (298.8)
C	Maximum digging depth	4470 (175)
D	Maximum vertical digging depth	3980 (156.7)
E	Reach at maximum vertical digging depth	4385 (172.6)
F	Maximum height of cutting edge	8045 (316.7)
G	Maximum dumping height	6120 (240.9)
H	Minimum dumping height	2550 (100.4)
J	Dozer blade maximum lifting	505 (19.9)
K	Dozer blade maximum lowering	500 (19.7)

2-Piece boom (Two cylinders)

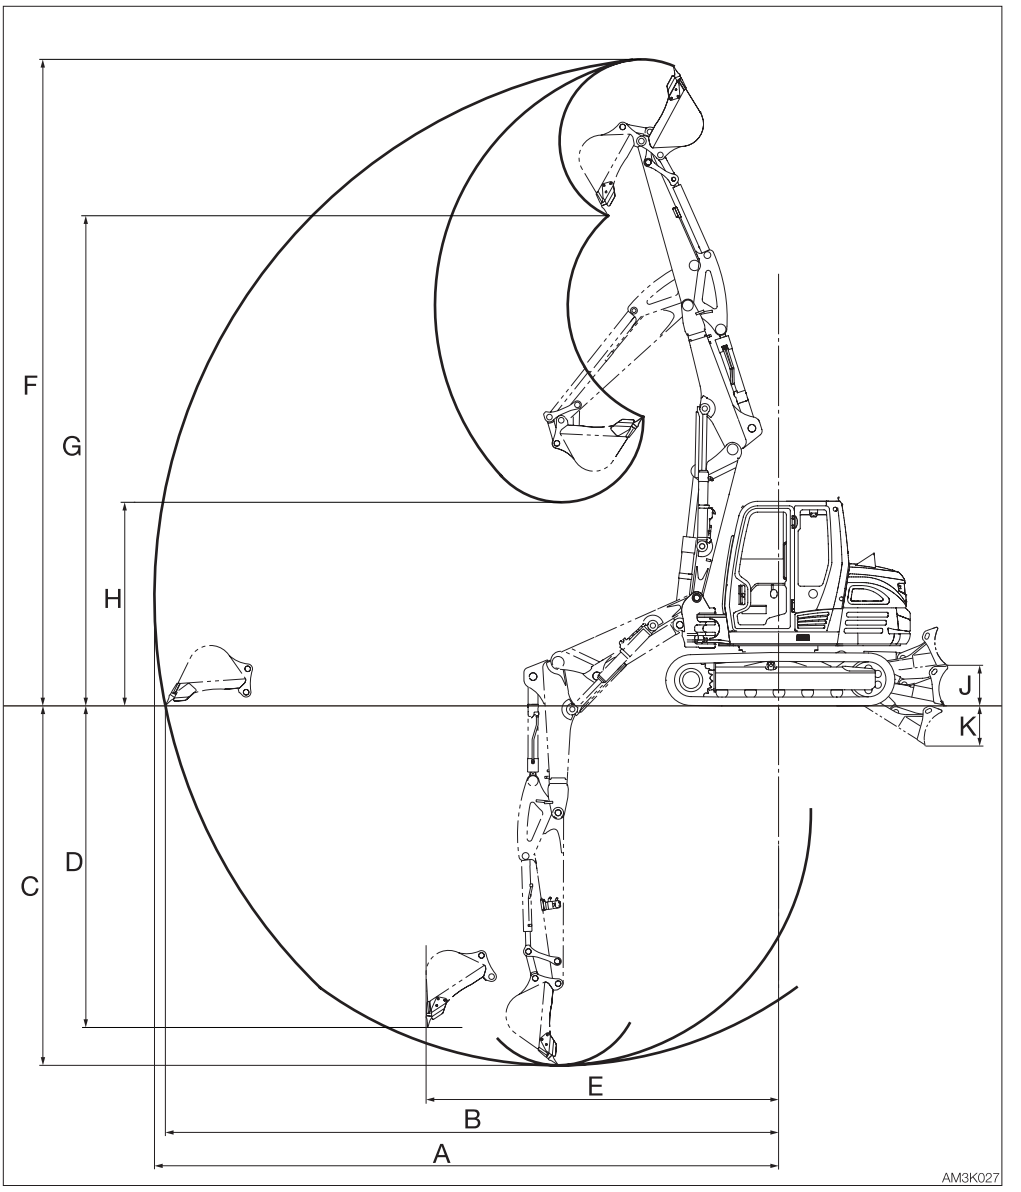

2-Piece boon (Two cylinders)

Unit: mm (inch)

	Item	Rubber crawlers
A	Maximum reach	7775 (306.1)
B	Maximum reach at ground reference plane	7640 (300.8)
C	Maximum digging depth	4480 (176.4)
D	Maximum vertical digging depth	4010 (157.9)
E	Reach at maximum vertical digging depth	4390 (172.8)
F	Maximum height of cutting edge	8060 (317.3)
G	Maximum dumping height	6110 (240.6)
H	Minimum dumping height	2540 (100)
J	Dozer blade maximum lifting	505 (19.9)
K	Dozer blade maximum lowering	500 (19.7)

MEMO

LIFTING CAPACITIES

Rated lift capacity chart

- The loads in the charts do not exceed 87% of hydraulic lift capacity or 75% of tipping load.
- Figures marked with an asterisk (*) are hydraulically-limited capacities.
- The mass of slings and any other lifting devices shall be deducted from the rated load to determine the net load that may be lifted.
- The load point is the bucket hinge pin, and the bucket posture is with the standard bucket completely retracted under the arm.
- Unit: daN (lbs)

Load hooking system


A load hooking system must be provided with the following capabilities.

1. A system which can withstand twice the rated lift capacity no matter at what position the load is applied.
2. A system that poses no risk of the lifted load falling from the hooking device. For example, equipped with a hook slippage prevention device.
3. A system that poses no risk of the hooking system slipping from the hoe attachment.


⚠ WARNING

- **Do not attempt to lift or hold any load that is greater than these rated values at their specified load radii and height.**
- **The rated lift capacities are based on the machine being level and situated on a firm supporting surface. For safe lifting, the operator is expected to make due allowance for the particular job conditions such as soft or uneven ground, non-level condition, load to the machine sides, hazardous conditions, experience of personnel, etc. The operator and other personnel should fully acquaint themselves with the operator's manual furnished by the manufacturer before operating this machine. When operating the machine, the safety rules of the equipment must also be followed.**
- **Do not travel while lifting a load; It is very dangerous.**

Standard arm <Applicable machine models 185100001 or later>

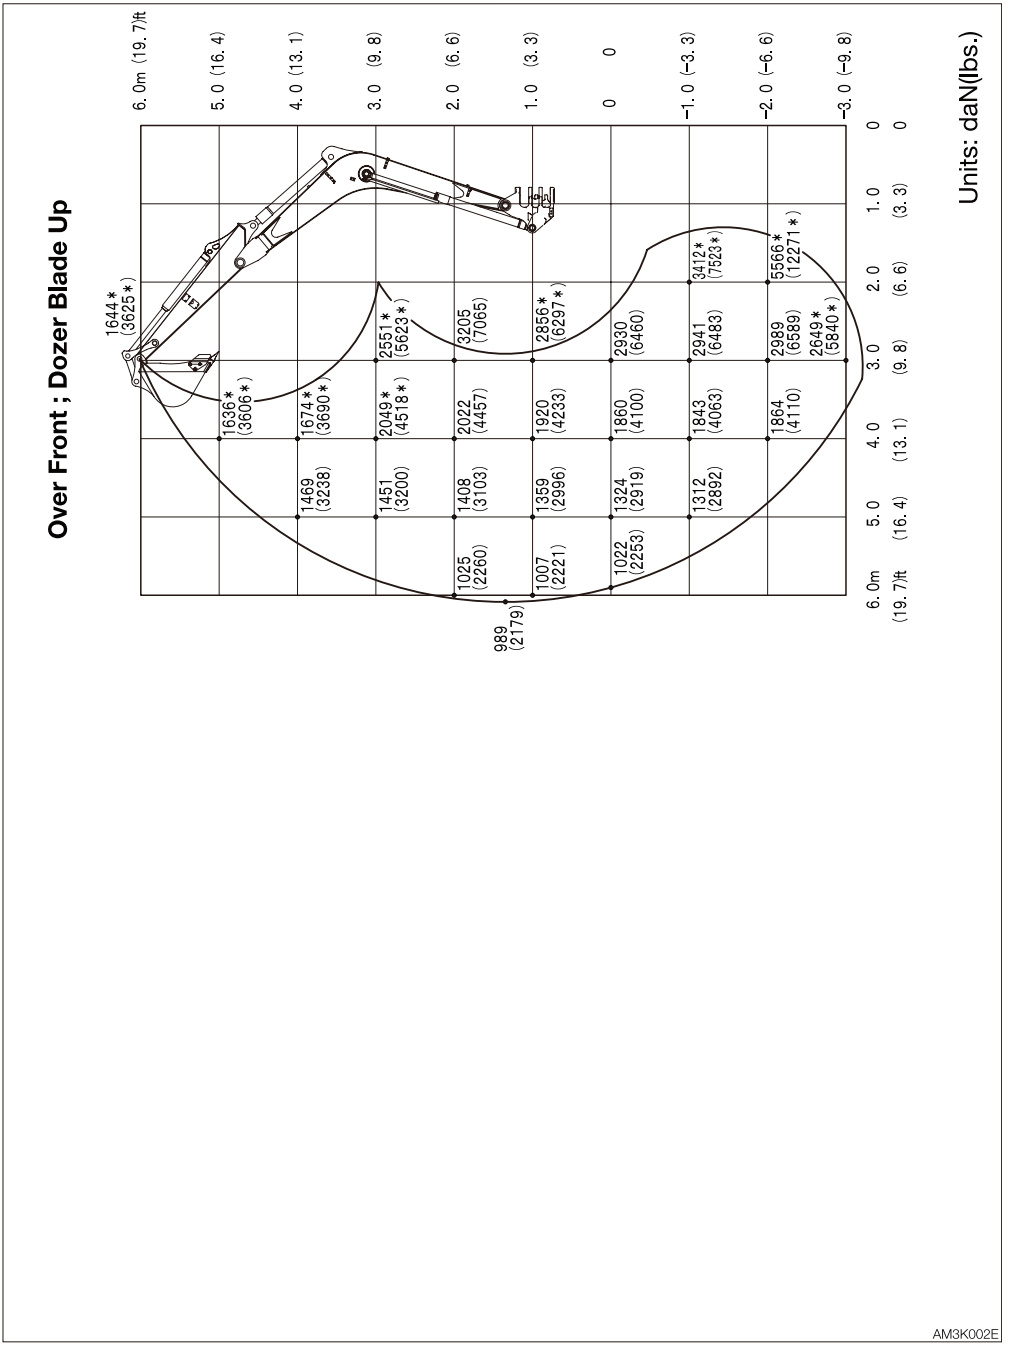


Standard arm <Applicable machine models 185100001 or later>

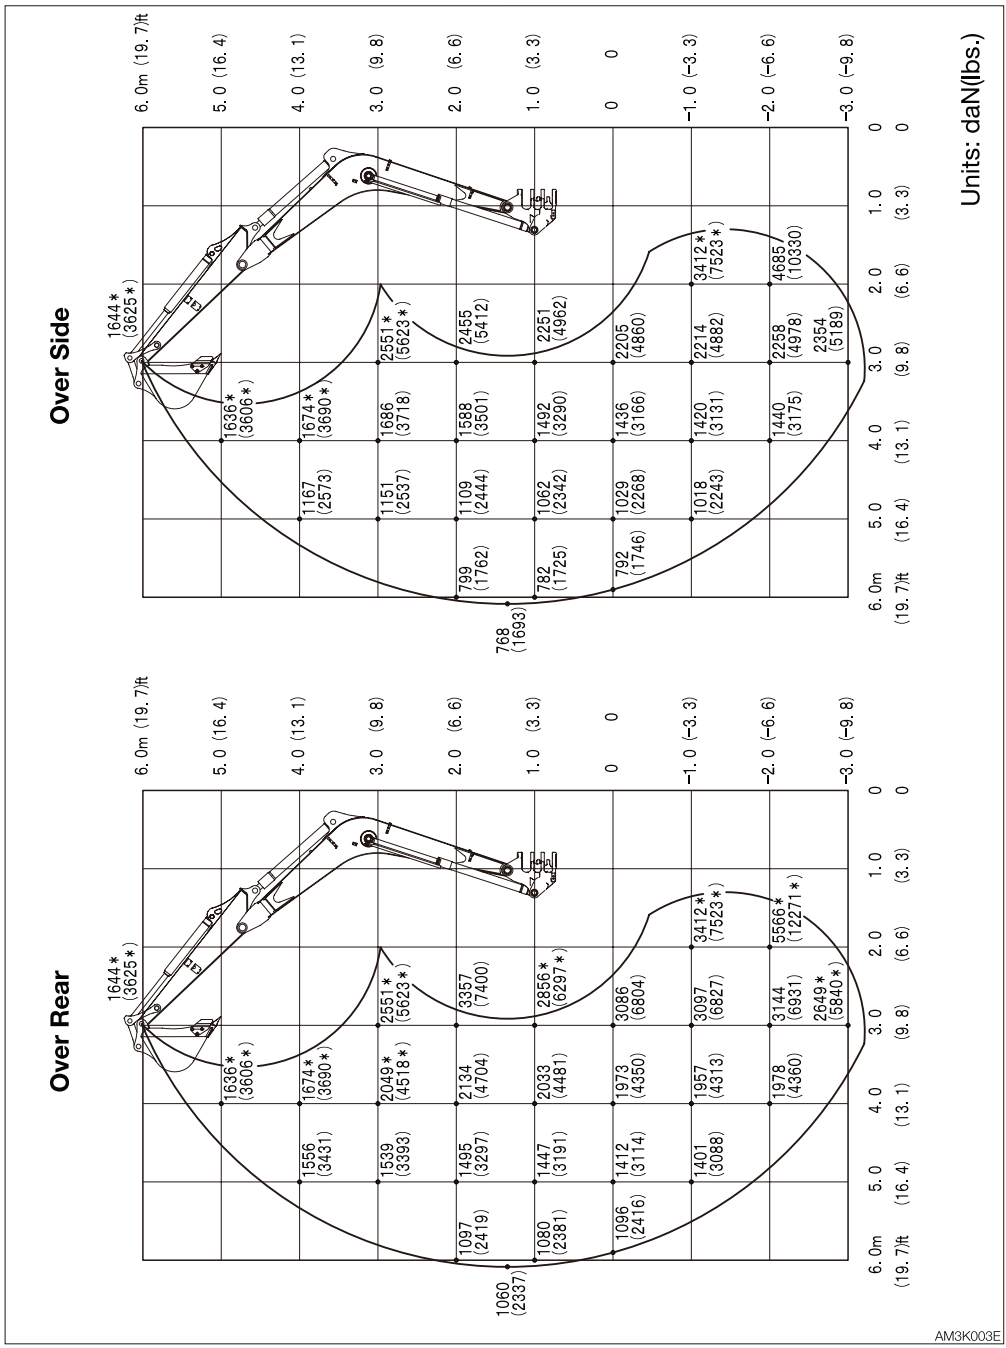


Middle arm <Applicable machine models 185100001 or later>

Over Front ; Dozer Blade Up

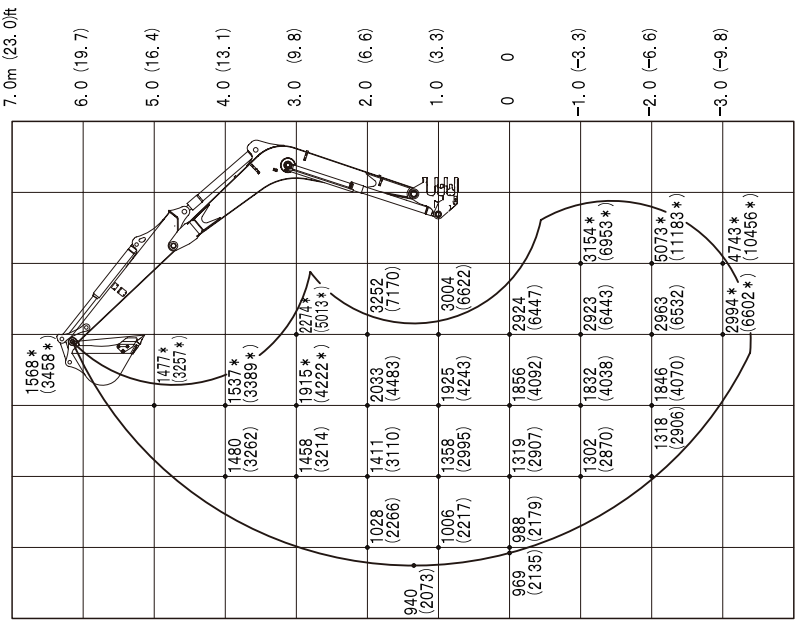


AM3K004E


Middle arm <Applicable machine models 185100001 or later>

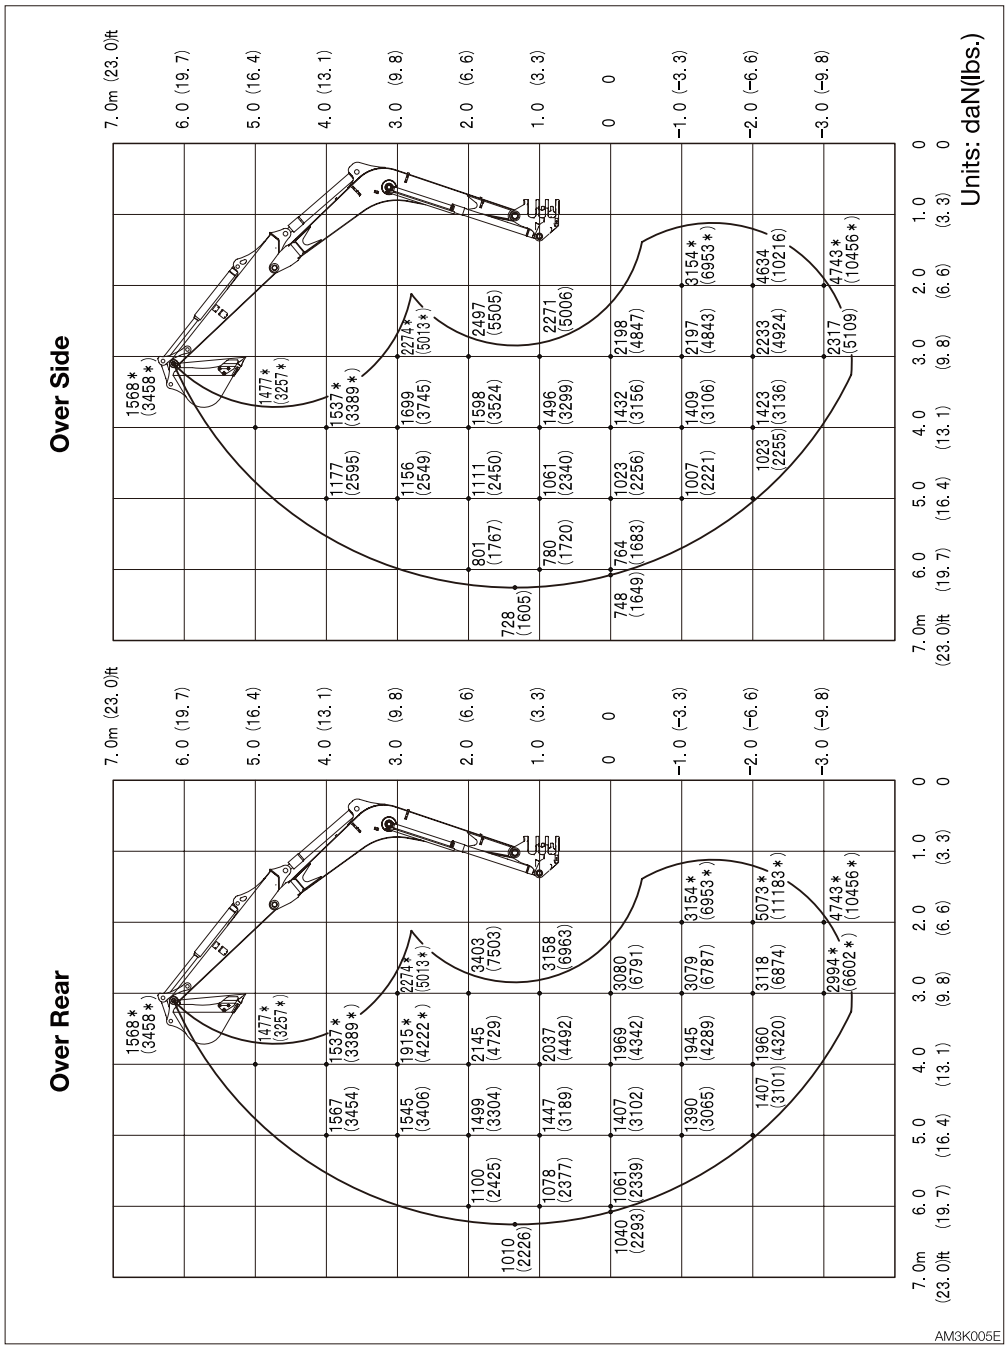


Long arm <Applicable machine models 185100001 or later>

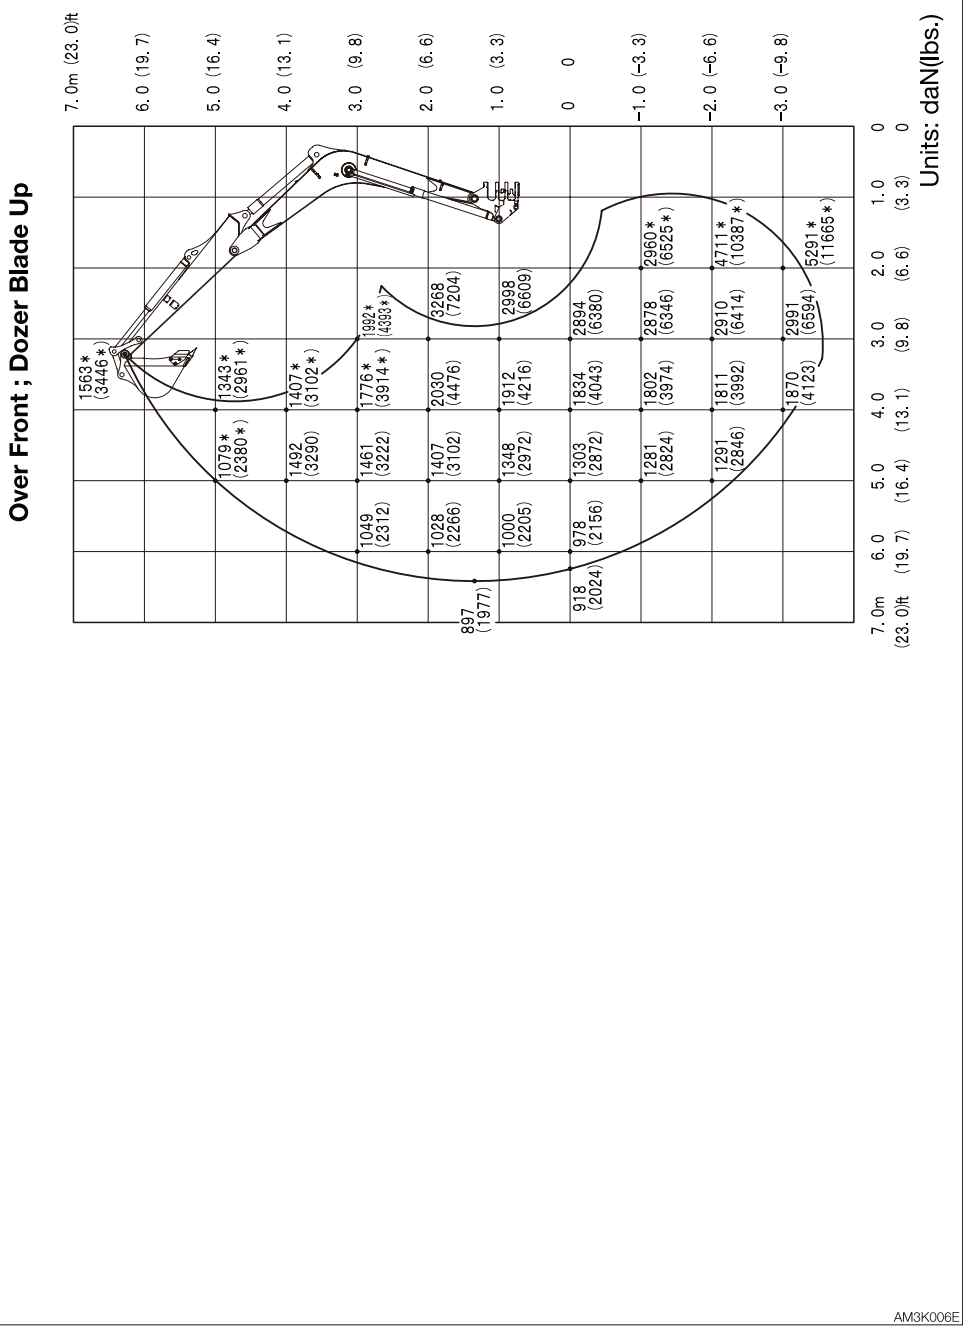


Long arm <Applicable machine models 185100001 or later>

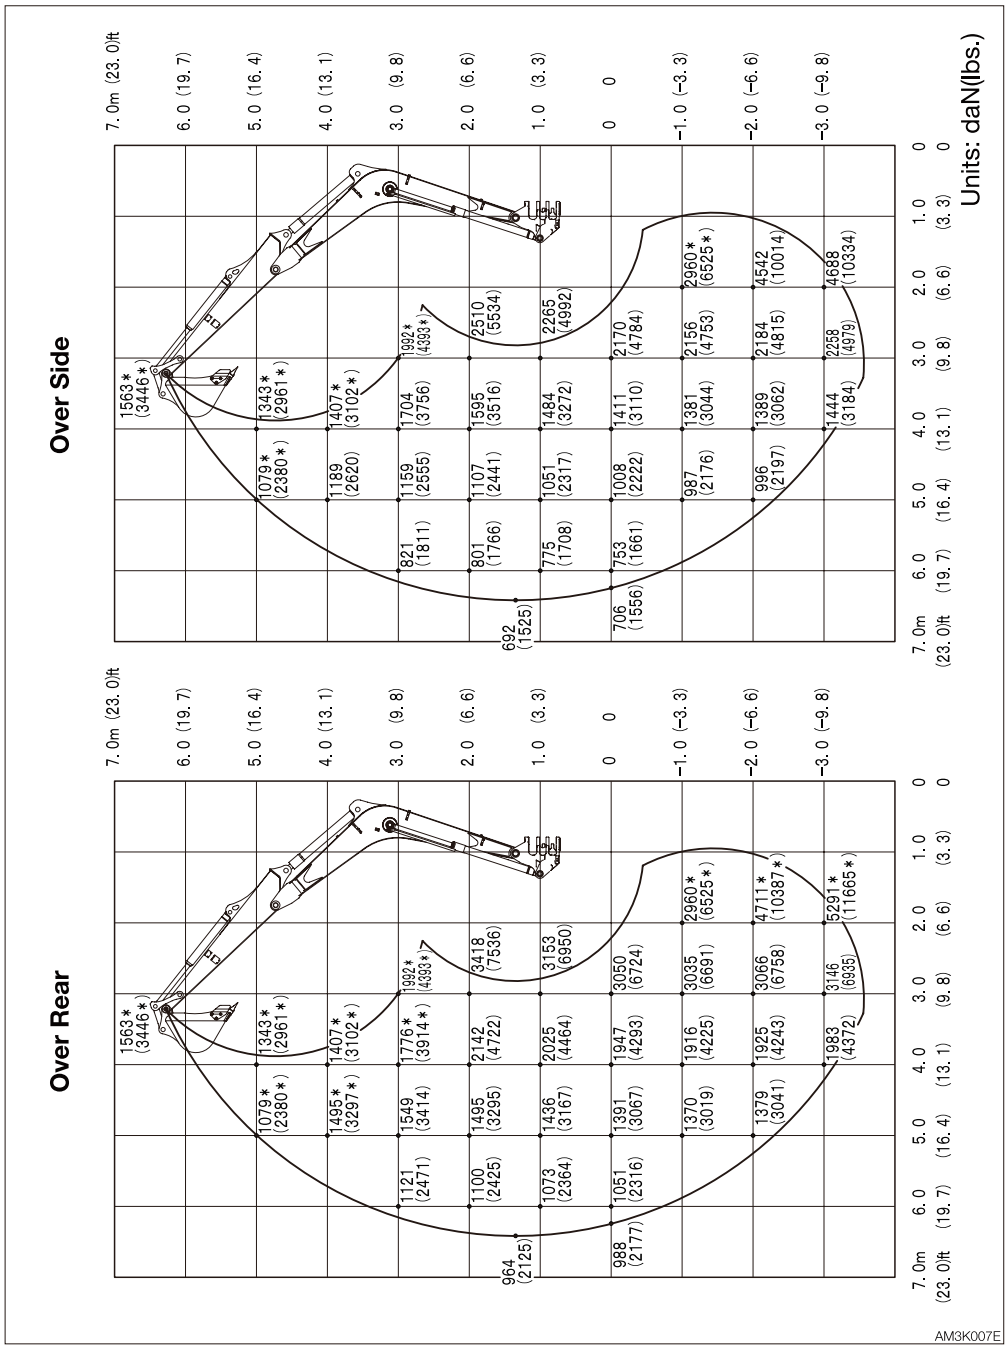

Standard arm <Applicable machine models 190200001 or later>

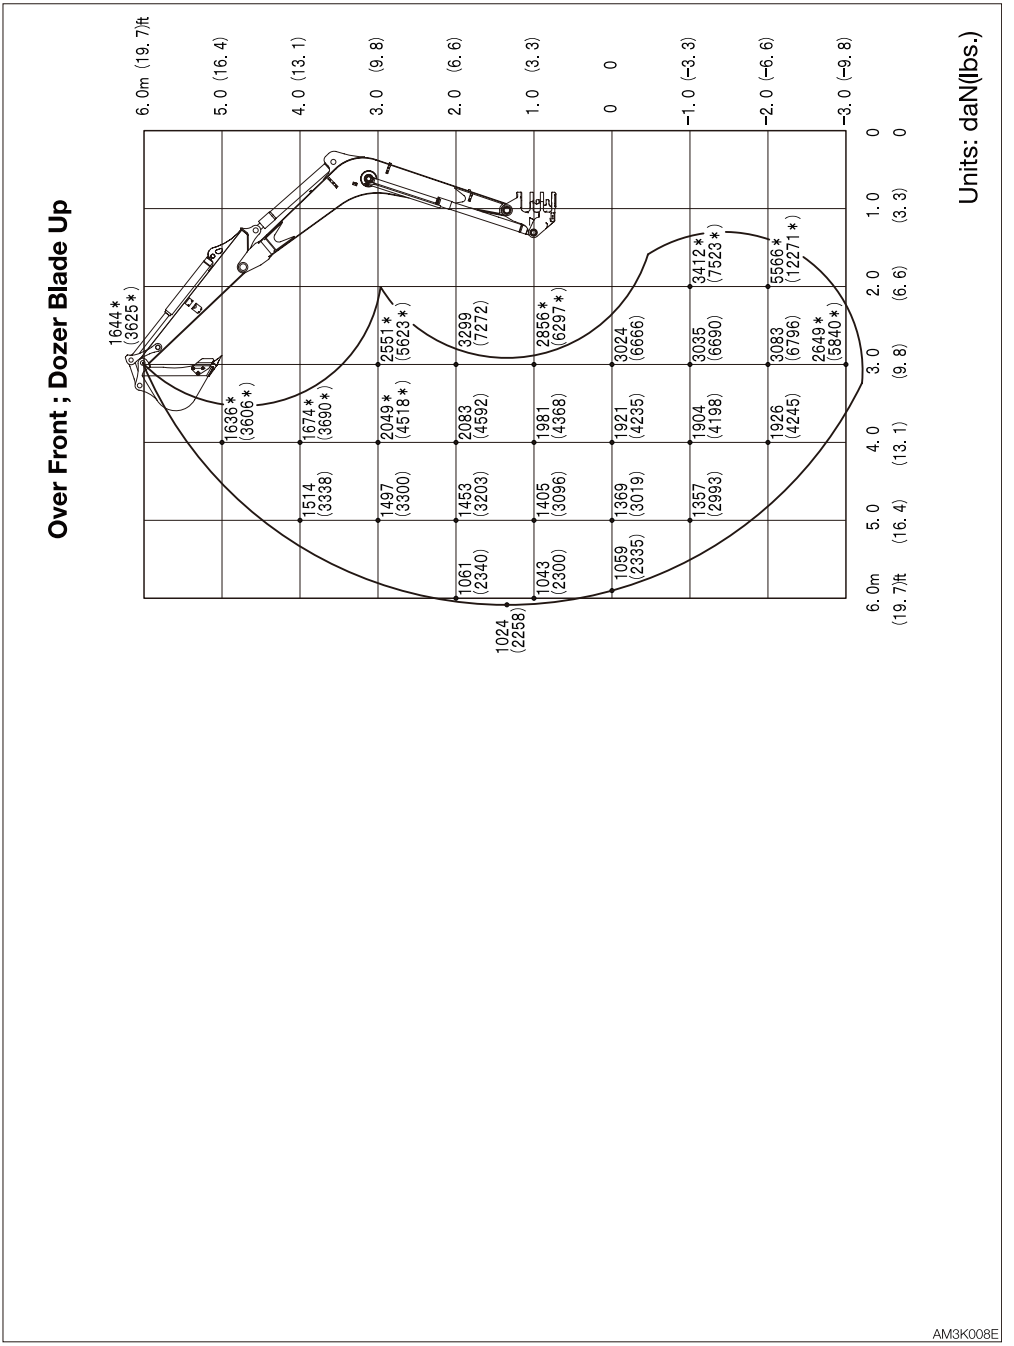


Standard arm <Applicable machine models 190200001 or later>

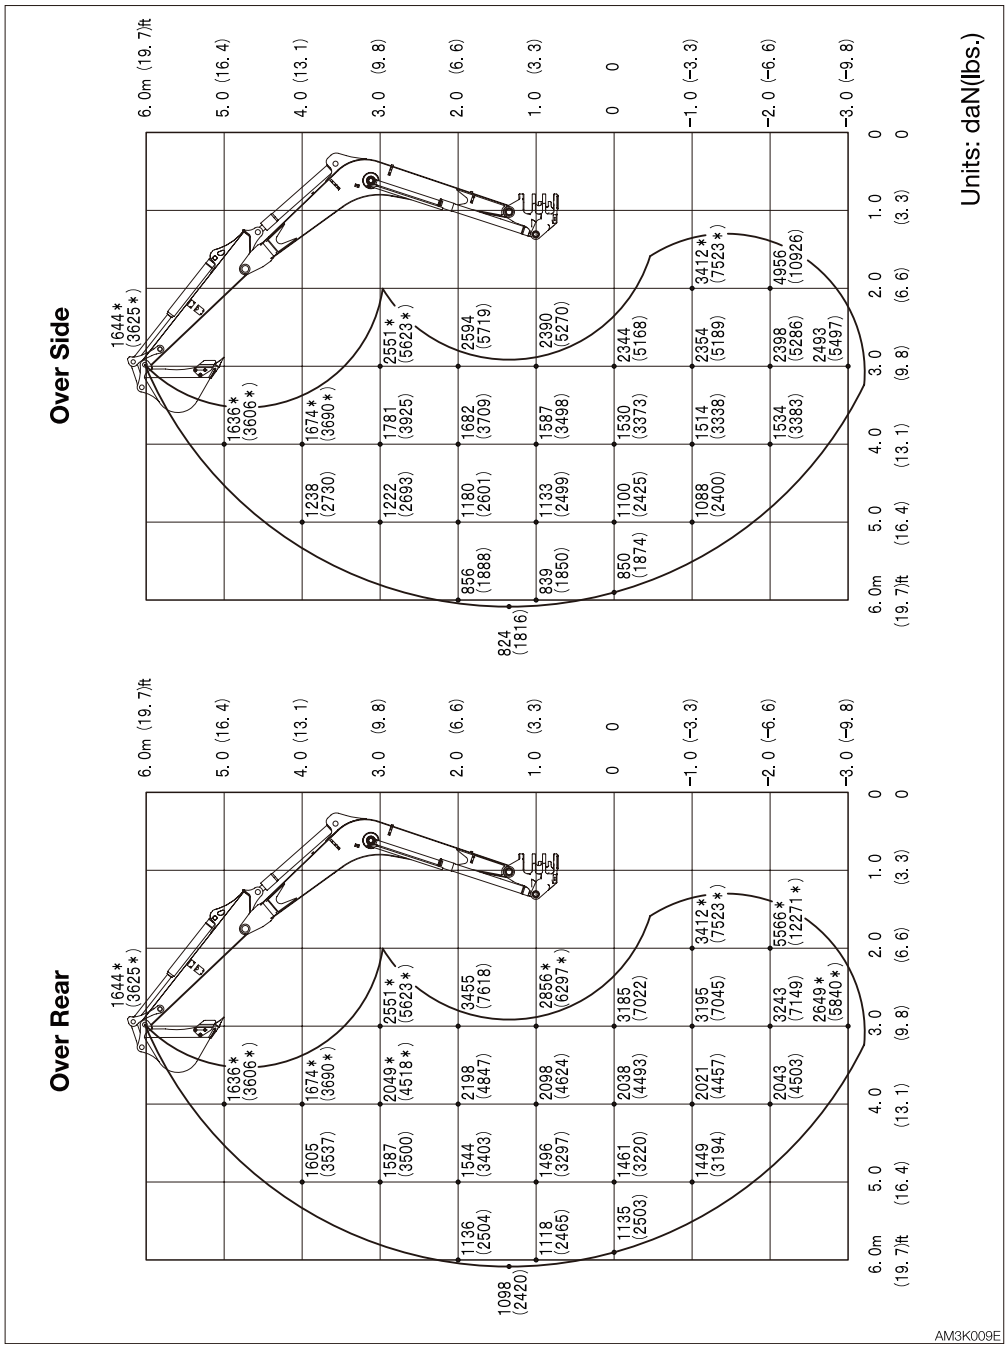


Middle arm <Applicable machine models 190200001 or later>

Over Front ; Dozer Blade Up

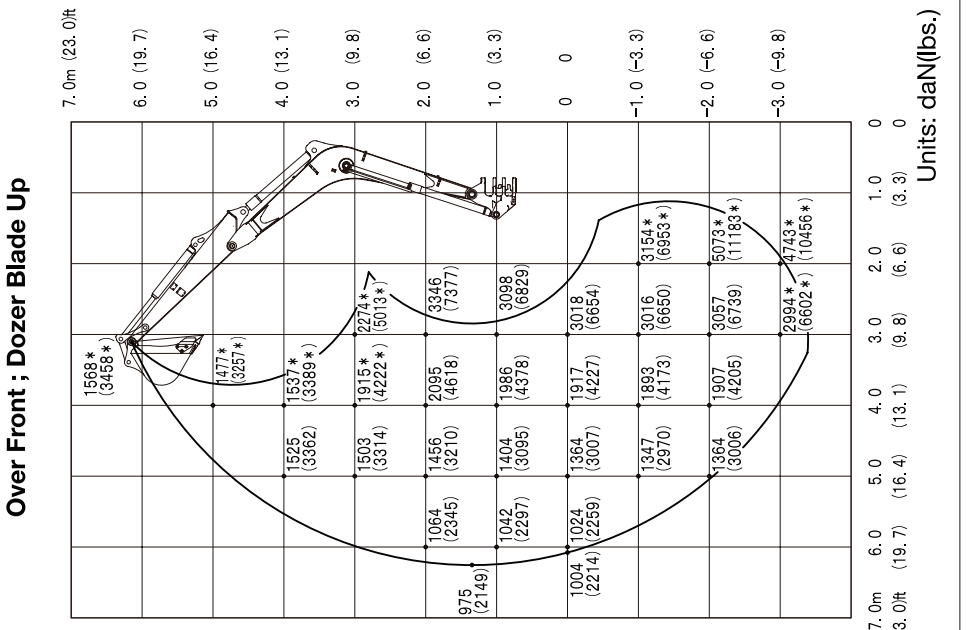


AM3K010E

Middle arm <Applicable machine models 190200001 or later>

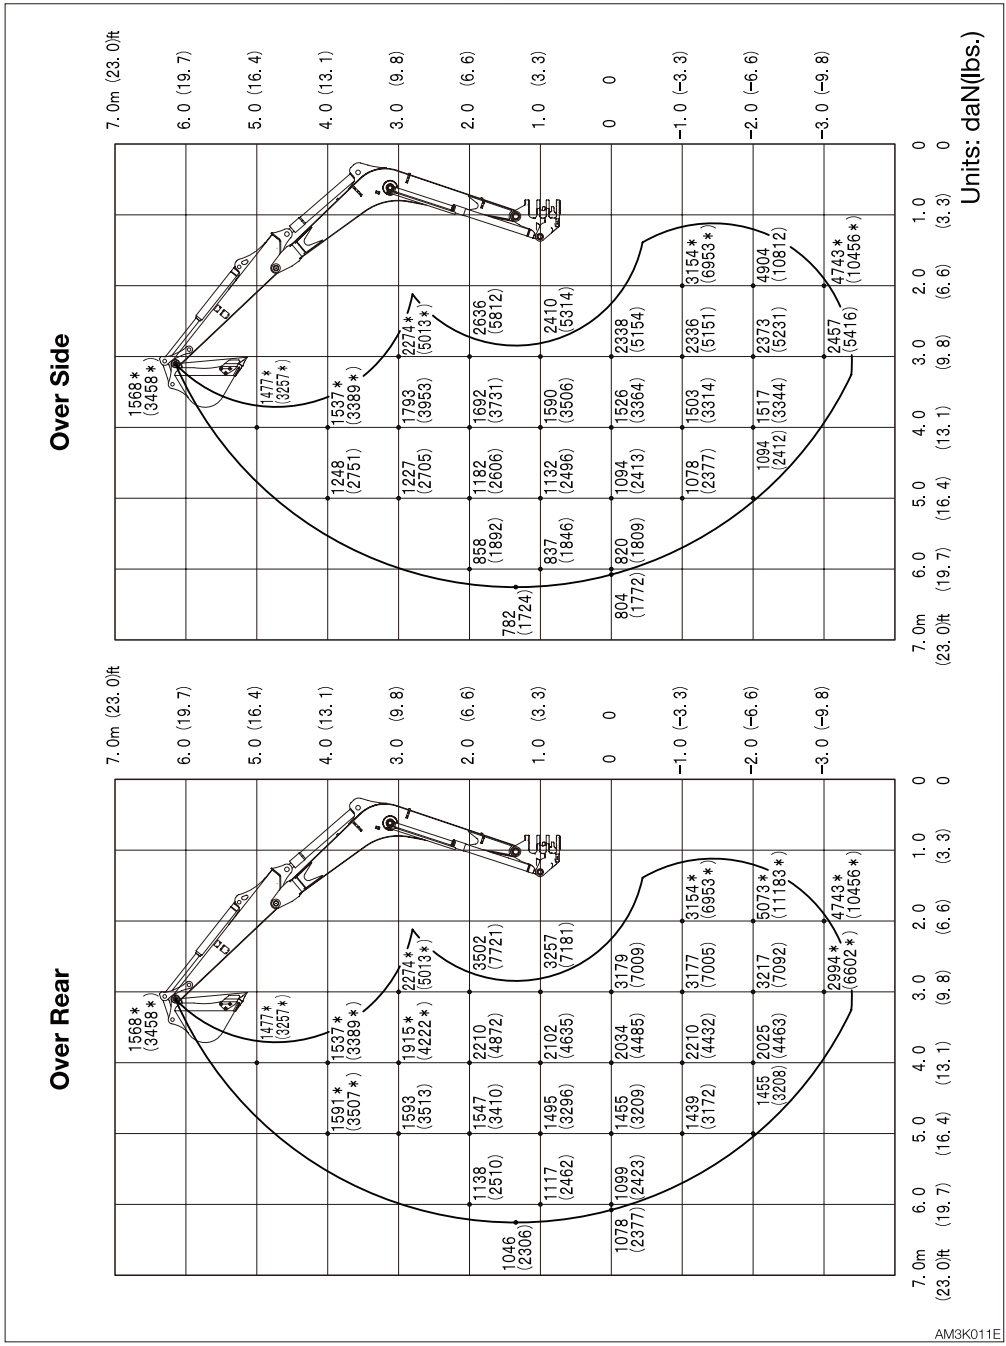


Long arm <Applicable machine models 190200001 or later>

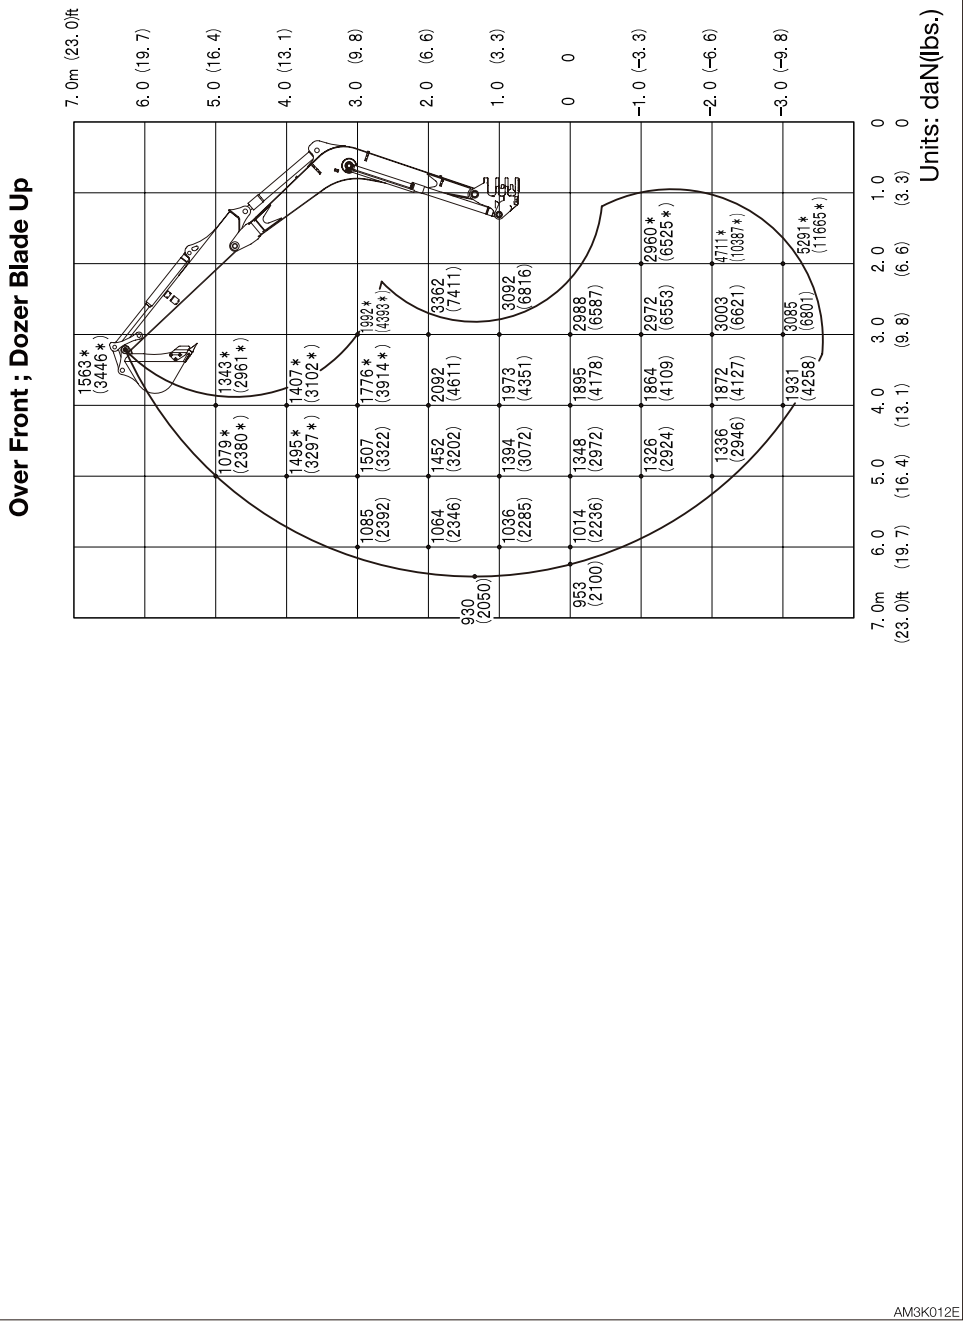


AM3K012E


Long arm <Applicable machine models 190200001 or later>

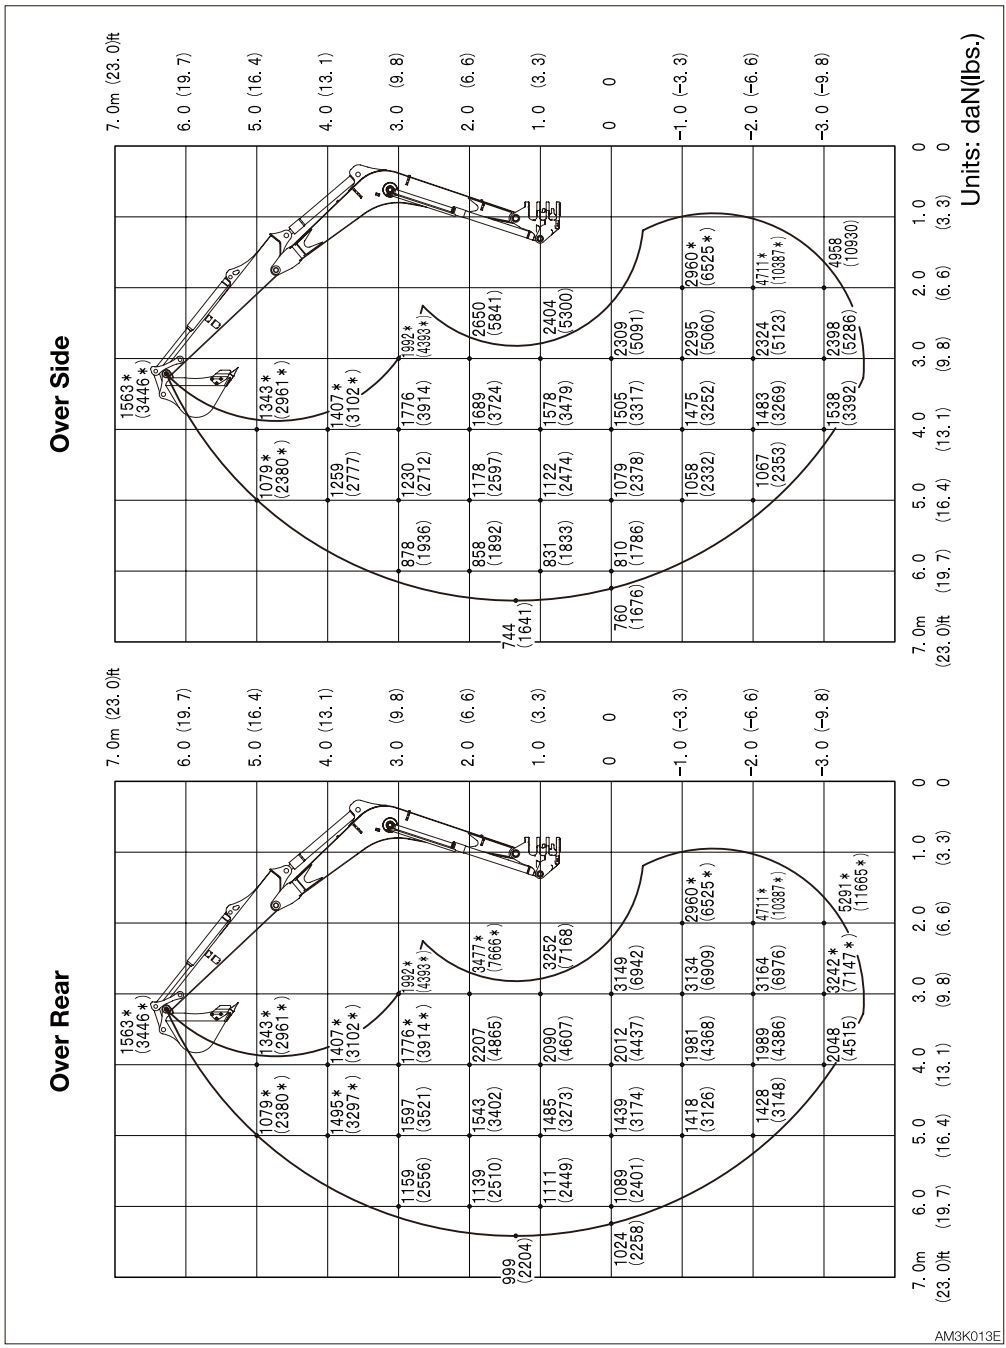


2-Piece boom (One cylinder) <Applicable machine models 185100001 or later>

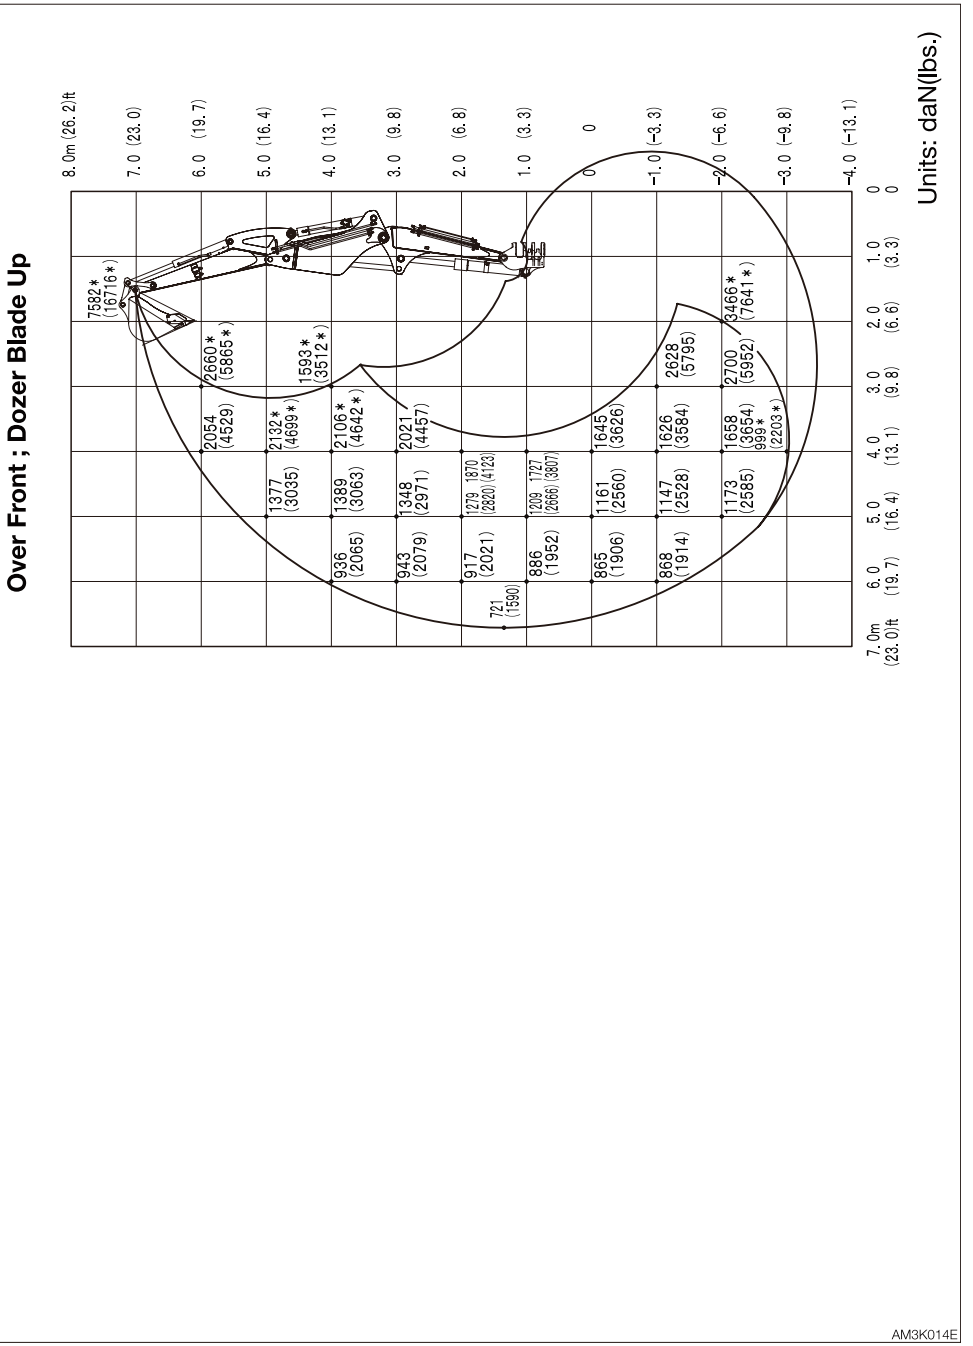


2-Piece boom (One cylinder) <Applicable machine models 185100001 or later>

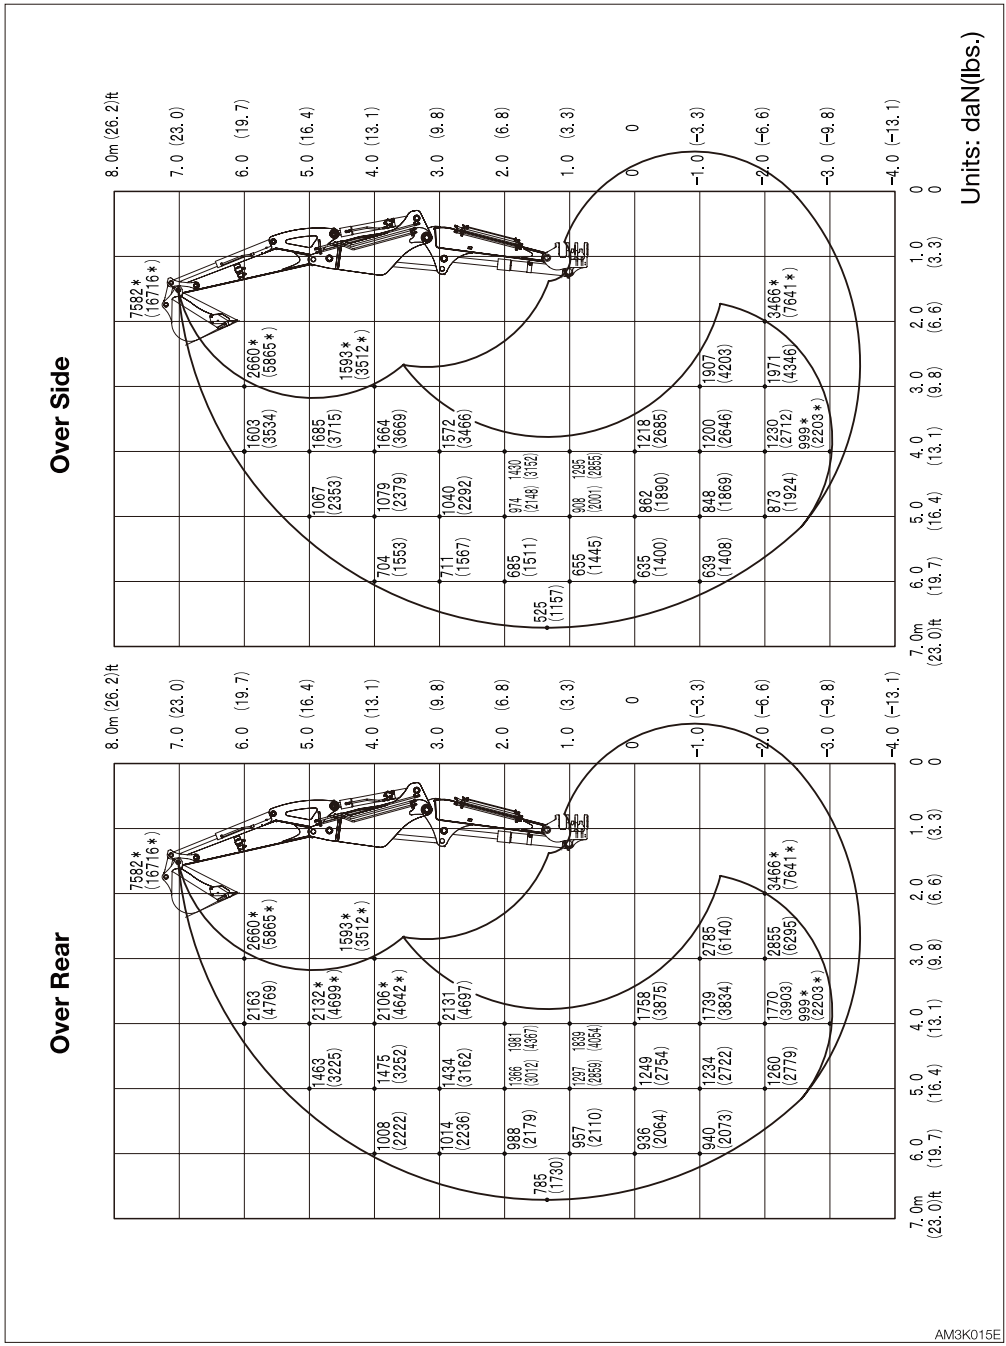

2-Piece boom (One cylinder) <Applicable machine models 190200001 or later>

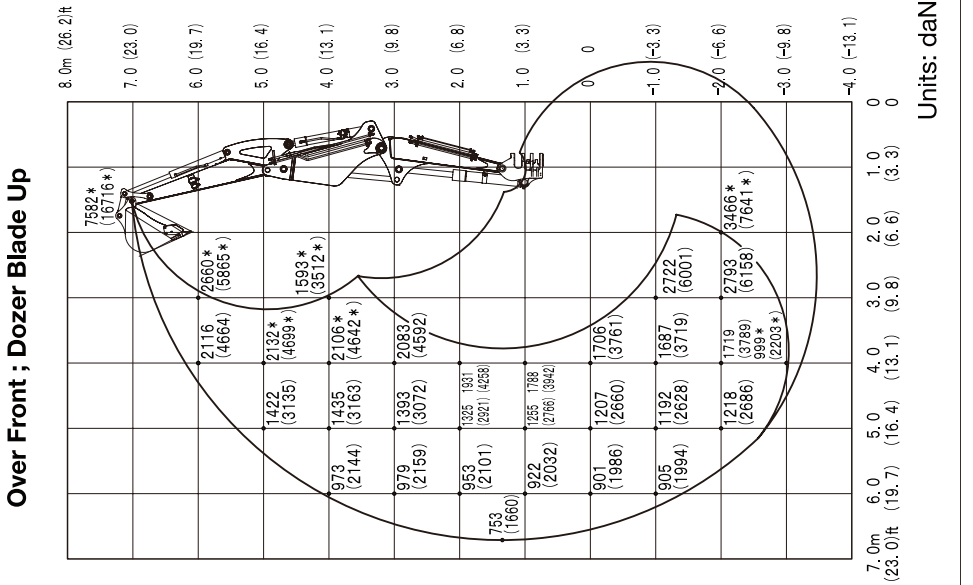


2-Piece boom (One cylinder) <Applicable machine models 190200001 or later>

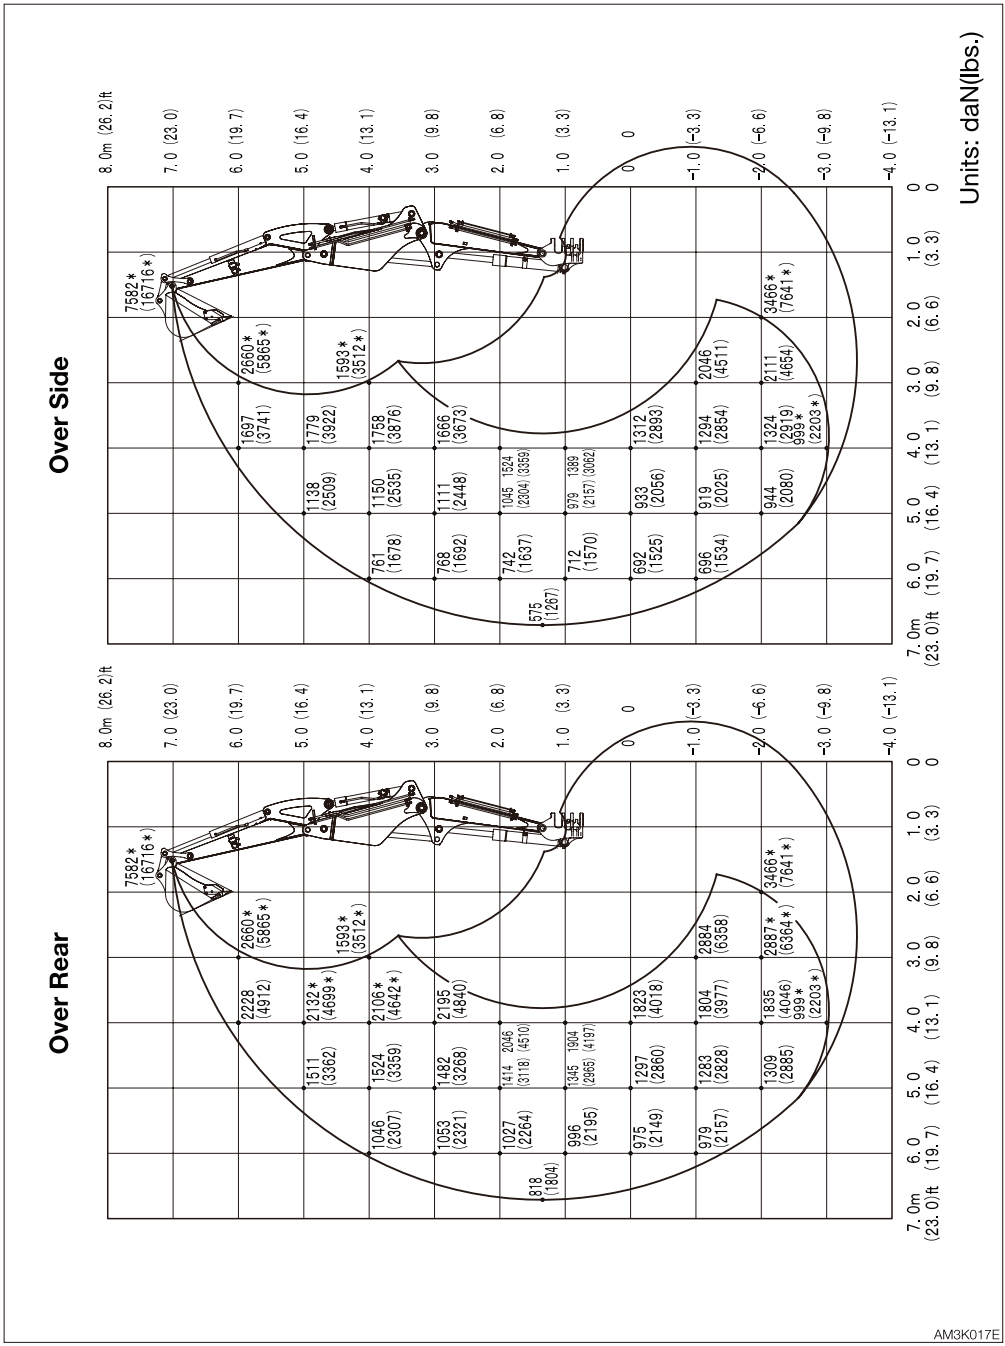

Long arm (Equipped with Extra weight) Rubber crawlers


Over Front ; Dozer Blade Up

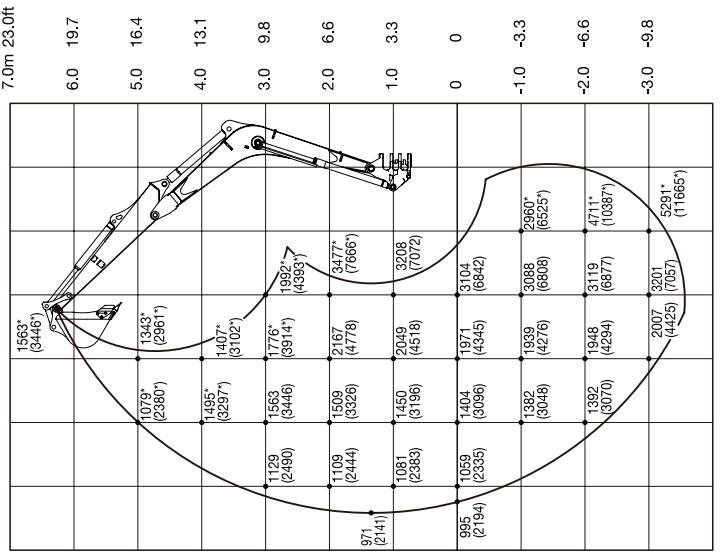

Units: daN(lbs.)


AM3K018E

Long arm (Equipped with Extra weight) Rubber crawlers

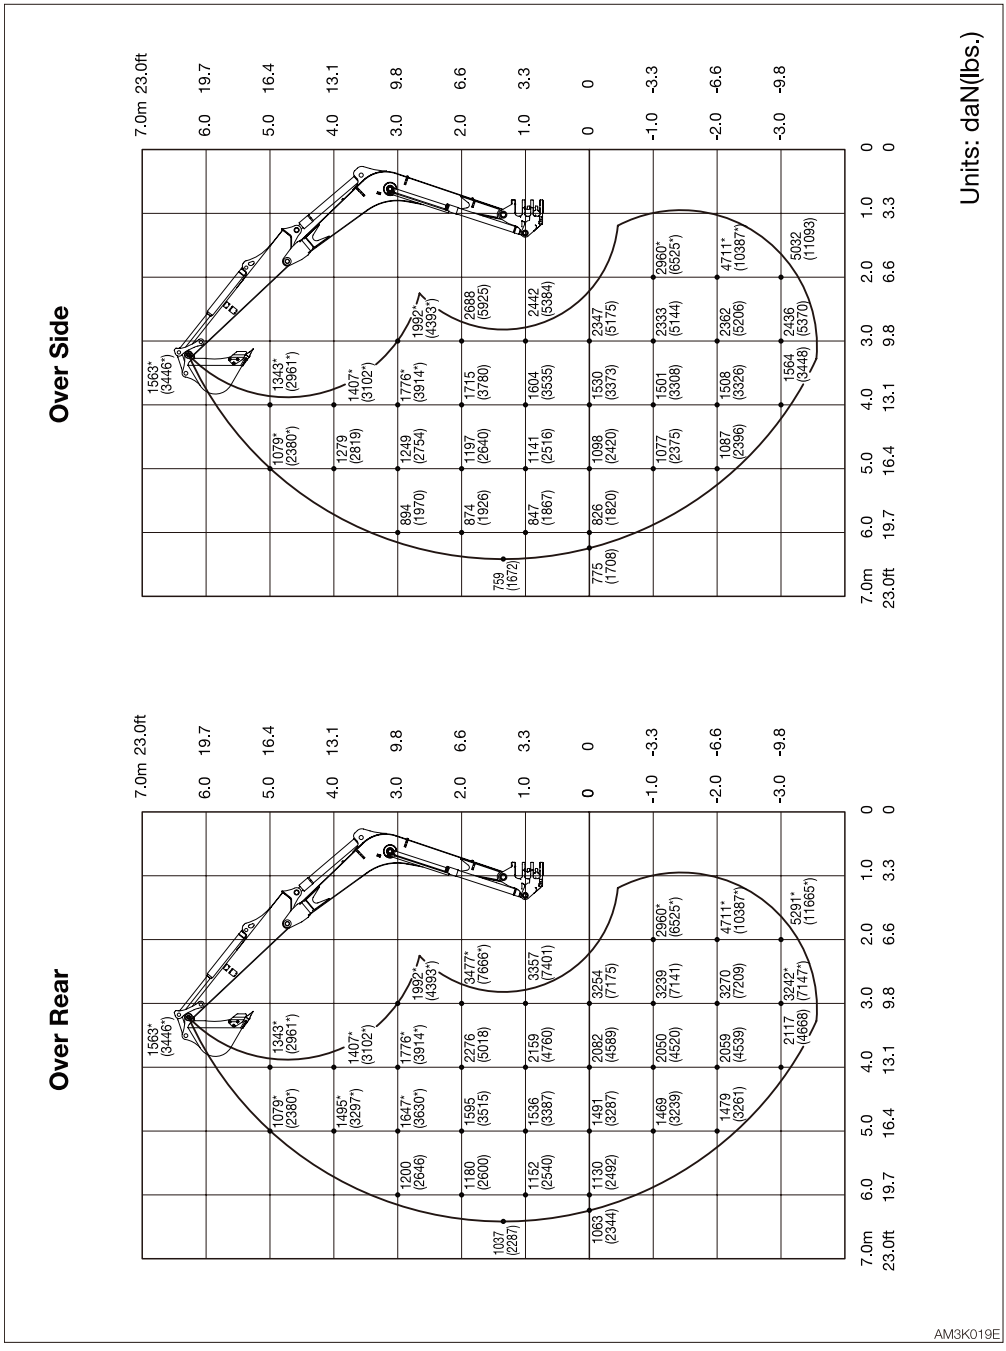

Long arm (Equipped with Extra weight) Steel crawlers


Over Front ; Dozer Blade Up

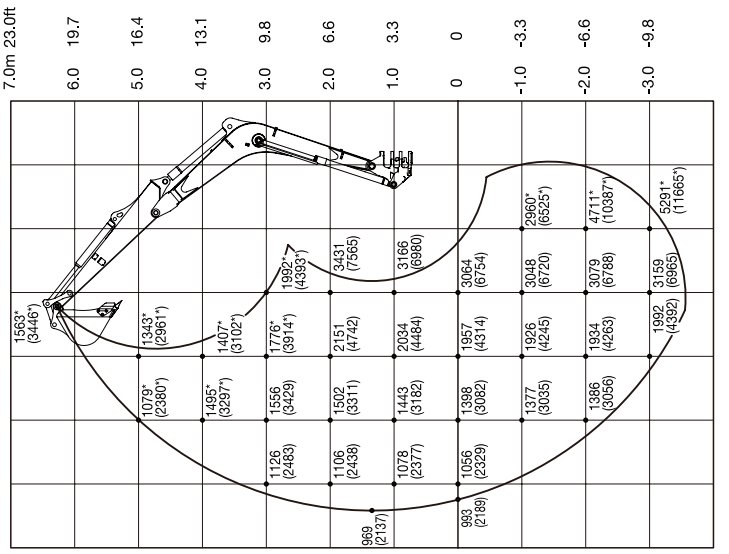

Units: daN(lbs.)


AM3K020E

Long arm (Equipped with Extra weight) Steel crawlers

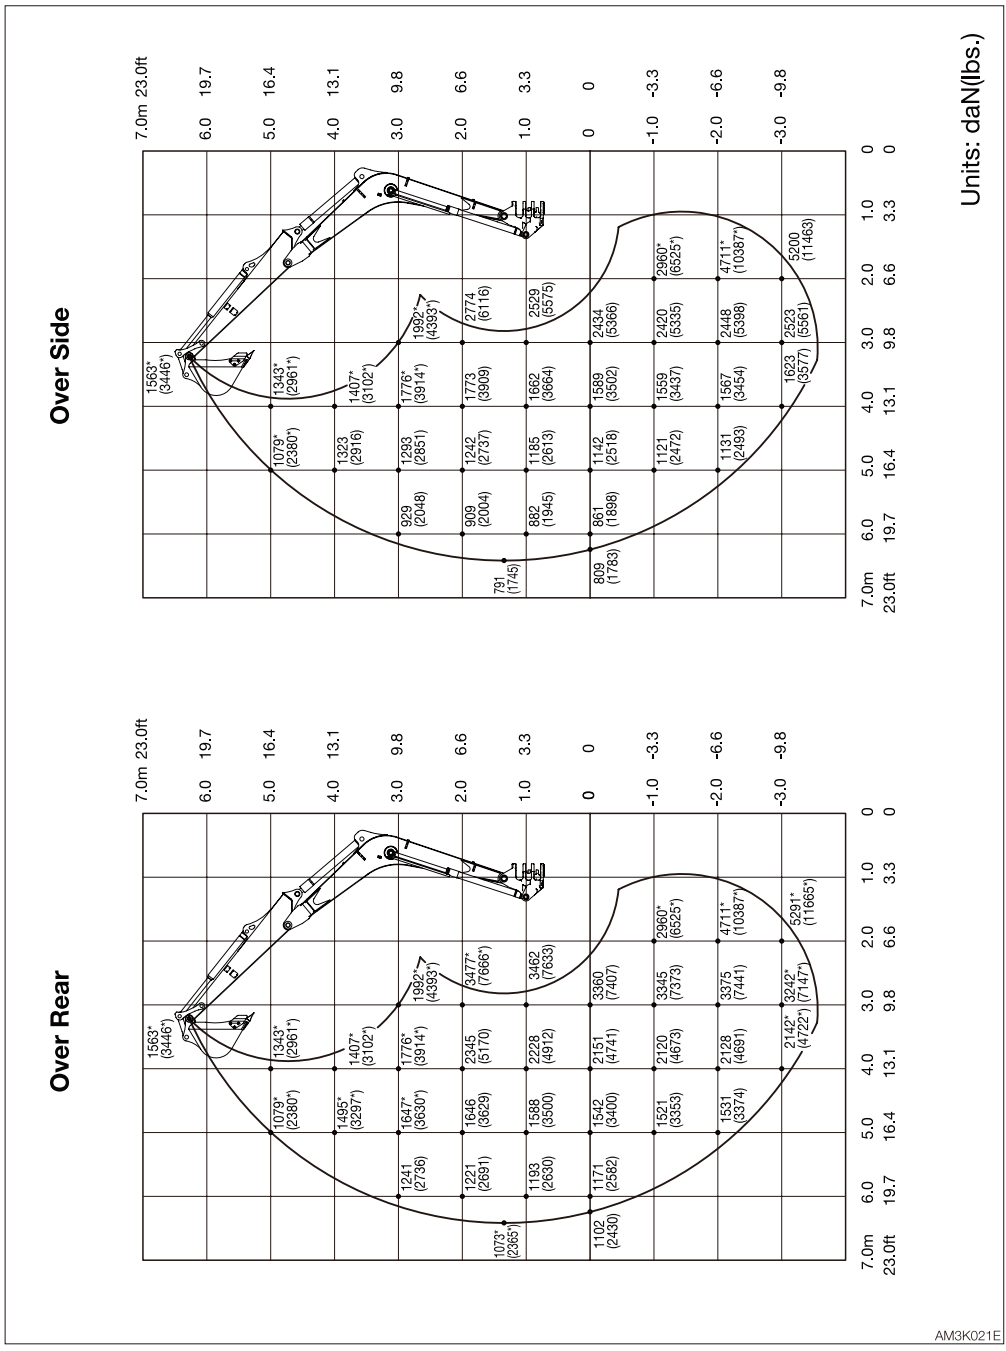

2-Piece boom (One cylinder) (Equipped with Extra weight) Rubber crawlers


Over Front ; Dozer Blade Up

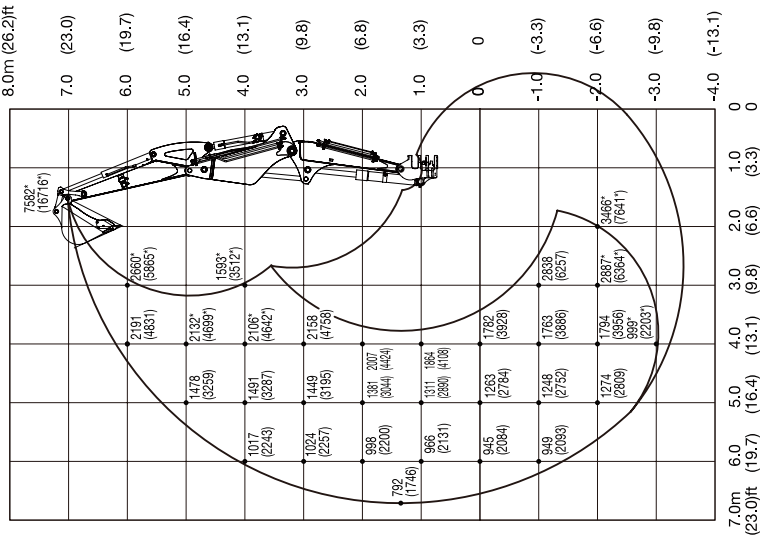

Units: daN(lbs.)


AM3K022E

2-Piece boom (One cylinder) (Equipped with Extra weight) Rubber crawlers

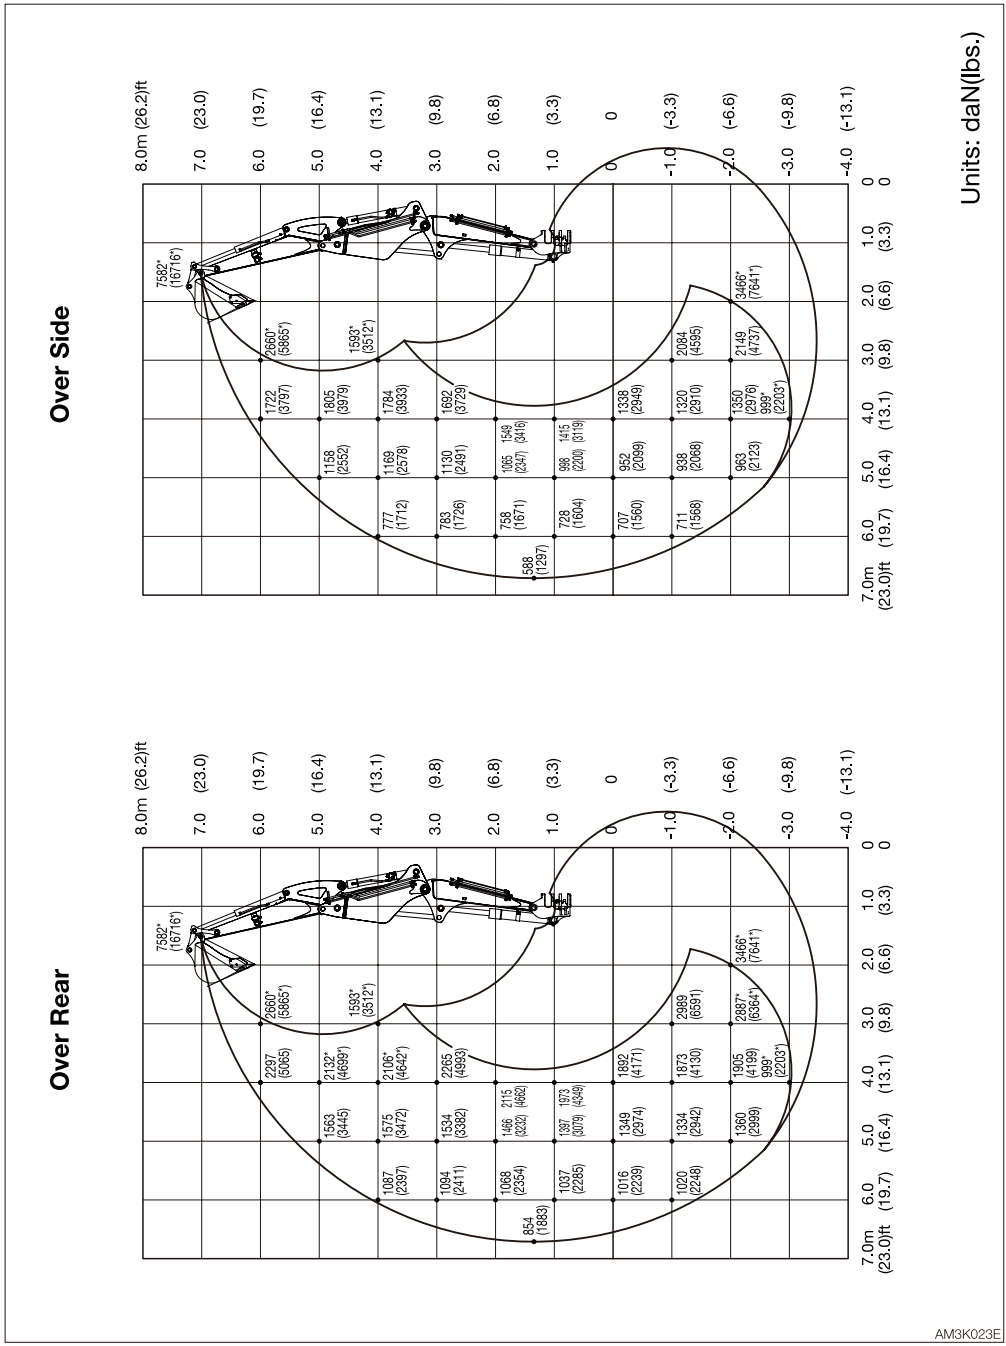

2-Piece boom (One cylinder) (Equipped with Extra weight) Steel crawlers


Over Front ; Dozer Blade Up

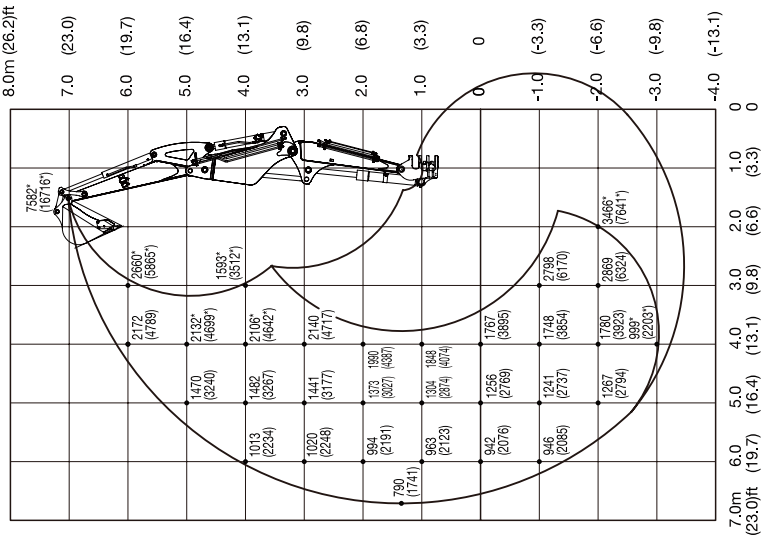

Units: daN(lbs.)


AM3K024E

2-Piece boom (One cylinder) (Equipped with Extra weight) Steel crawlers

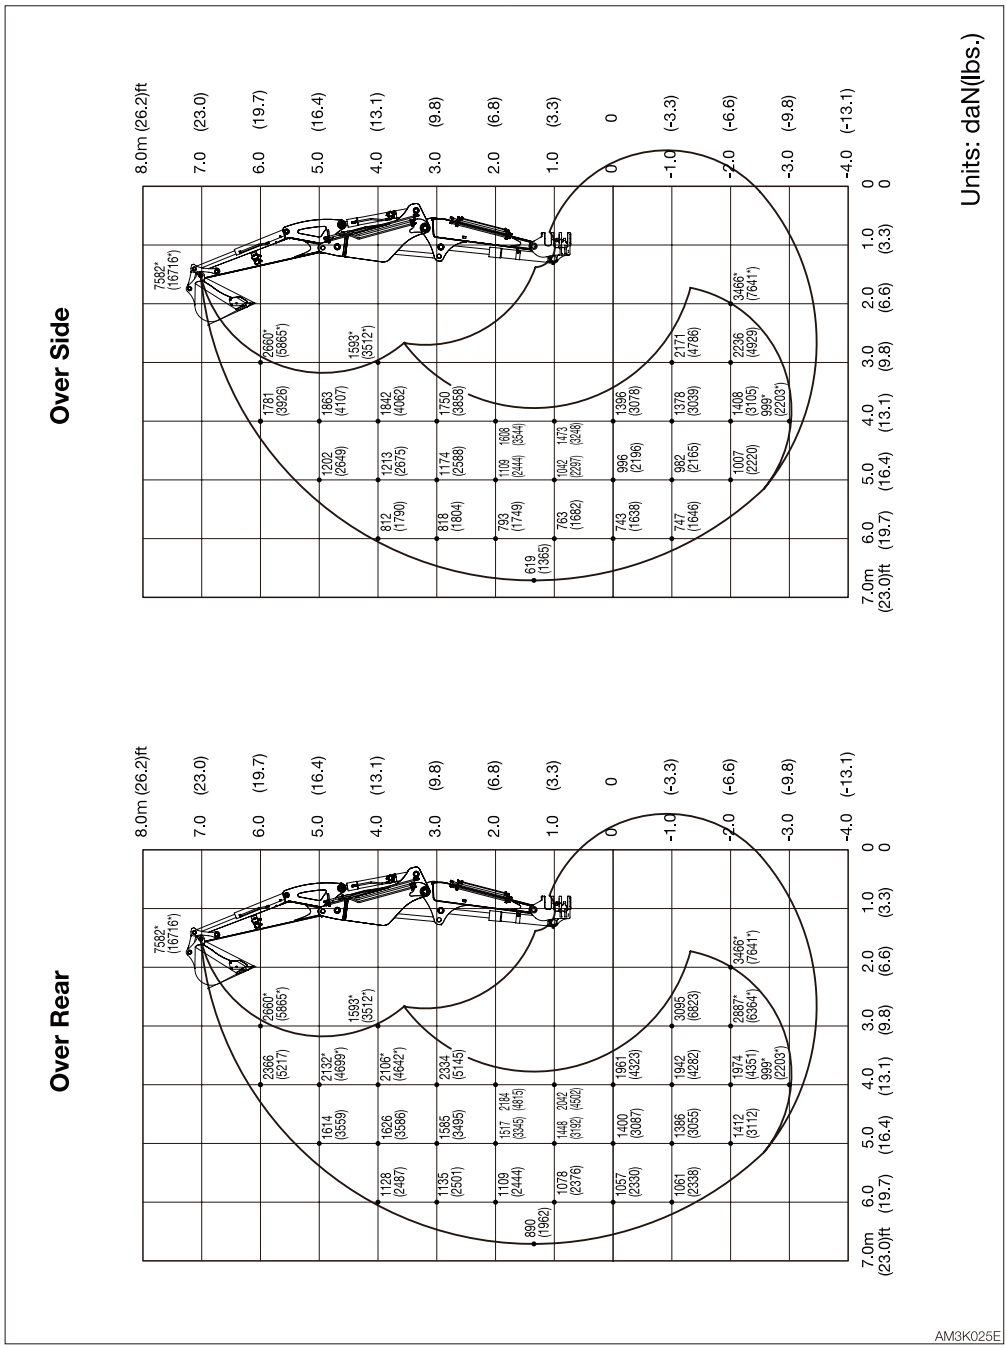

2-Piece boom (Two cylinders) Rubber crawlers


Over Front ; Dozer Blade Up

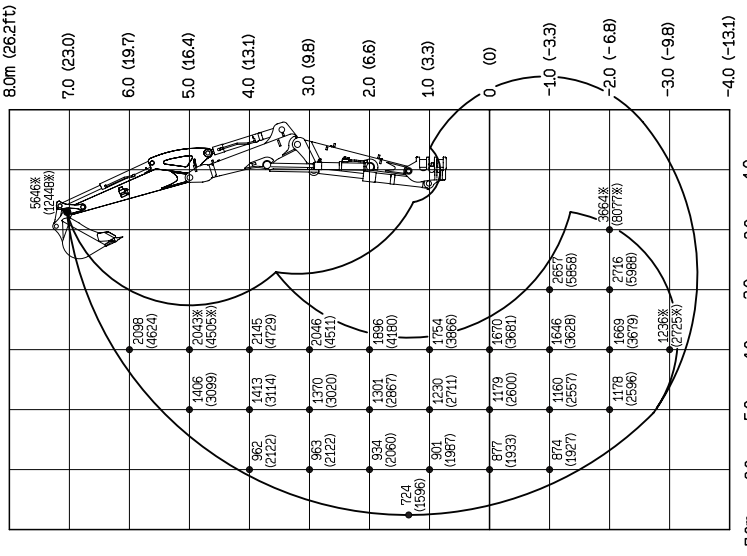

Units: daN(lbs.)


AM3K028E

2-Piece boom (Two cylinders) Rubber crawler

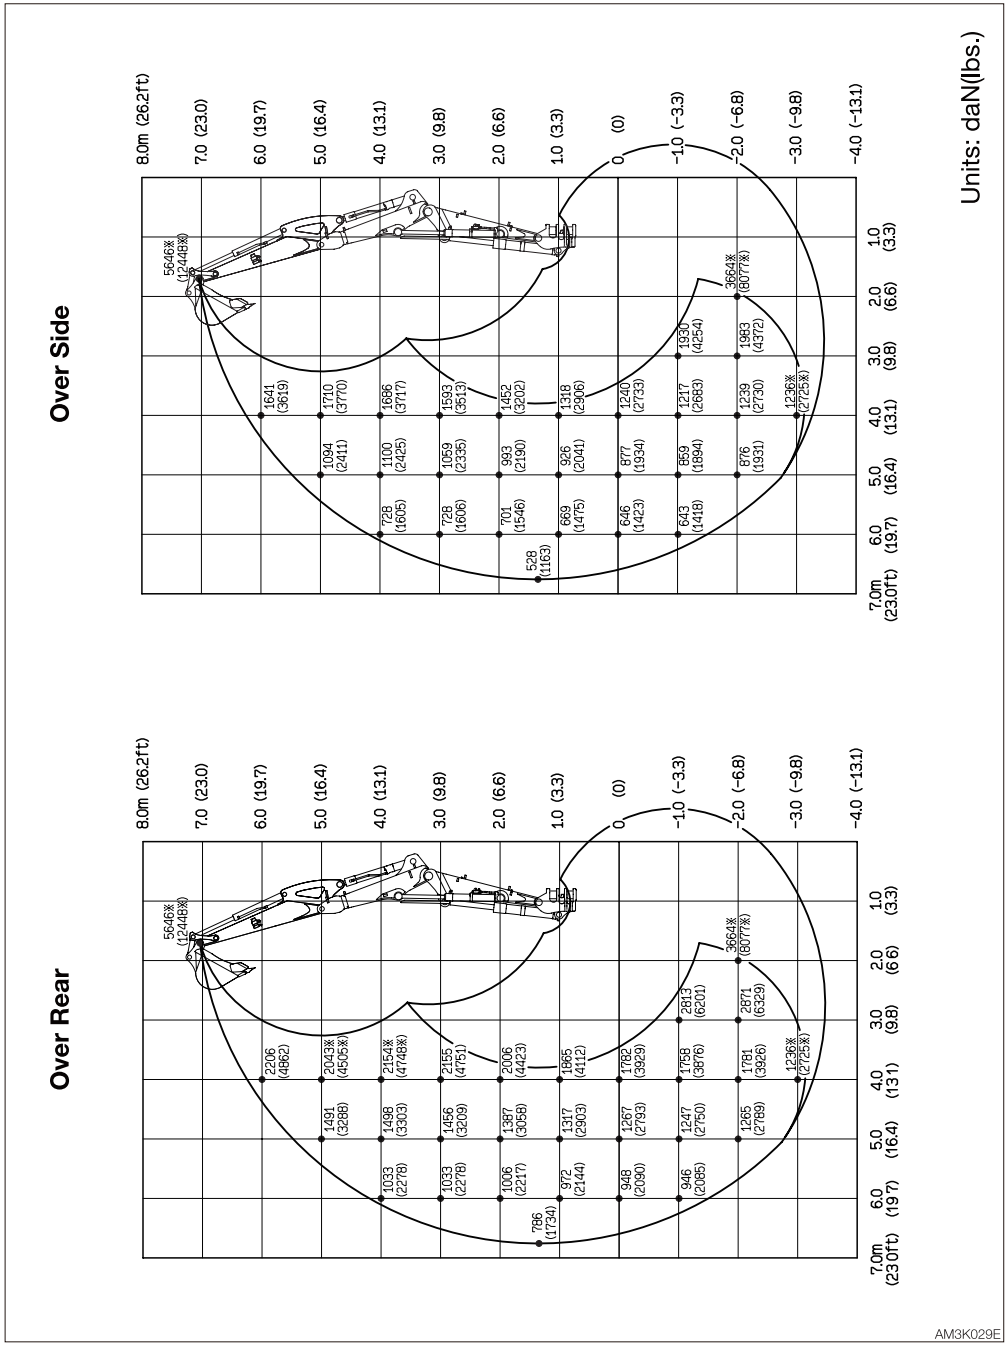

2-Piece boom (Two cylinders) (Equipped with Extra weight) Rubber crawlers


Over Front ; Dozer Blade Up

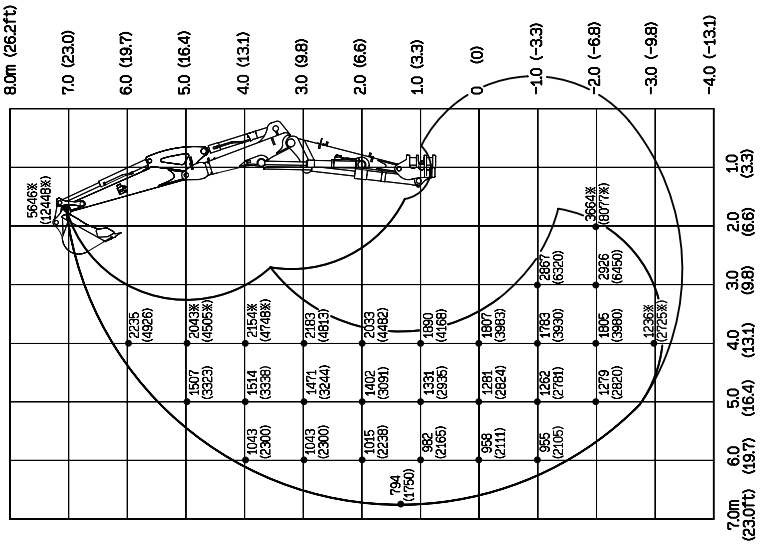

Units: daN(lbs.)

AM3K030E


2-Piece boom (Two cylinders) (Equipped with Extra weight) Rubber crawler

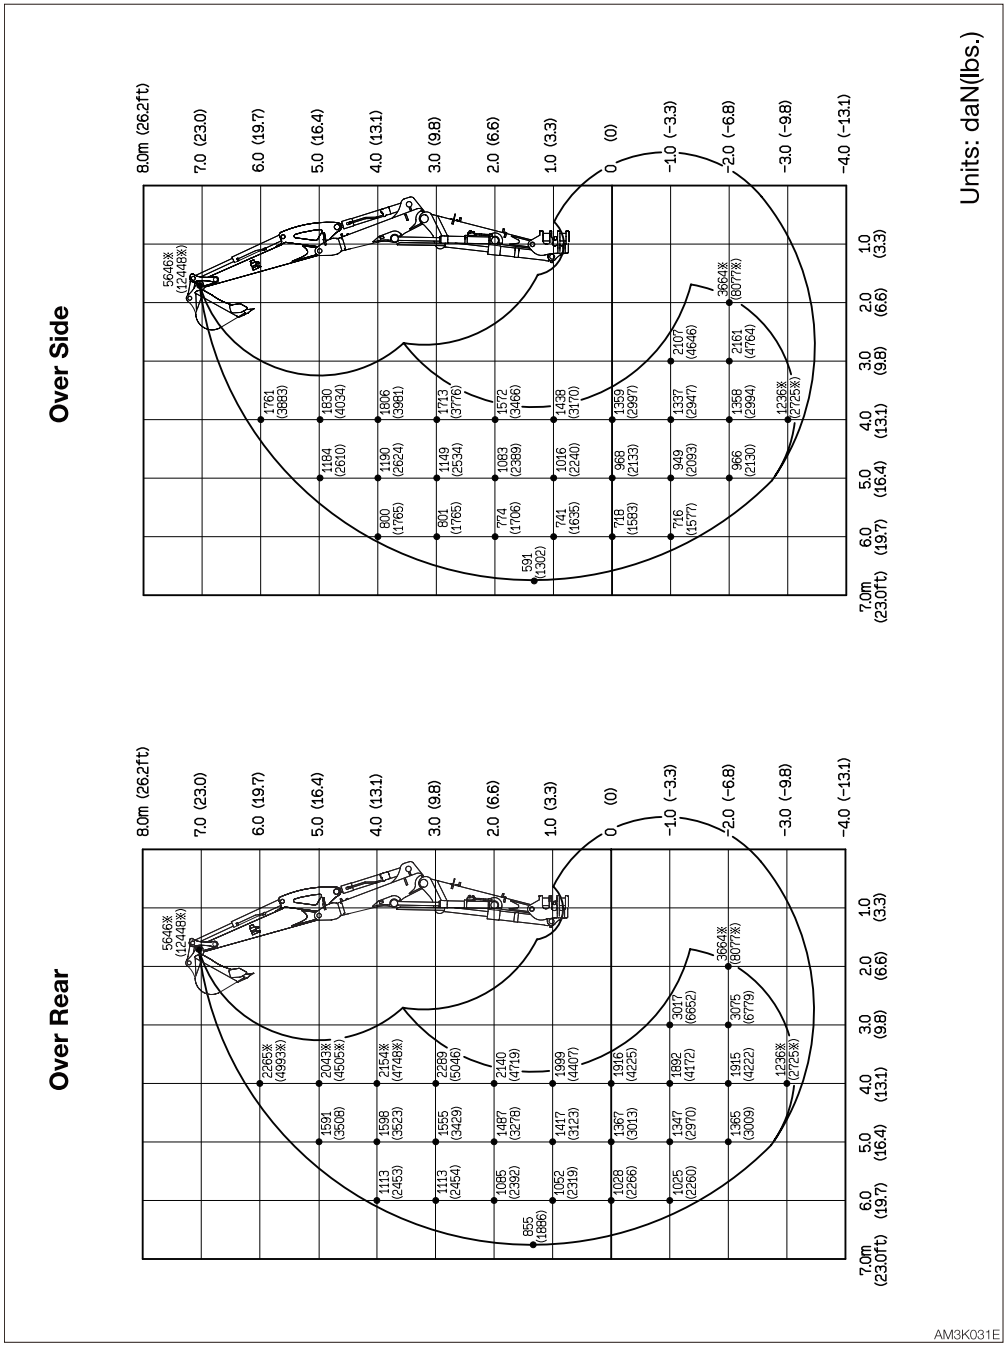

AM3K031E

2-Piece boom (Two cylinders) (Equipped with Extra weight) Steel crawlers


Over Front ; Dozer Blade Up

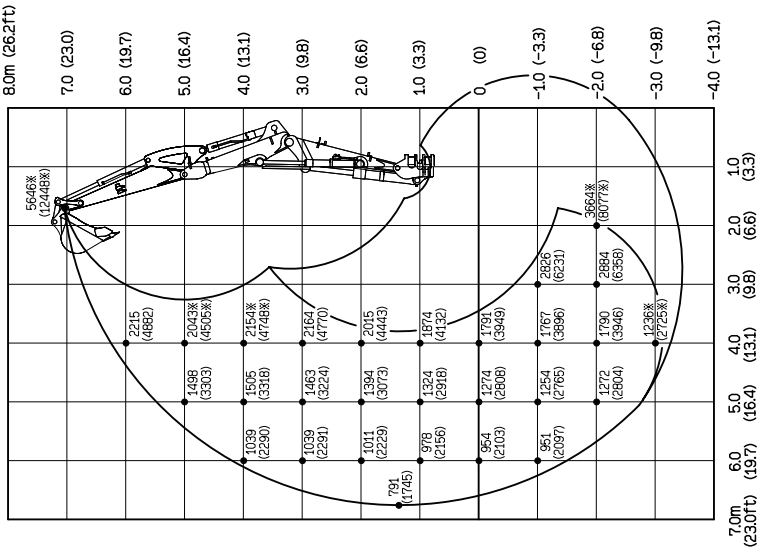

Units: daN(lbs.)

AM3K032E

2-Piece boom (Two cylinders) (Equipped with Extra weight) Steel crawlers

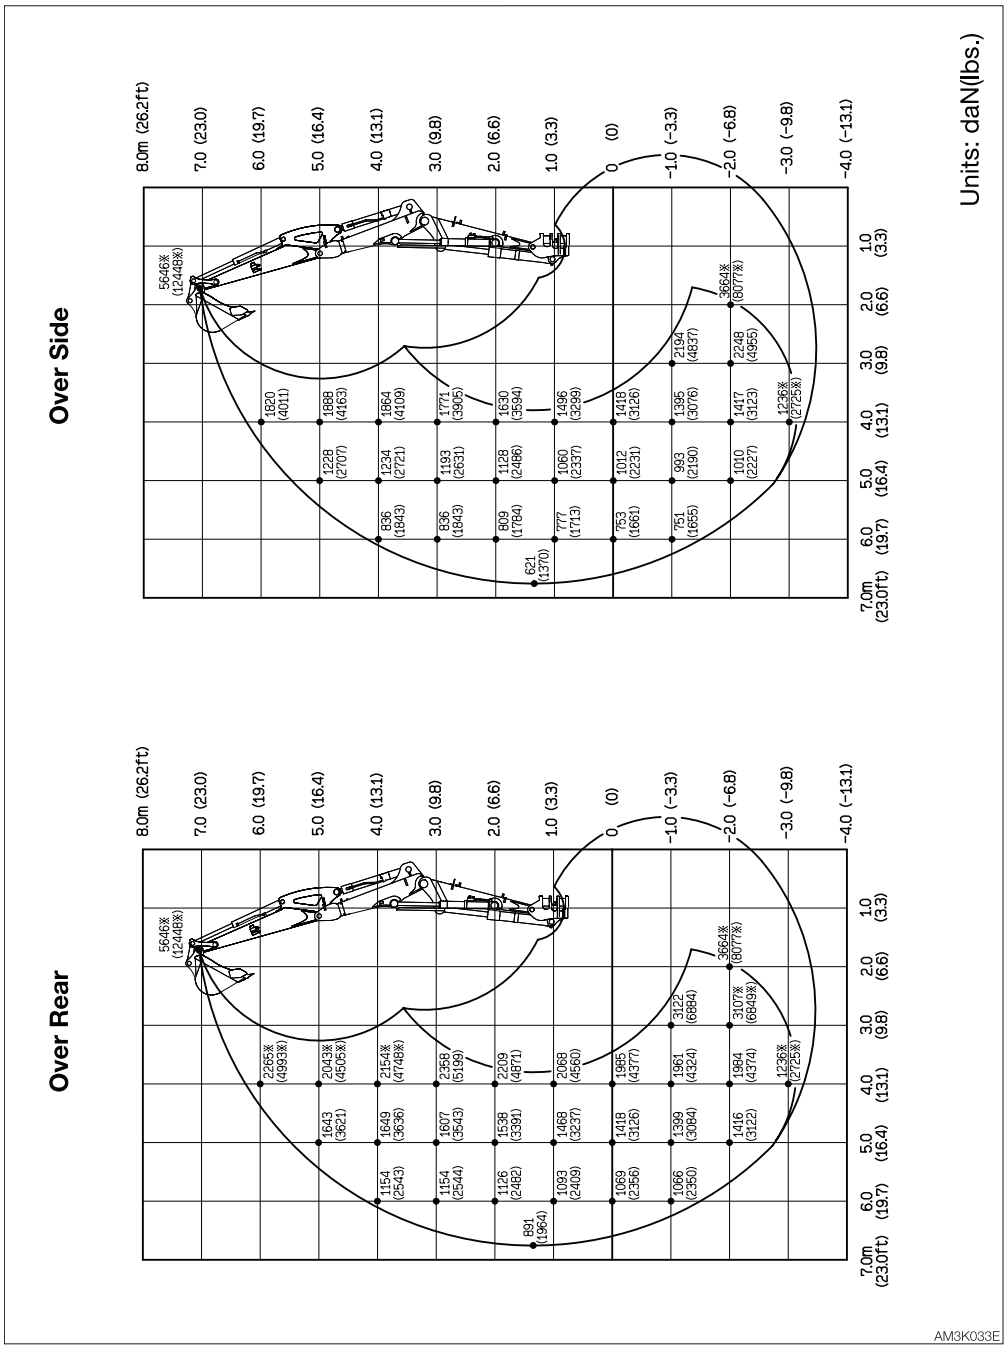

OPTIONS

GENERAL PRECAUTIONS

SAFETY PRECAUTIONS

⚠ WARNING

When removing or installing an attachment or optional part, take the following precautions.

- Consult with Takeuchi before installing an optional attachment.
- Do not use any attachments not approved by Takeuchi. Doing so may cause safety problems. Or, it may adversely affect the machine's operation or service life.
- We will not be held responsible for any injuries, accidents or damage to its products caused by the use by a non-approved attachment.
- Select a firm, level work area. Also, be sure to park in a well ventilated place.
- Clear obstacles and dangerous objects, and clean up spilled fuel immediately.
- When hoisting, be sure to designate a person to act as a signalman. Follow the instructions of the signalman regarding the procedure and measures.
- When it is necessary to temporally place a heavy object or an attachment on the ground during removal or installation, be sure to place it in a stable position.
- Keep everyone out of the area when hoisting. There is a hazard of objects falling or contacting with people in the area.
- Use a crane to move heavy objects (25 kg (55 lb.) or greater).
- Before removing a heavy object, be sure to put a support to it. When lifting with a crane, pay attention to the center of gravity of the load to keep the machine in balance.
- Do not operate the machine while the load is lifted by a crane stand.
- Use the proper procedure when mounting a boom or arm; otherwise serious damage could result. Consult your sales or service dealer for help.


CAUTIONS WHEN INSTALLING ATTACHMENTS

Be sure to perform a test operation after an optional or other special attachment has been replaced. Inspect the hydraulic oil level and recharge it as necessary. Consult your sales or service dealer for detailed procedures on installing/removing attachments.

CAUTIONS WHEN OPERATING ATTACHMENTS

⚠ WARNING


Long attachments reduce stability of the machine. The machine may tip over if it loses the balance when traveling or slewing on slopes.
Never perform the operations listed below as they are extremely dangerous.

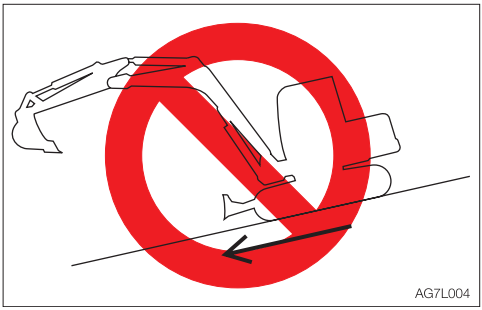

- Traveling down the slopes with the attachment raised



- Traveling across slopes

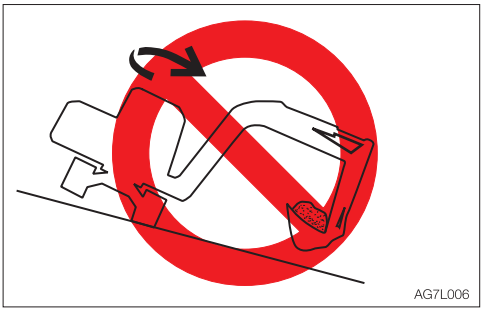

- Slewing on slopes
- If there is a heavy attachment is installed, the machine takes longer distance than usual to come to a complete stop when the stopping operation is performed. Carefully judge the distance so as not to bump into an object around the machine. Keep a safe distance from surrounding obstacles. When a heavy attachment is installed, natural drop (the gradual dropping of the attachment under its own weight when it is stopped in midair) increases.
- The machine can tip over more easily in the lateral direction than in the longitudinal direction.
  - Do not slew sideways with a heavy load at the how attachment. In particular, do not slew sideways on slopes.
  - The attachment is heavier for machines equipped with breakers or crushers than for machines equipped with the standard bucket. Do not operate such machines sideways, especially digging downhill.
- When a long arm is installed, the operating range increases. Carefully judge the distance so as not to bump into an object around the machine. Keep a safe distance from surrounding obstacles.

ATTACHMENT COMBINATION TABLE

The table below shows which bucket should be installed when the machine is using a standard arm, middle arm or long arm. Select a proper bucket by following the table.

⚠ WARNING

- **Consult with Takeuchi before installing an optional attachment.**
- **Do not use any attachments not approved by Takeuchi. Doing so may cause safety problems. Or, it may adversely affect the machine's operation or service life.**
- **We will not be held responsible for any injuries, accidents or damage to its products caused by the use by a non-approved attachment.**
- **The swing stopper must be installed when a bucket wider than a 750W (standard) bucket is installed. Failure to do so may result in the bucket hitting the machine body.**
- **Install the extra weight (standard) or wide width steel crawler if the long arm or middle arm is installed.**

√ :Can be used.
Δ :Can be used only for light operations (digging and loading of dry and loose soil or mud)
— :Cannot be used.
Total bucket mass = Bucket mass + Heaped bucket load (specific gravity: 1.8)


Bucket	Rated capacity m^3 (cu.yd.)	Bucket cutting width mm (inch)	Standard arm 1780 mm (70 in.)	Middle arm 1960 mm (77 in.)	Long arm 2130 mm (84 in.)
430W (no side cutter)	0.14 (0.18)	430 (16.9)	√	√	√
500 W	0.14 (0.18)	500 (19.7)	√	√	√
650 W	0.20 (0.26)	650 (25.6)	√	√	√
750 W (S.T.D.)	0.25 (0.33)	750 (29.5)	√	√	—
3-hole bucket	0.26 (0.34)	610 (24.0)	√	—	—
Total bucket mass = Within 657 kg (1448 lb.)		Within 750 (29.5)	√	—	—
Hydraulic Breaker (TKB-401)			√	—	—

SELECTING A LEVER PATTERN


The operating pattern of the left and right operating levers can be changed.

⚠ WARNING

Before starting the engine, check the selector to see which operating pattern the left and right operating levers are set.

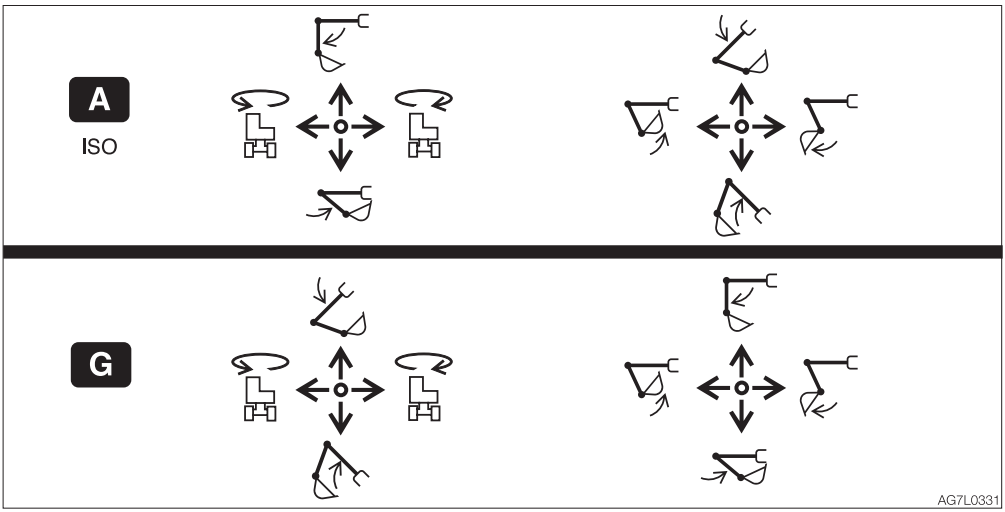

SWITCHING THE LEVER PATTERN

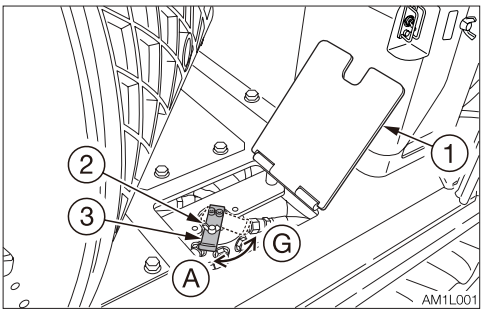

(A) : ISO pattern
(G) : G pattern


1. Park the machine on a flat and rigid ground, and stop the engine.
2. Fully open the cab door and fix it in place.
3. Remove the floor mat.
4. Open the cover (1).
5. Loosen the wing bolt (2).
6. Turn the selector valve lever (3) to change the pattern.
7. Tighten the wing bolt (2) and fasten the lever (3) in place.
8. Close the cover (1) and return the floor mat back in place.
9. Confirm the lever pattern.

HYDRAULIC BREAKER


For handling of the breaker, read the hydraulic breaker's manual, provided separately.

IMPORTANT: When installing an attachment, make sure that it is appropriate for the machine being used. Contact your sales or service dealer for advice on selecting attachments.


CAUTIONS ON OPERATING

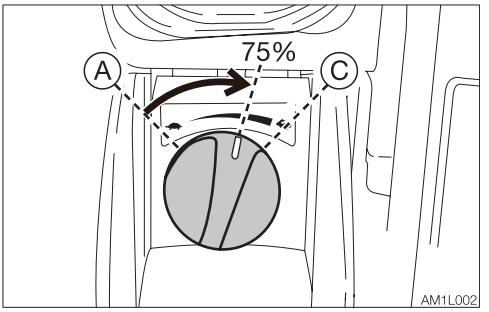


- Start the engine and run it at 75% of the maximum speed.

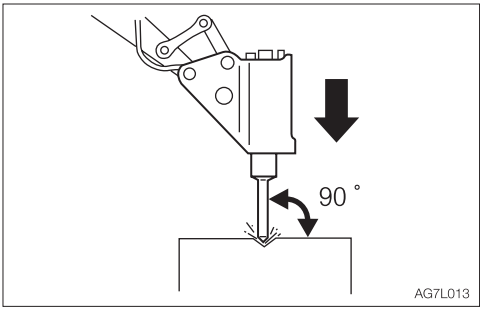


- Pound with the chisel pressed perpendicular to the surface to be pounded.
- When pounding, press the chisel properly against the object to be broken so as to avoid pounding the air.

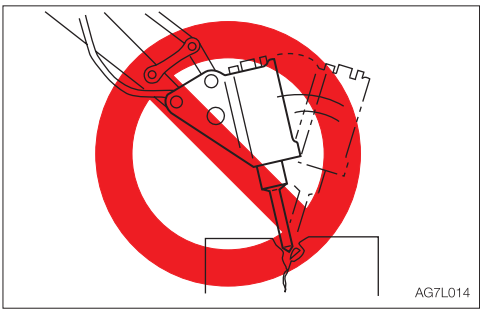


- Do not pry with the chisel or do not pry while pounding.
- Do not move the chisel while pounding.
- Do not pound continuously for over 30 seconds on the same surface.

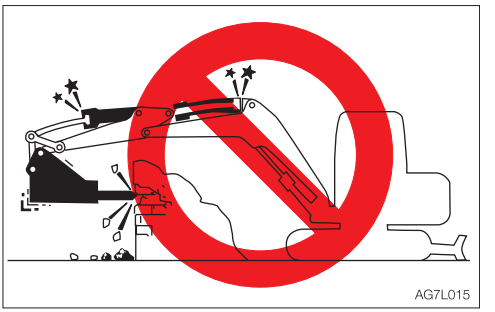

- Do not pound with the cylinder fully extended or retracted (at the stroke end). Leave a margin of at least 50mm(2 in).

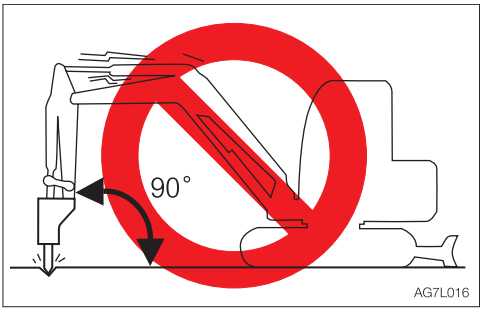

- Do not pound with the arm placed perpendicular to the ground surface.

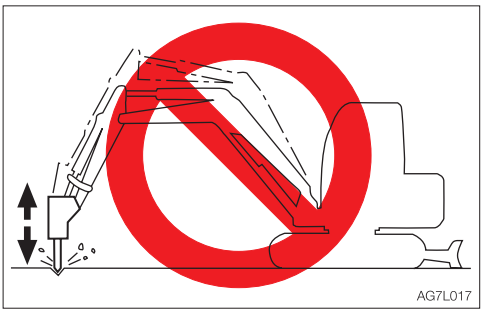

- Do not drop the breaker itself on the object to be broken in order to break it.
- Do not move objects to be broken or rocks with the breaker itself.
- Slew the machine occasionally to cool the engine.
- If a hydraulic hose is vibrating abnormally, nitrogen gas may be leaking from the accumulator. Ask for an inspection early.

REPLACING THE HYDRAULIC OIL REGULARLY


When a hydraulic breaker is used, the oil deteriorates more quickly than that used for a usual operation. Be sure to replace the hydraulic oil and the return filter elements.

- Failure to replace these in time can lead to damage to the machine and the breaker hydraulic system. To improve the service life of the hydraulic systems, be sure to replace the hydraulic oil and return filter element after the number of hours shown on the diagram below.
- When replacing the hydraulic oil, clean the suction strainer.

Replacement interval (hours)

Item	Hydraulic oil	Filter element
1st time	—	25
2nd time	—	100
Periodically	1200 (600)	200

When the breaker operating ratio is 100%.

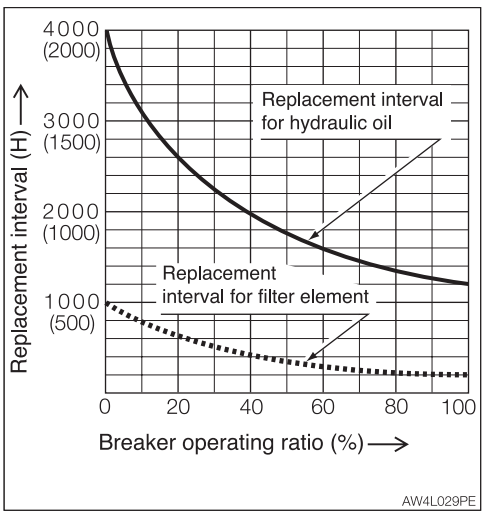

( ): When using conventional antiwear hydraulic oil.


TRAVEL ALARM

The alarm sounds while the machine is traveling and stops when the machine stops traveling.
If the alarm does not sound when the machine travels, the fuse may be blown. Inspect the fuses.


⚠ WARNING

If the fuse blows again soon after replacement, then the electric system is likely faulty. It may pose a fire hazard if not properly repaired. Contact your sales or service dealer for advice.

1. Turn the starter key to the OFF position to stop the engine.

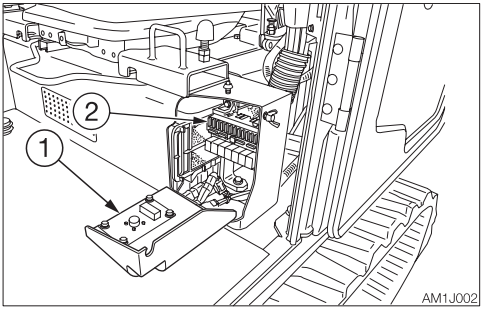

2. Open the fuse box cover (1).
3. Check for any blown fuses (2).

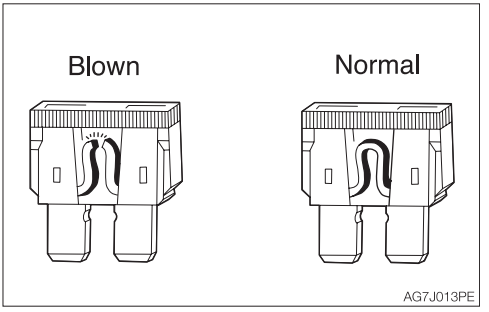

4. If a fuse is blown, replace it with a spare fuse of the same capacity.

Fuse layout and circuits protected

Capacity	Symbol	Protected circuit
25A		Light
10A		Wiper
20A		Lever lock
15A	CTL	Controller power supply **Travel alarm**
20A	CTL (OX)	OX controller power supply
25A	CAB	Cab interior power supply
25A	OPT(1)	Option (1)
20A	OPT(2)	Option (2)
10A		Air conditioner compressor
5A		AC motor
10A		Immobilizer
25A		Air conditioner blower motor

Capacity	Symbol	Protected circuit
25A	CAB	Cab light
5A		Switch lighting
10A		Horn
5A* 10A** 15A***		Starter switch

*: Applicable machine models 185100001 to 185104995
**: Applicable machine models 185104996 or later
***: Applicable machine models 190200001 or later

OPTIONAL EQUIPMENT MASS

Standard machine mass kg (lb.) (Not including operator)		Applicable machine models 185100001 or later	Applicable machine models 190200001 or later
		Rubber crawlers	Rubber crawlers
		8325 (18355)	8350 (18410)
OPTION			
Steel crawler, 450-mm width		235 (520)	
Steel crawler, 550-mm width		356 (785)	
Segmental rubber crawler		266 (585)	
Shoe guide		18 (40)	
Center guide		21 (46)	
Step		6 (15)	
Wide width blade		7 (15)	
Angle blade		150 (330)	
Extra weight		190 (423)	
Air suspension seat		19 (40)	
Middle arm		15 (35)	
Long arm		29 (65)	
Long arm (With thumb bracket)		35 (75)	
Arm emergency shut-off valve		4 (10)	
Auxiliary hydraulic lines	Auxiliary 3rd	17 (35)	
	Auxiliary 3rd + Auxiliary 4th.	32 (70)	
Dozer blade with float		5 (10)	
Roof guard (Level II: ISO 10262)		55 (120)	
Front guard (Level II: ISO 10262)		60 (130)	

Units: kg (lb)

*: Mass of optional equipment is added to the standard machine mass.
*: This table only contains the optional equipment of 10kg (20lb) or more in mass.

BIODEGRADABLE OIL

Biodegradable oil is a new type of hydraulic oil that is decomposed into carbon dioxide and water by microorganisms in the soil and water. It is highly safe for living organisms and offers advantages in term of environmental protection.

- Recommended biodegradable oil: Mobile EAL Envirosyn 46H (an ester synthetic oil). When replacing the hydraulic oil with biodegradable oil, use the above or an equivalent oil.
  Note that other oils, even other brands of ester synthetic oils, may damage O-rings, packings and seals. Takeuchi products shipped with the optional biodegradable oil are shipped with the above brand of oil.
- When switching from a mineral oil to a biodegradable oil, the parking brake torque decreases by about 30%.

REPLACING THE HYDRAULIC OIL WITH BIODEGRADABLE OIL

Mixing mineral oil with biodegradable oil will result in a decrease of the hydraulic oil's performance as well as a decrease in biodegradability and safety. The hydraulic oil system must be flushed as described below before supplying the biodegradable oil. This operation is dangerous and requires experience. Have it performed by a Takeuchi sales or service outlet.


Flushing

To be performed by a Takeuchi sales or service outlet

1. Drain the hydraulic oil (mineral oil) from the hydraulic oil tank and clean the inside of the tank and suction strainer.
   Refer to "Replacing the hydraulic oil and cleaning the suction strainer".
2. Remove the cylinder hoses and drain the hydraulic oil (mineral oil) from inside the cylinders.
3. Supply new biodegradable oil to the hydraulic oil tank.
4. Bleed the air from the hydraulic oil system.
5. Operate the hydraulic devices for 30 minutes.
6. Drain the biodegradable oil from the tank and cylinders.
7. Replace the hydraulic oil return filter with a new filter.
8. Repeat steps 3 and 4.
9. Operate the hydraulic devices for 30 minutes.
10. Drain the biodegradable oil from the tank and cylinders.
11. Repeat steps 3 and 4.
12. Operate the hydraulic devices for 1 hour.
13. Drain the biodegradable oil from the tank and cylinders.
14. Replace the return filter with a new filter.
15. Repeat steps 3 and 4.
16. Operate the hydraulic devices, then check for oil leakage.

There is no need to flush the hydraulic oil system when switching from biodegradable to mineral hydraulic oil.

CAB OPTIONS

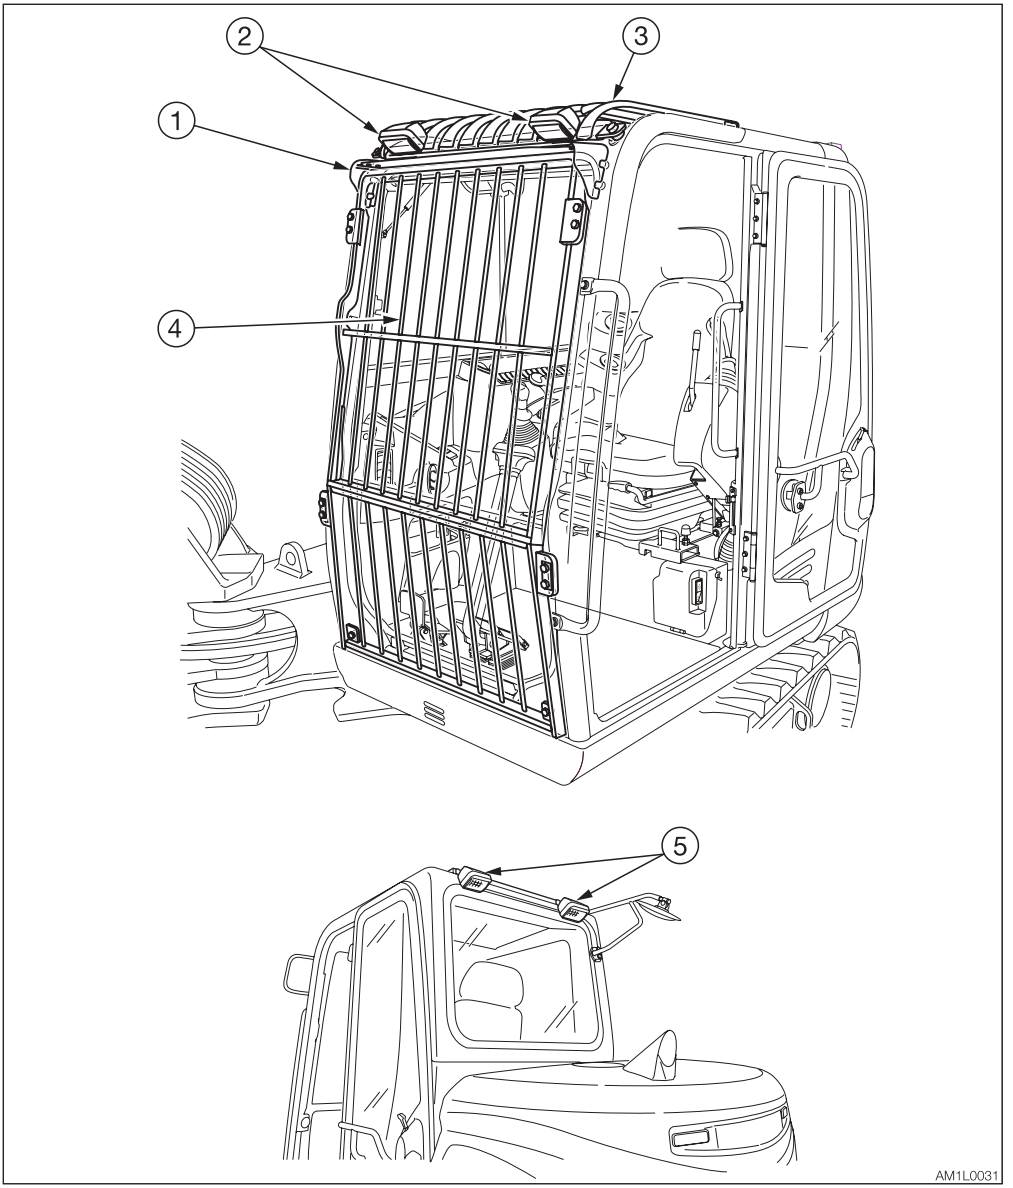

1. Rain guard
2. Front light
3. Roof guard (Level II: ISO 10262)
4. Front guard (Level II: ISO 10262)
5. Rear light

ANGLE DOZER BLADE


⚠ WARNING


- **Do not press the float button while the machine is raised by the dozer blade. Doing so will cause the machine to fall. If you must work beneath the raised machine, always use a secure support to keep the machine raised.**
- **Do not press the float button while the dozer blade is raised. Doing so will cause the dozer blade to fall. Lower the dozer blade to the ground before pressing the float button.**
- **Do not travel forward while the dozer blade is in the float mode.**

IMPORTANT: Do not raise the machine by using the angled dozer blade. Or, the dozer blade may be damaged due to the load concentrated onto a point on the dozer blade.

This dozer blade can be angled (to 25° right or left). Also, it can be used in the float mode.

Angle operation

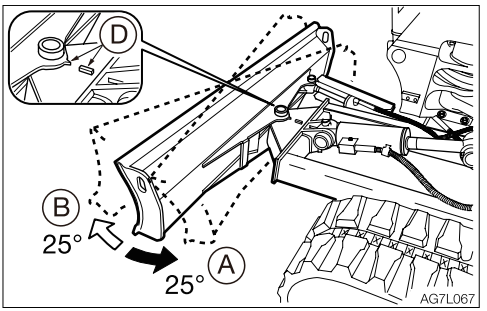

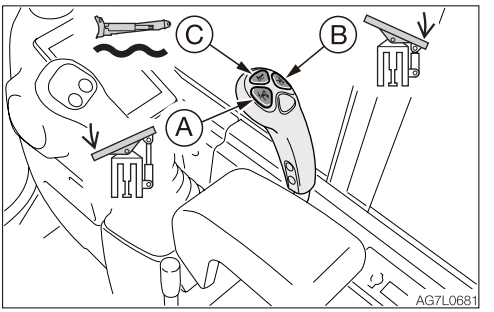


Button (A) .....Left angle (0 to 25°)
Button (B) .....Right angle (0 to 25°)
The dozer blade angle is increased/decreased between 0 and 25° as long as the button is pressed.
To position the dozer blade at a right angle, align the matching marks (D) as shown in the figure.

Float operation


Button (C).....Float mode
To cancel the float mode, press the button again.

Daily inspection (every 10 hours)
Lubricating

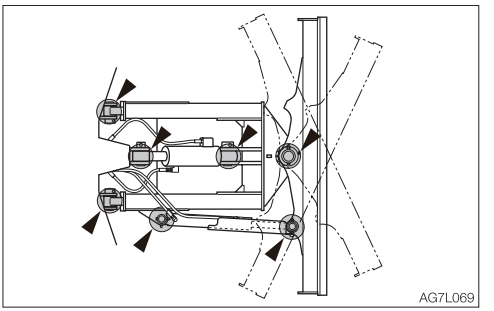

1. Lower the working equipment to the ground and stop the engine.
2. Use the grease gun to lubricate the grease fitting.
3. Wipe off the excess grease.

SPECIFICATIONS

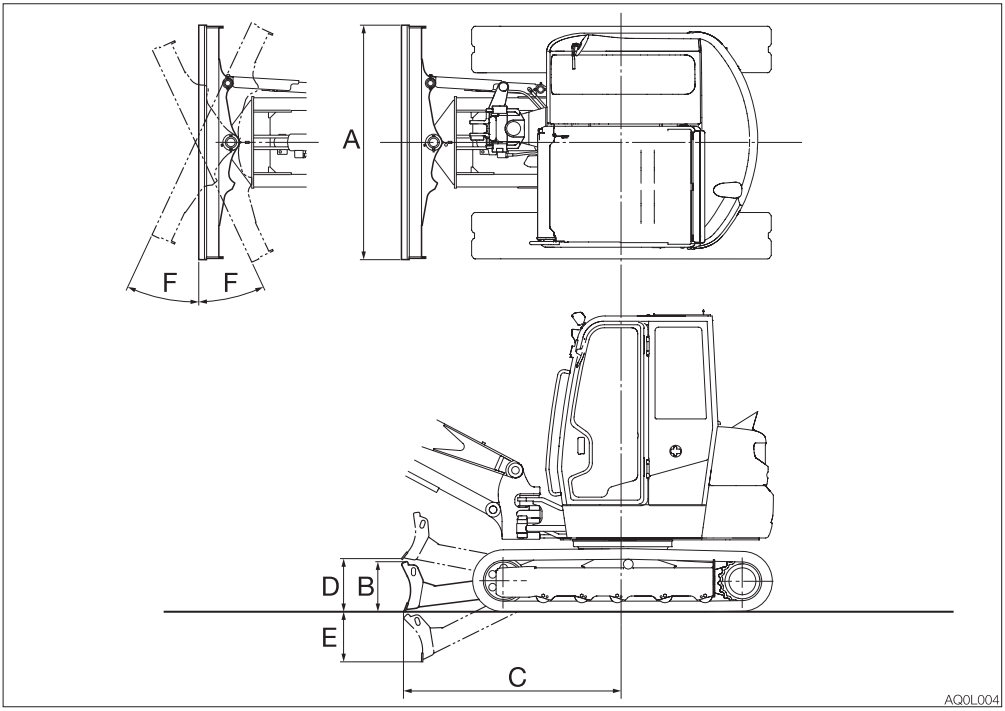


	Item	Rubber crawlers
A	Dozer blade width	2300 (90.6)
B	Dozer blade height	500 (19.7)
C	Dozer blade distance to axis of rotation	2165 (85.3)
D	Dozer blade maximum lifting	510 (20.1)
E	Dozer blade maximum lowering	570 (22.4)
F	Angle degree (Left/Right)	25°

Unit: mm (inch)

OPERATING LEVER SWITCH KIT 1

HORN BUTTON

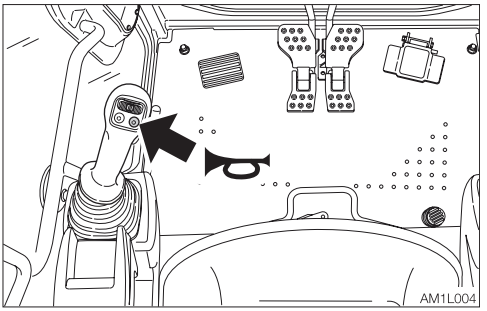


Press the button situated on the left operating lever to blow the horn.

DECELERATION BUTTON

⚠ WARNING

Before operating the deceleration button, set the operating lever to the neutral position and take your foot off the pedals. If the deceleration button is pressed while driving, the machine's operating speed will abruptly change to result in a dangerous situation.

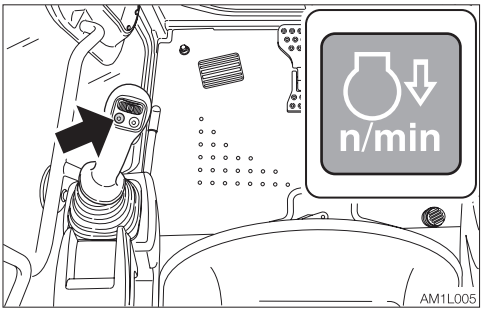


Press this button on the left operating lever to lower the engine speed to low idling. Press the button again to return to the engine speed set with the throttle controller. For safety reasons, it is designed that the deceleration function is activated to set the engine revolutions to low idling whenever the engine is started.
Cancel the deceleration mode by pressing the deceleration button as necessary.

Note: This deceleration button is capable of decreasing the engine speed and reducing the fuel consumption, with a simple operation, in a situation such as when little engine output is required and thus the operating or the travel levers are in neutral.

TRAVEL SPEED BUTTON

⚠ WARNING


When a load greater than a set value is applied during traveling in 2nd (high) speed, the speed will automatically slow down to 1st (low) speed. When the load becomes lighter, the speed will increase and return to 2nd (high) speed. It should be noted that the travel speed changes depending on the load condition (for machines with the automatic travel shift-down system).

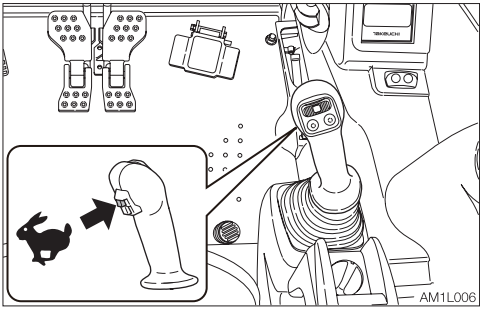

Press this switch to set the travel speed to 2nd (high) speed. Press it again to return to 1st (low) speed.

AUXILIARY 1ST SWITCHES

Auxiliary hydraulic buttons

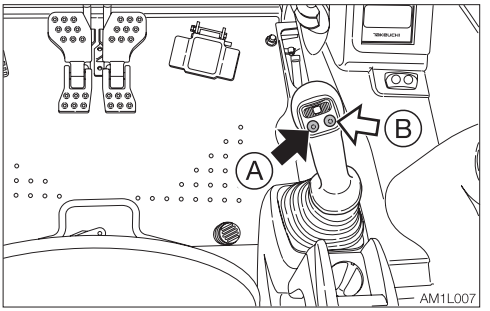


Press those buttons to control the flow of the oil in the first auxiliary hydraulic lines.
- Proportional control of the auxiliary hydraulic circuit is not possible.

(A).....Hydraulic oil flows to the left auxiliary line (a).
(B) .....Hydraulic oil flows to the right auxiliary line (b).

Slider switch
(Proportional control)

Proportional control allows for slow-to-fast/ fast-to-slow movement of attachment.
Example: If you move the slider switch half way, the attachment will move at approximately one-half the speed.

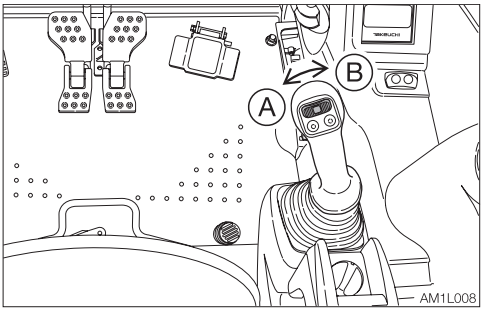


Move this switch to control the flow of the oil in the first auxiliary hydraulic lines.
(A).....Hydraulic oil flows to the left auxiliary line (a).
(B) .....Hydraulic oil flows to the right auxiliary line (b).

Refer to “Auxiliary hydraulic lines” on pages 2-76 to 2-81.


AUXILIARY 2ND/4TH SWITCH

Slider switch
(Proportional control)

Proportional control allows for slow-to-fast/ fast-to-slow movement of attachment.
Example: If you move the slider switch half way, the attachment will move at approximately one-half the speed.

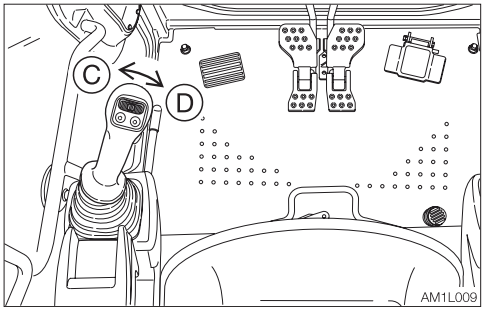


Move this switch to control the flow of the oil in the second auxiliary hydraulic lines.
(C): .....Hydraulic oil flows to the left auxiliary line (c).
(D): .....Hydraulic oil flows to the right auxiliary line (d).

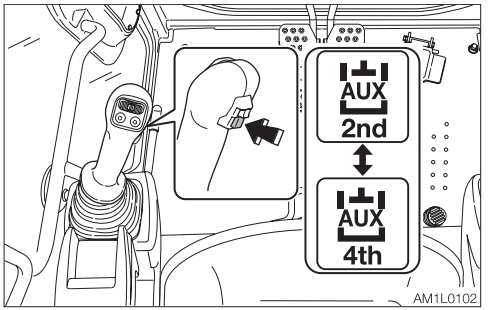

To use the auxiliary 4th hydraulic line, press the auxiliary 2/4 select button to change to the operation of the auxiliary 4th.
Refer to “Auxiliary hydraulic lines” on pages 2-76 to 2-81.

AUXILIARY 2/4 SELECT BUTTON

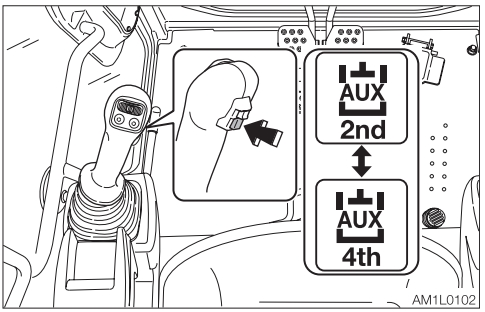


This switch is used to change from the second auxiliary operation to the fourth auxiliary operation.
Pressing this button displays the second auxiliary on the Multi-information display to indicate that the second auxiliary operation is enabled. Pressing this button again displays the auxiliary 4th on the Multi-information display to indicate that the auxiliary 4th operation is enabled.
The actual operation is performed with the auxiliary 2nd/4th switch (slider switch).


SWING/SECOND BOOM SELECT BUTTON

⚠ WARNING

Pressing (switching ON or OFF) the selector button while the boom swing pedal is depressed is dangerous, since the attachment will move unexpectedly. Always set the boom swing pedal back to the neutral position before operating the selector button.

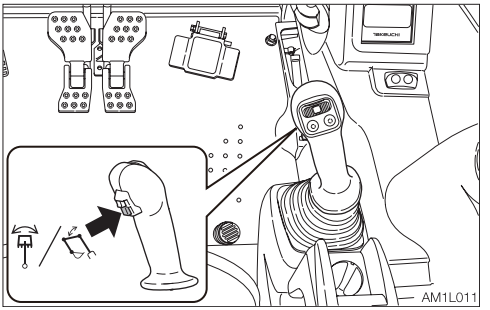

This button changes from the boom swing operation to the second boom operation. Press this button to change over to operation of the second boom. The second boom operation indicator lamp will light. One more press of this button will result in a return to boom swing operation. Actual operation is performed with the boom swing pedal.

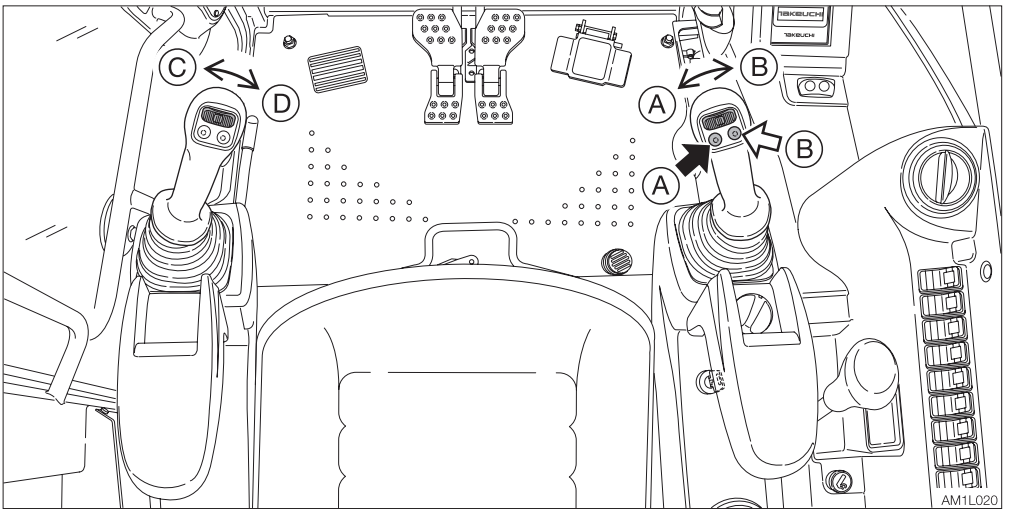

Operating

Press those buttons to control the flow of the oil in the first/second auxiliary hydraulic lines.

(A).....Hydraulic oil flows to left auxiliary line (a).

(B) .....Hydraulic oil flows to right auxiliary line (b).

(C) .....Hydraulic oil flows to left auxiliary line (c).

(D) .....Hydraulic oil flows to right auxiliary line (d).

Refer to “Auxiliary hydraulic lines” on pages 2-76 to 2-81.

Releasing the residual pressure

After the auxiliary hydraulic circuits have been used, pressure remains in the circuits. This is called the residual pressure. Release this residual pressure before disconnecting the lines.


Perform the residual pressure releasing within 10 minutes after the engine stopping.

1. Park the machine on a flat, rigid and safe ground.
2. Stop the engine.
3. Lower the safety lock lever to the unlocked position.
4. Turn the starter switch to the ON position.
5. Press the auxiliary hydraulic switches several times to release the residual pressure in the auxiliary hydraulic circuitry.

TAKEUCHI SECURITY SYSTEM


The Takeuchi Security System is a system that allows only registered starter keys to be used for starting the engine.
The engine cannot be started with any unregistered or counterfeit starter keys. If a registered starter key is lost or stolen, you can set the system to delete the registered key information, so that the lost or stolen key cannot be used to start the engine. Although machine theft cannot be completely prevented, the system certainly helps reduce the risk of theft.

STARTER KEY

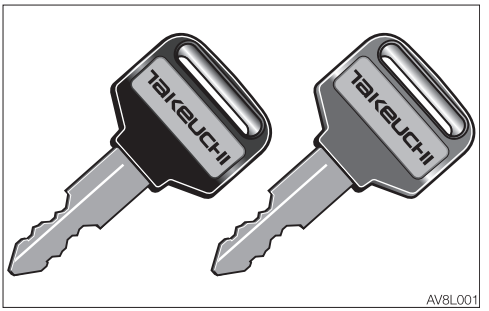


There are two types of starter key, red and black, which can be registered in the Takeuchi Security System.
The red key is the master key. The black key is the starting key.

STARTING THE ENGINE

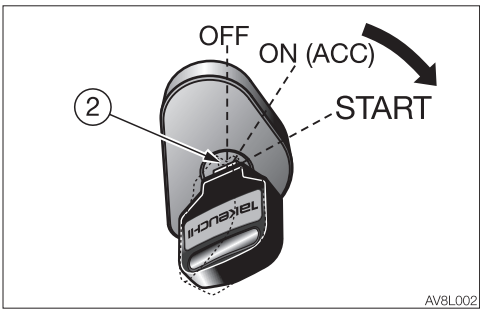

The engine can be started using the normal method with a registered BLACK key.
The engine cannot be started using the RED master key.
Refer to Chapter 3, “Starting and stopping the engine”.

If an attempt is made to start the engine with an unregistered key:

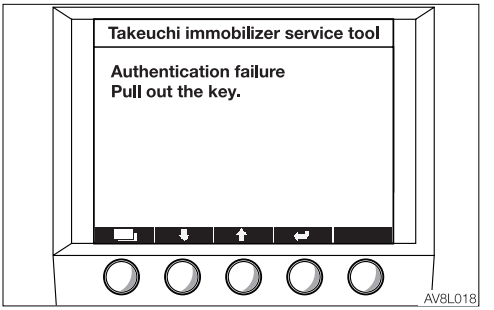

If an unregistered starter key is turned from the OFF to the ON (ACC) position, the message “Authentication failure” appears and the alarm starts sounding.
If this attempt is repeated five times in a row, the horn sounds for two minutes, and the engine cannot be started. The horn stops when the key is turned to the OFF position.


REGISTERING AND DELETING THE STARTER KEY

⚠ WARNING


- **Sit on the operator's seat.**
- **Raise the safety lock lever to the locked position.**
- **Clear all people from the machine and the area.**
- **Sound the horn to warn people around the machine.**

Registration may fail if the starter key is on a keyring or keychain; remove it before starting registration.
A malfunction could occur if multiple starter keys are brought near to the key cylinder. Be sure that no starter keys other than the correct key are near the key cylinder during registration.


Starter key registration procedure
For Steps 1 to 6 below, complete each step and proceed to the next one within five minutes. If no operation is performed for five minutes during this procedure, the system returns to the initial state.
From Step 7 onward, the system automatically ends the operation if no operation is performed for five minutes.

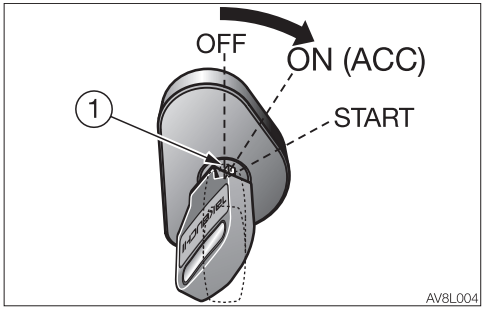


1. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position.

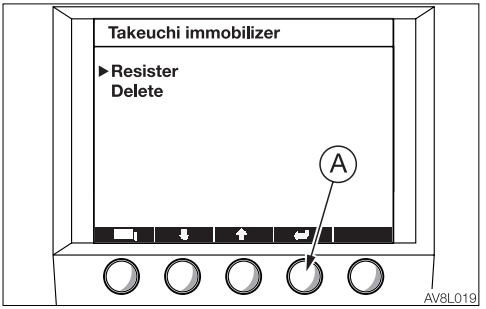


2. On the LCD, select “REGISTER” and press (A).

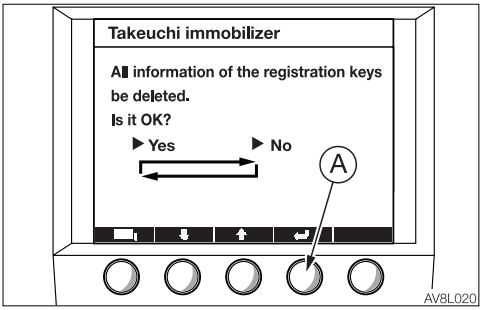



3. Select whether to delete all of the existing registration information.
   On the LCD, select “YES” and press (A): All registration information will be deleted; register a new key.
   On the LCD, select “NO” and press (A): A new starter key will be added to the existing registration information.

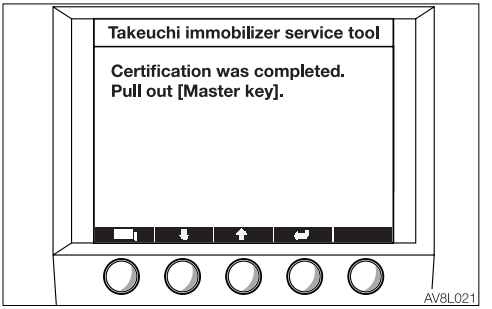

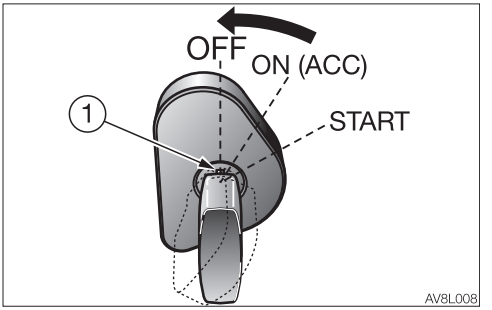


4. When the message “Certification was completed” appears on the LCD, turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   The number (3) in the lower left indicates the number of starter keys currently registered (only for canopy). Up to 13 starter keys can be registered.

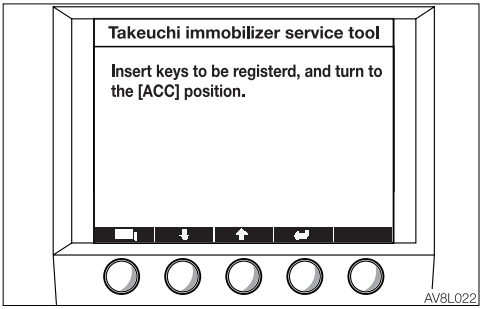


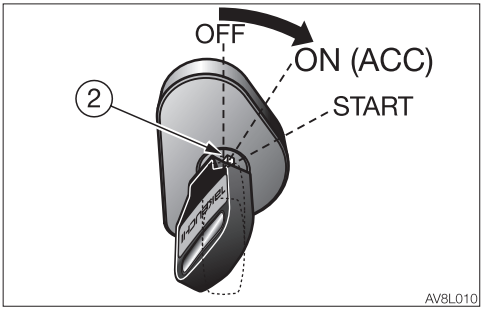


5. Insert the starter key (2) to be registered into the starter switch and turn the key from the OFF to the ON (ACC) position.

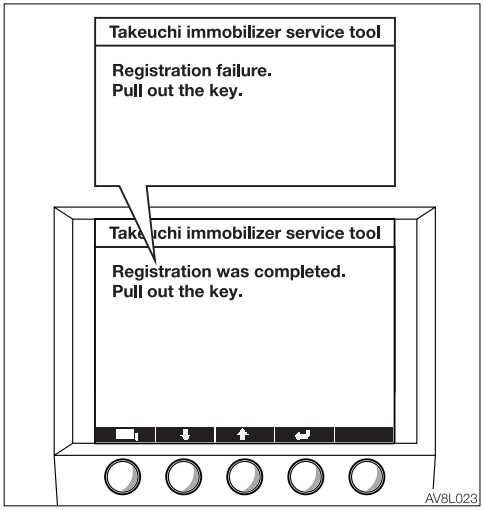


6. If the registration was successfully completed, the message “Registration was completed” appears. This means that the starter key (2) currently inserted has been registered.
   If the registration fails, the message “Registration failure” appears.

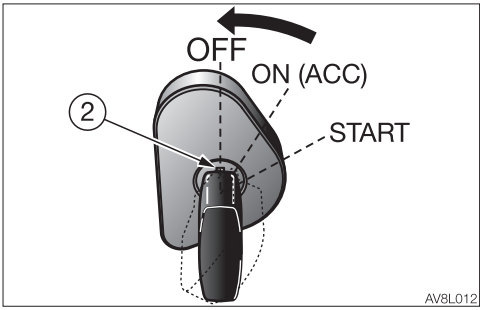


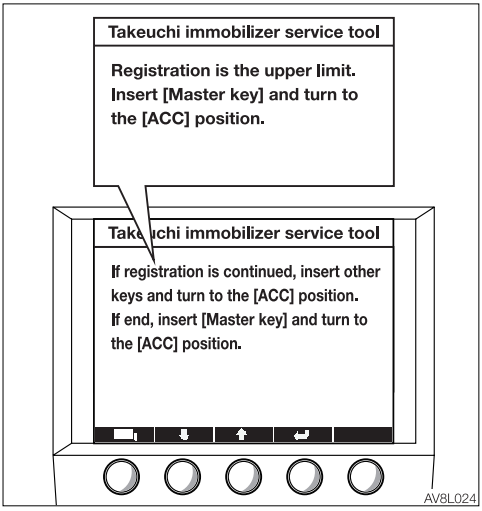

7. Turn the starter key (2) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   To continue registration, repeat the steps from Step 5.
   To end registration, proceed to Step 8.

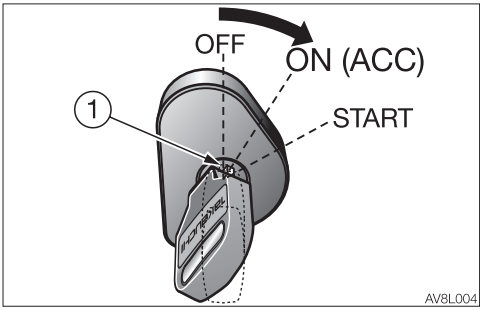


8. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position. Or, wait for five minutes or more.

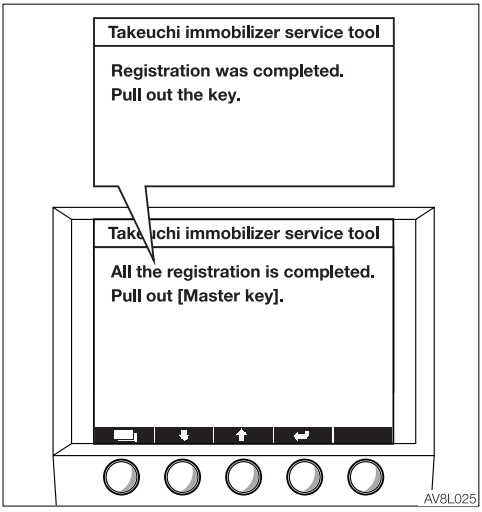


9. If any starter key has been registered, the message “All the registration is completed” appears. Turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch to complete the registration.
   If no starter key has been registered, the message “Registration failure” appears, and the registration information is returned to the initial state.


Deleting a registered starter key
The information of each registered starter key can be deleted to cancel its ability to start the engine.

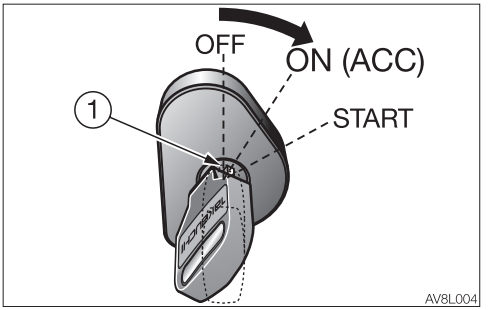


1. Insert the master key (1) into the starter switch and turn the key from the OFF to the ON (ACC) position.

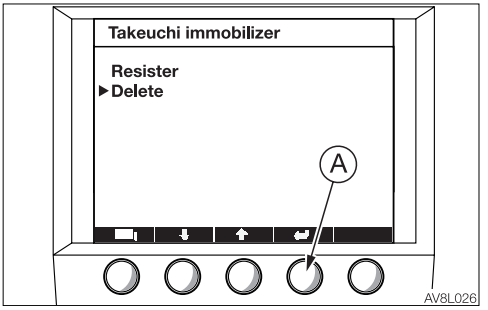


2. On the LCD, select “DELETE” and press (A).

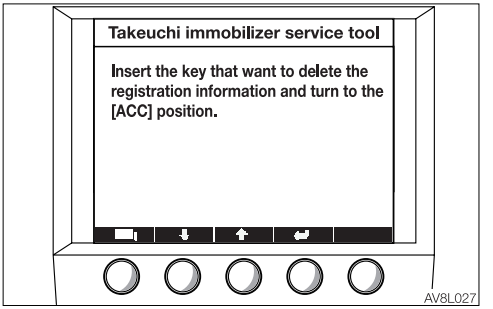


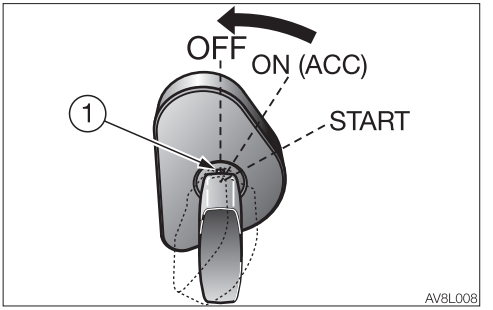


3. When the display shown as the illustration appears on the LCD, turn the master key (1) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
Note: If the registered key is lost and you want to delete all registration information, please refer to STEP 3 (A) on page 8-20.

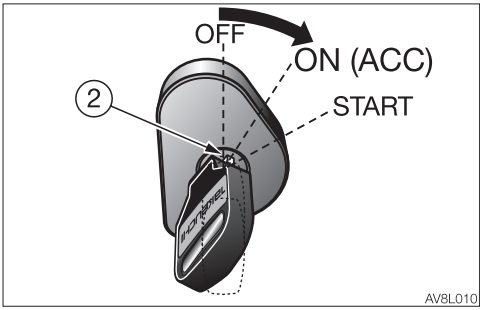

4. Insert the starter key (2) to be deleted into the starter switch and turn the key from the OFF to the ON (ACC) position.

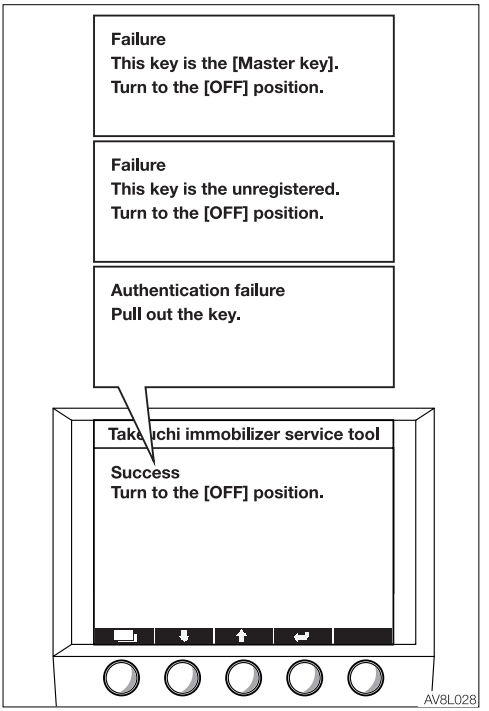

5. If the deletion is successful, the message “Success” appears. This means that the information registered for the starter key (2) currently inserted has been deleted. If the deletion fails, the message “Failure” or “Authentication failure” appears on the LCD. Remove the starter key, and then repeat the steps from Step 1 again.

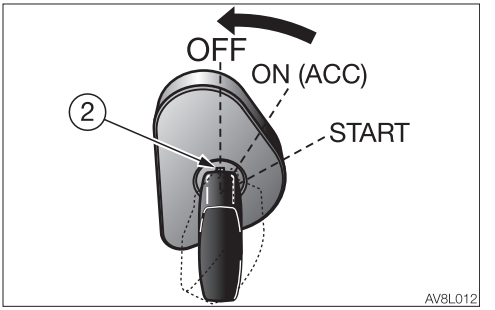

6. Turn the starter key (2) from the ON (ACC) to the OFF position, and then remove it from the starter switch.
   To continue deletion, repeat the steps from Step 1.

IF THE MASTER KEY IS LOST

If you lose your master key, contact your service or sales dealer for assistance.


COUNTRIES WHERE THE SYSTEM CAN BE USED

To use the Takeuchi Security System, “radio wave authentication” must be obtained in the country where the system is to be used. The system can be used in the countries listed below, as of January 2017. Do not use the system in other countries. For details on how to disable the system, please contact your service or sales dealer for assistance.

Countries where the system can be used:
Ireland, Italy, UK, Estonia, Austria, Holland, Cyprus, Greece, Croatia, Sweden, Spain, Slovakia, Slovenia, Czech, Denmark, Germany, Hungary, Finland, France, Bulgaria, Belgium, Poland, Portugal, Malta, Latvia, Lithuania, Rumania, Luxemburg, Iceland, Norway, Liechtenstein, Switzerland, Turkey


LED LIGHTS

The power consumption can be reduced by replacing the lights, such as the working light, with LED lights.
If the light fails to turn on after replacement, please contact your sales or service dealer for help.

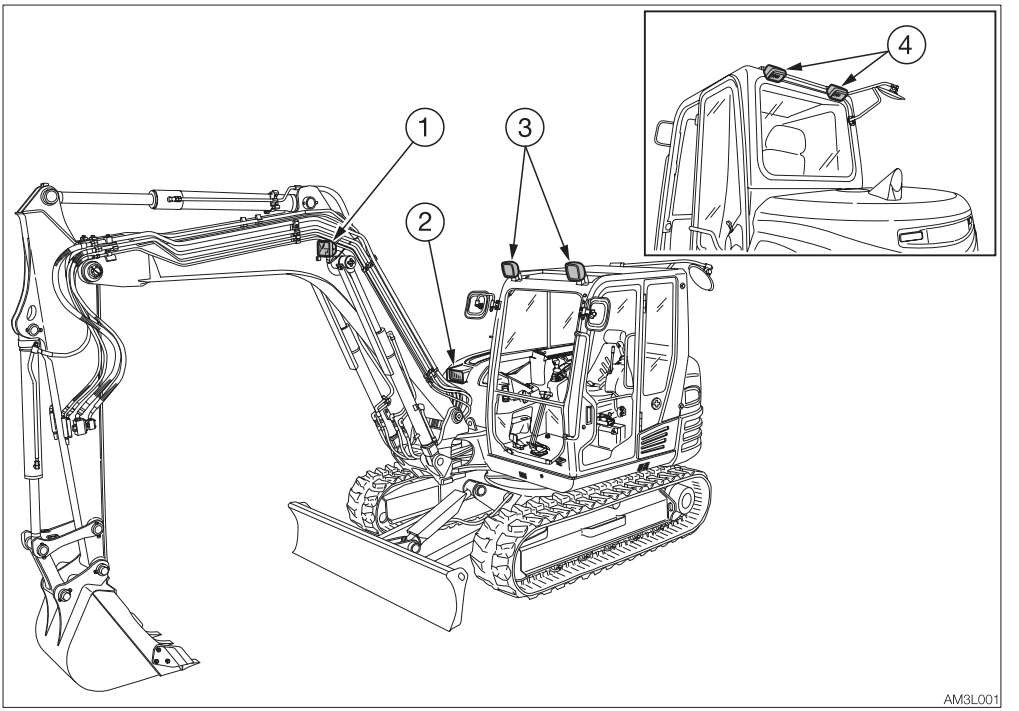

LED lights package 1
The LED lights are used for the boom light (1), working light (2) and front light (3).
Note: The rear light (4) is not included in the LED lights package 1.

LED lights package 2
The LED lights are used for the boom light (1), working light (2), front light (3) and rear light (4).
The light switch is also changed.

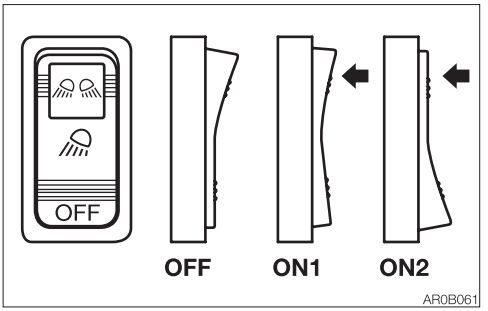

OFF ....Off
ON1 ...The boom light (1), working light (2), front light (3), side lights, tail lamps and the switch lamp are turned on.
ON2 ...The boom light (1), working light (2), front light (3), rear light (4), side lights, tail lamps and the switch lamp are turned on.

First Published October 2013
Seventeenth Published December 2018

OPERATOR'S MANUAL

TB290 Hydraulic excavator

Edited and issued by TAKEUCHI MFG. CO., LTD.

Printed in Japan by STATION M Co., Ltd.

ASAHI DENSO
6-2-1 Somejidai, Hamakita-ku, Hamamatsu, Shizuoka 434-0046, Japan

EU DECLARATION of CONFORMITY (DoC)

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Name: ASAHI DENSO CO.,LTD
Address: 6-2-1 Somejidai, Hamakita-ku, Hamamatsu, Shizuoka, 434-0046 Japan

We declare that the DoC is issued under our sole responsibility and belongs to the following product.

Object of the declaration:

Product Name Immobilizer
Model Name CZ156
Accessories N/A

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

Radio Equipment (RE) Directive (2014/53/EU)

The following harmonized standards and technical specifications have been applied:

Health & Safety (Article 3.1(a)): EN 60065: 2014

EMC (Article 3.1(b)): EN 301 489-1 V2.1.1
EN 301 489-3 V2.1.1 (Final draft)

Radio Spectrum (Article 3.2): EN 300 330 V2.1.1

Japan, Shizuoka	May 29, 2017	Tomohiro Yaguchi
Place of Issue:	Date of Issue:	Tomohiro Yaguchi Section chief Engineering Department

Declaration of Conformity

We herewith declare that following named machine, based on its conception and design and in the form brought into service is in accordance with the relevant, basic safety and health requirements of the following EU directives. In case of any alteration of the machine not coordinated with us, this certificate loses its validity.

Designation of the machine	Hydraulic Excavator
Manufacturer	TAKEUCHI MFG. CO., LTD 205 Uwadaira, Sakaki-machi, Hanishina-gun, Nagano 389-0605, Japan

Model	TB290 <S/N 185100001~>
Engine type	4TNV98CT-WTB
Engine power	51.6 kW @ 2000 rpm

The machine is in accordance with the requirements of EU directives:

1) Machine directive 2006/42/EC and appendix
2) Electromagnetic compatibility-regulation 2014/30/EU and appendix
3) Noise directive 2000/14/EC (Evaluation procedure according to appendix VI), 2005/88/EC and appendices.
4) Regulations on engine emissions: 2004/26/EC and appendices.

Harmonized norms: EN474-1:2006+A1:2009, EN474-5:2006+A2:2012.

Compiler of the technical files:
Hans Friedrich
Oliver Scharschmidt
Wilhelm Schäfer GmbH
68307 Mannheim-Sandhofen GERMANY

Issued in Sakaki, Japan
Akio Takeuchi, President

Declaration of Conformity

We herewith declare that following named machine, based on its conception and design and in the form brought into service is in accordance with the relevant, basic safety and health requirements of the following EU directives. In case of any alteration of the machine not coordinated with us, this certificate loses its validity.

Designation of the machine	Hydraulic Excavator
Manufacturer	TAKEUCHI MFG. CO., LTD 205 Uwadaira, Sakaki-machi, Hanishina-gun, Nagano 389-0605, Japan

Model	TB290 <S/N 190200001~>
Engine type	AP-4JJ1TASB-01
Engine power	52 kW @ 2000 rpm

The machine is in accordance with the requirements of EU directives:

1) Machine directive 2006/42/EC and appendix
2) Electromagnetic compatibility-regulation 2014/30/EU and appendix
3) Noise directive 2000/14/EC (Evaluation procedure according to appendix VI), 2005/88/EC and appendices.
4) Regulations on engine emissions: 2004/26/EC and appendices.

Harmonized norms: EN474-1:2006+A1:2009, EN474-5:2006+A2:2012.

Compiler of the technical files:
Hans Friedrich
Oliver Scharschmidt
Wilhelm Schäfer GmbH
68307 Mannheim-Sandhofen GERMANY

Issued in Sakaki, Japan
Akio Takeuchi, President

 **WARNING:** Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.



WARNING:

Cancer and Reproductive Harm –
www.P65Warnings.ca.gov